


Crosley CW20M9N 02 - CONTROL PANEL (ORIG. REV. A)

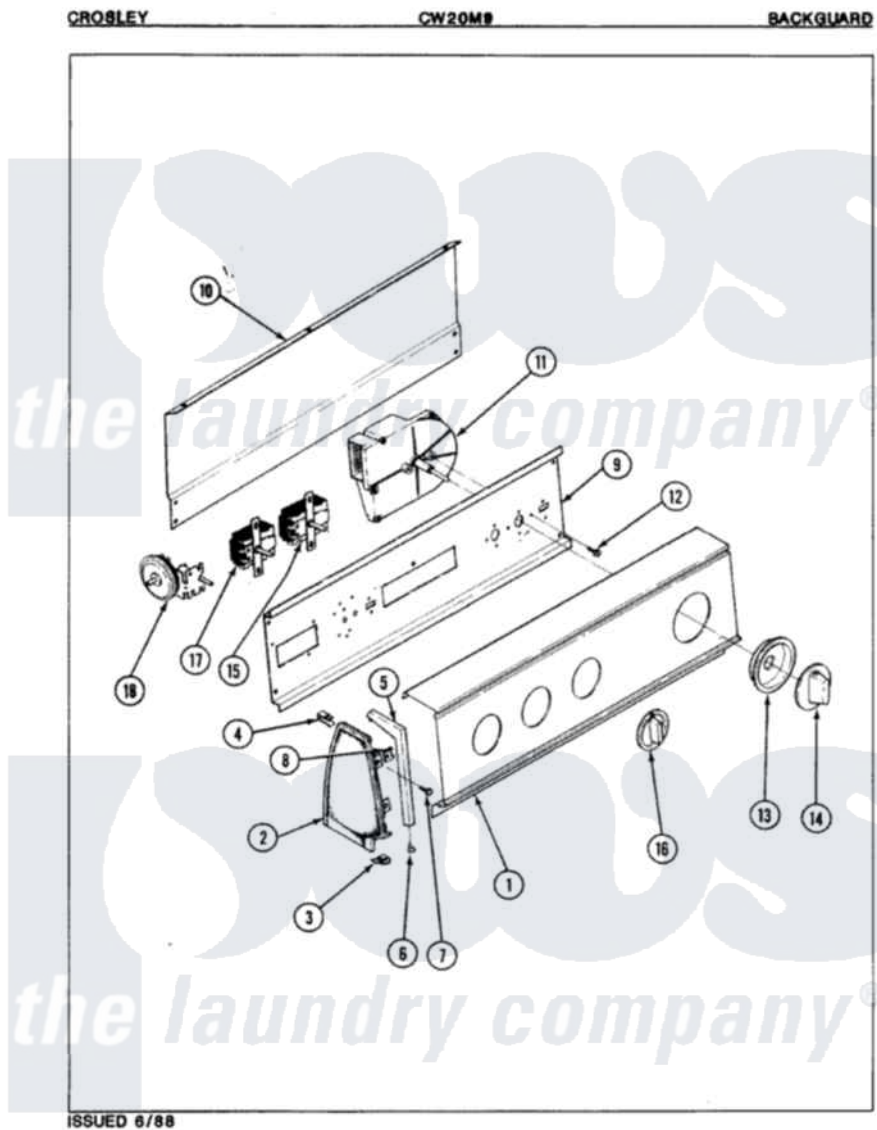

Crosley [Residential Crosley CW20M9N Washer Parts](#) Parts Diagram 02 - CONTROL PANEL (ORIG. REV. A)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	35-0927		Not Available	CONTROL PANEL
"	25-7793			Screw
2	53-0265			LH Endcap
"	53-0264			RH Endcap
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7691		Not Available	SCREW, END CAP TO TOP
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	25-7702		Speedclip, End Cap To Control Panel
9	53-0365	53-1676	Shield, Control
10	25-7853	25-7933	Ring, Retaining
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
"	53-0268	21001460	Shield, Rear
11	35-0116		Timer Motor 3/5 RPM
"	35-0728		Timer
12	25-0205	216412	Screw, Bracket To Timer
13	35-0172	12500057	Knob Ski
14	35-0496	12500057	Knob Ski
15	35-0114	Not Available	TEMP SWITCH
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	35-0167	21001283	Knob, Selector---Piq
17	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0162	Not Available	ROTARY SWITCH
18	35-0782		Pressure Switch
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping

