


Crosley CW20P4W 02 - CONTROL PANEL (ORIG. REV. A-D)

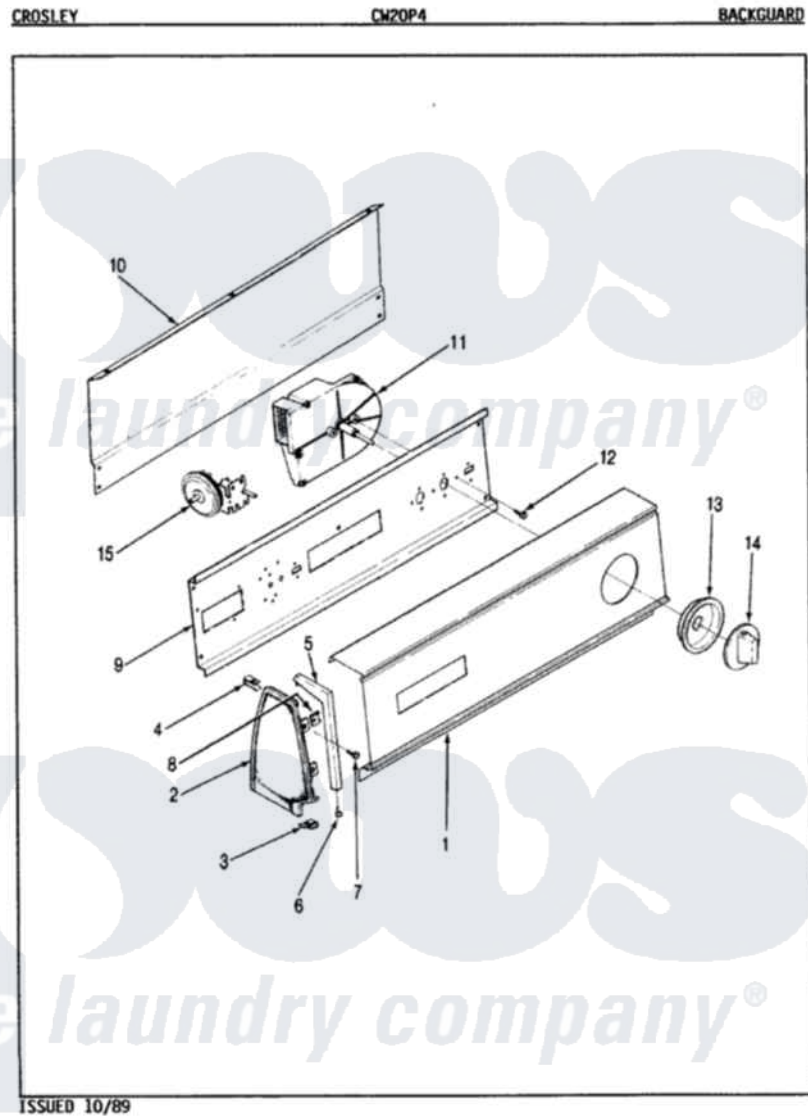

ISSUED 10/89

Crosley Residential Crosley CW20P4W Washer Parts Parts Diagram 02 - CONTROL PANEL (ORIG. REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2183		Not Available	CONTROL PANEL
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7649	910187		Screw
"	25-7649	910187		Screw
2	35-2488	21001452		Cap- End
"	35-2487	21001451		Cap- End
"	53-0264			RH Endcap
"	53-0265			LH Endcap
3	25-7851			Speedclip, End Cap To Top
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7435	33002917		Screw, No.10-16
"				Speedclip, End Cap To End

"	25-7852		Speedclip, Rr Shld To End Cap
"	25-7852		Speedclip, Rr Shld To End Cap
5	53-0278	Not Available	TRIM, END CAP (LT)
"	53-0277	Not Available	TRIM, END CAP (RT)
6	25-7760		Screw
"	25-7760		Screw
7	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702		Speedclip, End Cap To Control Panel
"	25-7702		Speedclip, End Cap To Control Panel
9	53-1676		Shield, Control
"	53-0365	53-1676	Shield, Control
10	35-2688	21001460	Shield, Rear
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0268	21001460	Shield, Rear
"	25-7853	25-7933	Ring, Retaining
"	25-3457		Screw, Sems
11	35-2209	35-2752	Timer
12	25-0205	216412	Screw, Bracket To Timer
13	35-0180	12500058	Knob Ski
14	35-0498	12500058	Knob Ski
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2251	Not Available	PRESSURE SWITCH
NI	35-2277	Not Available	MANUAL, U&C INSERT

the laundry company[®]

the laundry company[®]