


Crosley CW20P4W 05 - TUB (ORIG. REV. A-D)

SECTION: TUB
MODEL: CW20P4

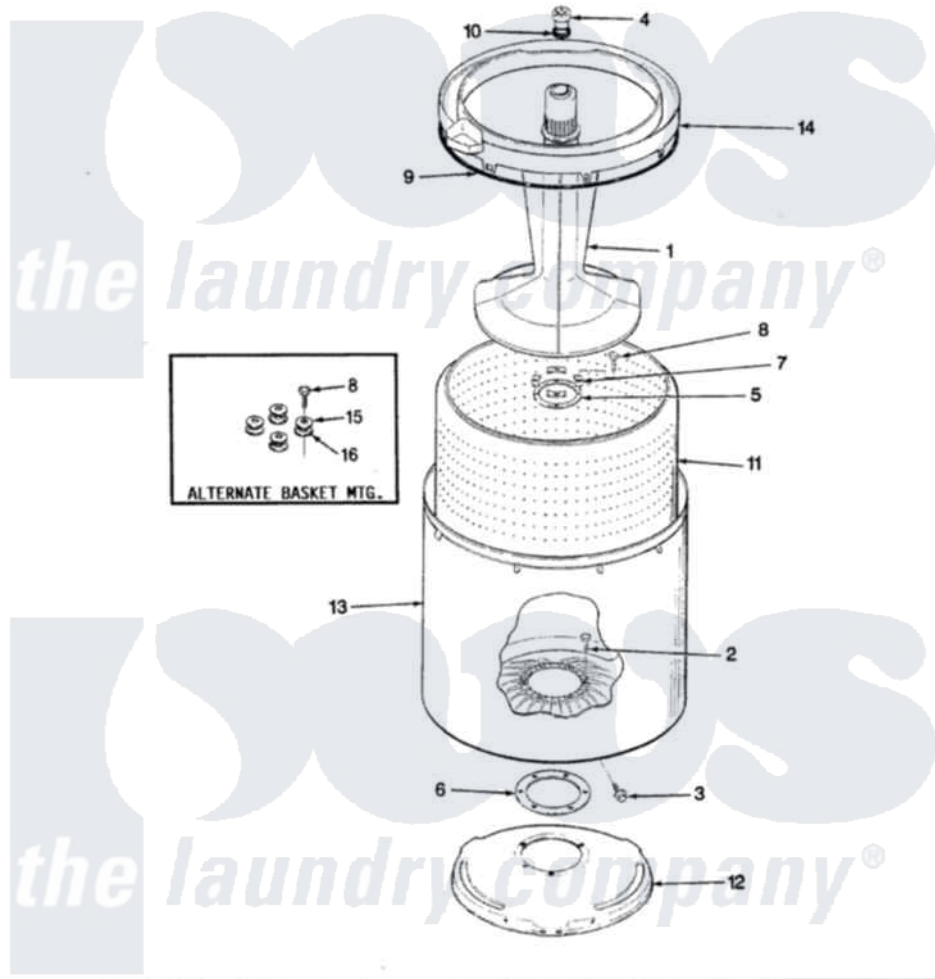

Issue Date: 6/90

Crosley Residential Crosley CW20P4W Washer Parts Parts Diagram 05 - TUB (ORIG. REV. A-D)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2456	33-4352		Agitator
2	35-2062	21001063		Screw, Shoulder
3	25-7914	22002933		Screw
4	33-6241			Cap
5	35-2060			Seal, Tub To Housing
6	35-2061			Gasket, Tub To Housing
7	35-8799		Not Available	REINFORCEMENT PLATE
8	25-7783	4356852		Screw
9	35-2328			Seal, Tub Top
10	25-7330			Rubber Washer
11	35-2381		Not Available	BASKET ASSY-WHITE
12	35-2529		Not Available	TUB SUPPORT
"	35-2023			Tub Support
13	35-2038			Tub
14	35-2262		Not Available	SHIELD, TUB TOP
"	35-2034		Not Available	TOP, TUB

15 W10124350

Not Available

NOT REQUIRED PART OR
SEE NOTE

16 25-7921

Not Available

STEEL WASHER

NI [25-7922](#)

Cork Washer

