


# Crosley CW20P5A 12 - TUB (ORIG. REV. A-D)

SECTION: TUB  
MODEL: CW20P5

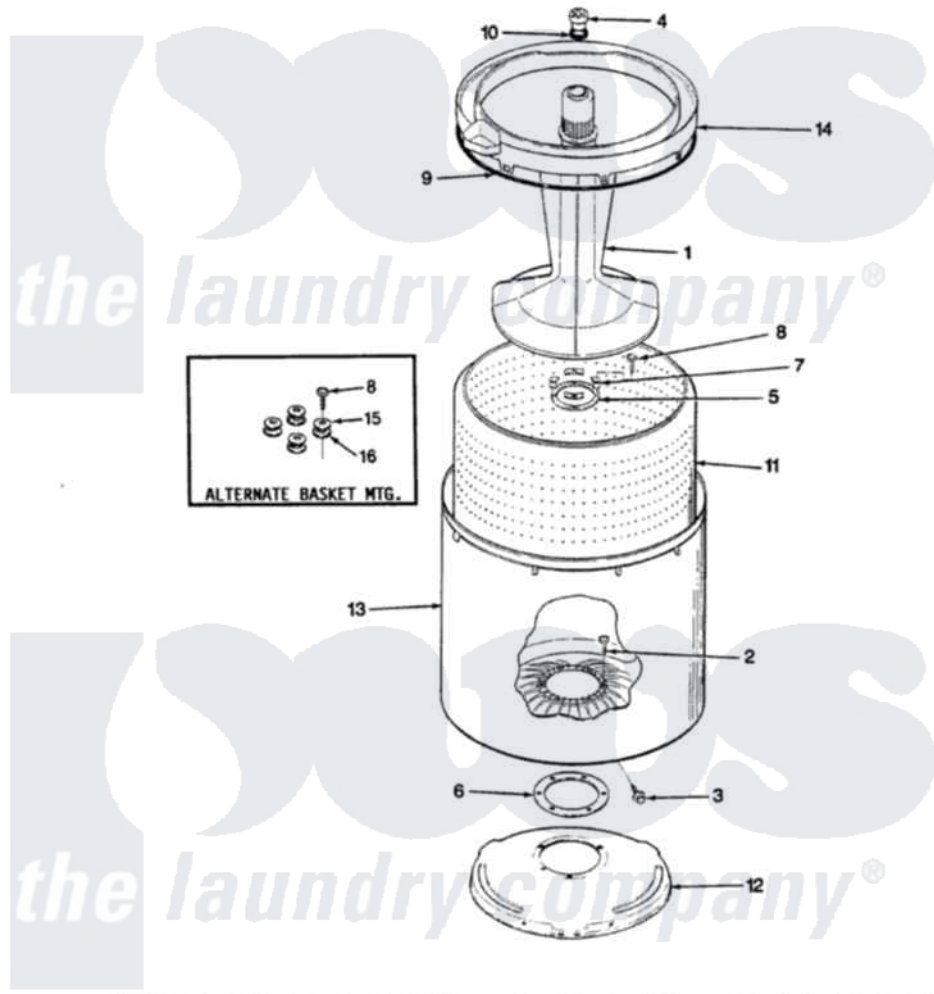

Issue Date: 8/90

Crosley [Residential Crosley CW20P5A Washer Parts](#) Parts Diagram 12 - TUB (ORIG. REV. A-D)  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2456	<a href="#">33-4352</a>		Agitator
2	35-2062	<a href="#">21001063</a>		Screw, Shoulder
3	25-7914	<a href="#">22002933</a>		Screw
4	<a href="#">33-6241</a>			Cap
5	<a href="#">35-2060</a>			Seal, Tub To Housing
6	<a href="#">35-2061</a>			Gasket, Tub To Housing
7	35-8799		Not Available	REINFORCEMENT PLATE
8	25-7783	<a href="#">4356852</a>		Screw
9	<a href="#">35-2328</a>			Seal, Tub Top
10	<a href="#">25-7330</a>			Rubber Washer
11	35-2381		Not Available	BASKET ASSY-WHITE
12	35-2529		Not Available	TUB SUPPORT
13	<a href="#">35-2038</a>			Tub
14	35-2262		Not Available	SHIELD, TUB TOP
"	35-2034		Not Available	TOP, TUB
15	25-7921		Not Available	STEEL WASHER

