


Crosley CW20P5H 03 - EXTERIOR (REV. F-K)

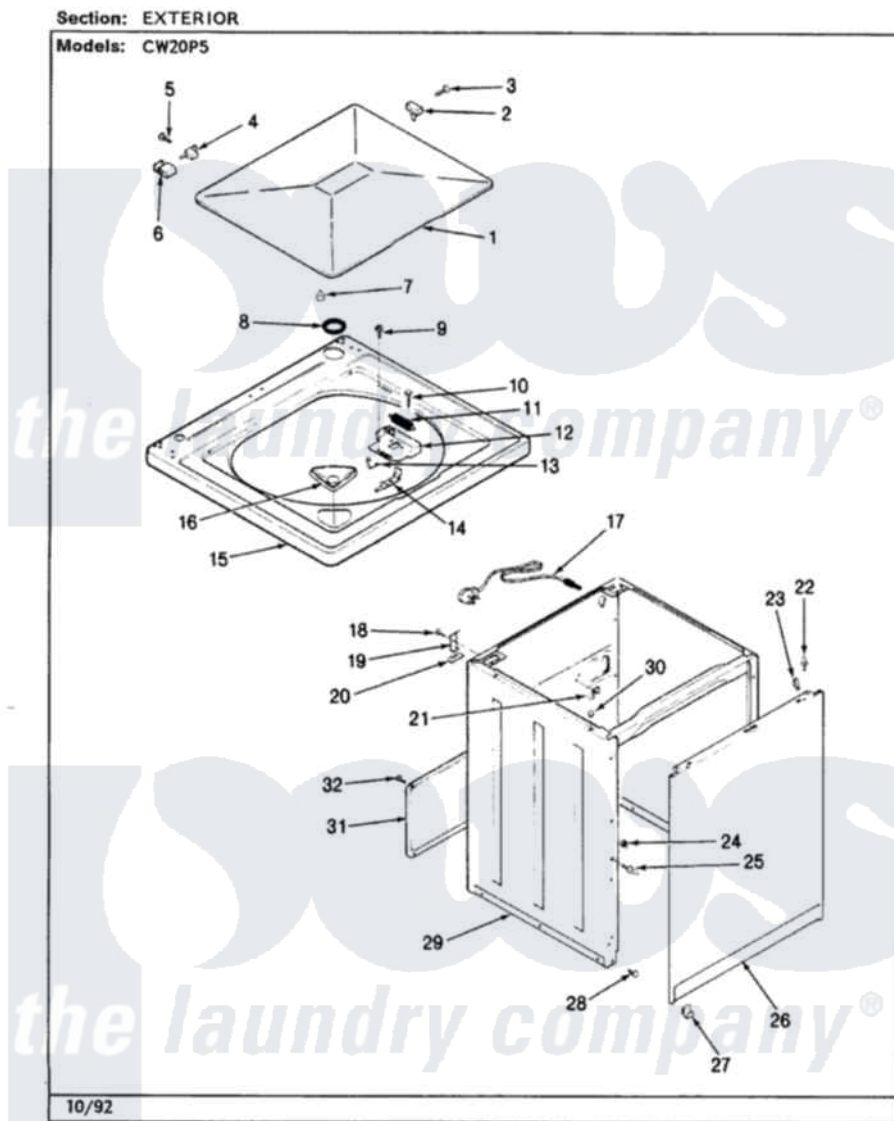

Crosley Residential Crosley CW20P5H Washer Parts Parts Diagram 03 - EXTERIOR (REV. F-K)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2555	35-2026		Lid
"	35-2555-25		Not Available	LID (HARV.WT)
"	35-2555-24		Not Available	LID (ALM)
2	25-7436			Nylite Washer
"	43-0057			Actuator, Door Switch
3	25-7438			Screw
4	35-2045			Pin, Hinge
"	25-7086	Y0308025		Washer, Stainless Steel
5	25-7893			Screw
6	35-2044			Hinge, Lid
7	35-0581			Bumper, Door
8	35-2064			Bushing, Insulating
"	35-2063			Bushing, Insulator
9	25-7463	7101P012-60		Screw
10	25-7437	40040701		Screw, Tapping No.6b-20
11	35-2814	12001187		Kit, Lid Switch Assembly

12	35-2795	12001187	Kit, Lid Switch Assembly
13	25-7878		Clip
14	35-2805	12001187	Kit, Lid Switch Assembly
15	35-2739-24		Not Available
	35-2739		TOP, CABINET (ALM)
"	35-2739		Top, Cabinet
"	35-2739-25		Not Available
	35-2739		TOP, CABINET (HARV.WT)
16	33-9906	21001167	Dispenser, Bleach
17	35-0680		Not Available
	35-0680		CORD, POWER
18	25-7893		Screw
19	33-7450	35-2846	Hinge, Cabinet Top
20	33-0930		Pad, Top Hinge
21	25-7796	596669	Clamp, Manifold
22	53-0643		Pin, Locator
23	25-7220		Clip, Cabinet Top
24	25-0224	3400029	Nut, Adapter Plate
25	53-0643		Pin, Locator
26	35-2084		Panel, Front
"	35-2084-24		Panel, Front
"	35-2084-25		Not Available
	35-2084		PANEL, FRONT
27	53-0120		Clip, Front Panel
28	33-2653		Bumper, Cabinet
29	35-2106-25		Not Available
	35-2106		CABINET ASSY. (HW)
"	35-2106-24	12001802	Kit, Cabinet/Rear Shield
"	35-2106	21001871	Cabinet
30	33-2653		Bumper, Cabinet
31	35-2108	21001871	Cabinet
32	25-7733	681414	Screw, 10AB X 1/2

the laundry company[®]

the laundry company[®]