


Crosley CW20P6W 12 - TUB (ORIG. REV. A-D)

SECTION: TUB
MODEL: CW20P6

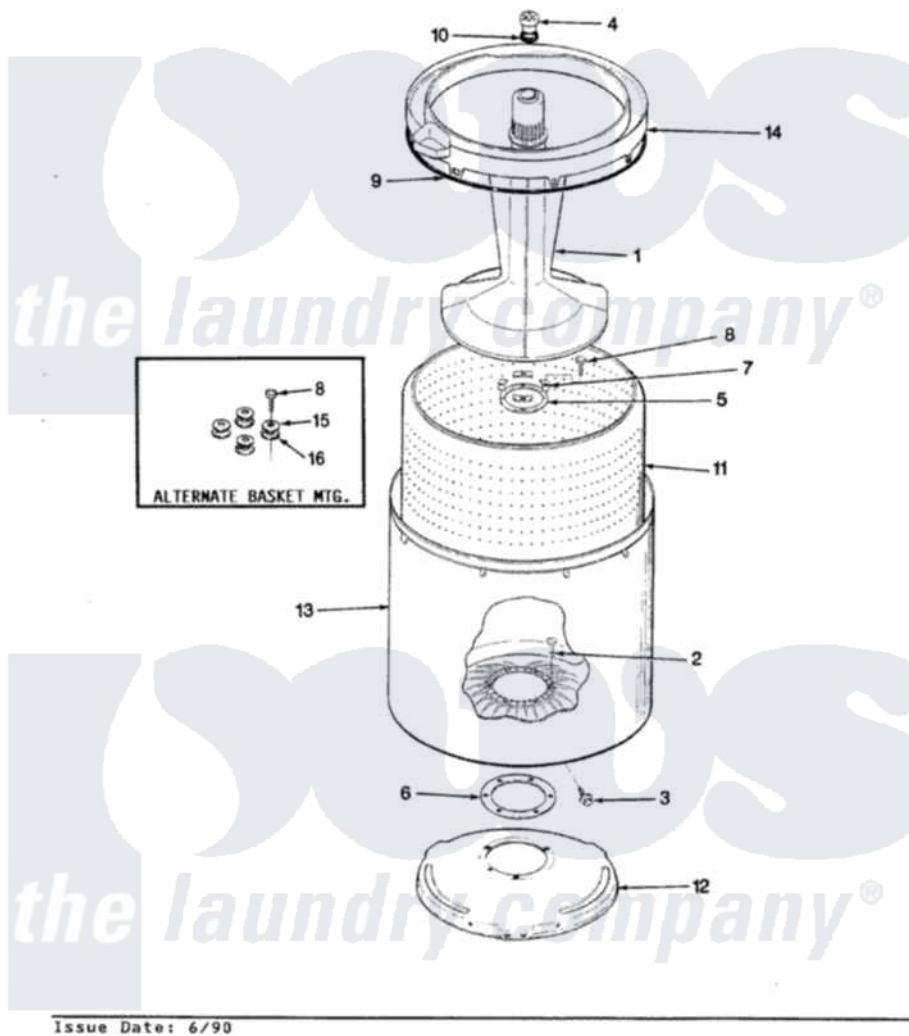

Crosley Residential Crosley CW20P6W Washer Parts Parts Diagram 12 - TUB (ORIG. REV. A-D)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2371	33-4352		Agitator
2	35-2062	21001063		Screw, Shoulder
3	25-7914	22002933		Screw
4	33-6241			Cap
5	33-8959			Gasket
6	35-2061			Gasket, Tub To Housing
7	33-8799		Not Available	REINF PLATE
8	25-7783	4356852		Screw
9	35-2328			Seal, Tub Top
10	25-7330			Rubber Washer
11	35-2381		Not Available	BASKET ASSY-WHITE
12	35-2023			Tub Support
"	35-2529		Not Available	TUB SUPPORT
13	35-2038			Tub
14	35-2262		Not Available	SHIELD, TUB TOP
"	35-2034		Not Available	TOP, TUB

