


Crosley CW20P8D 02 - CABINET (CW20P8D)

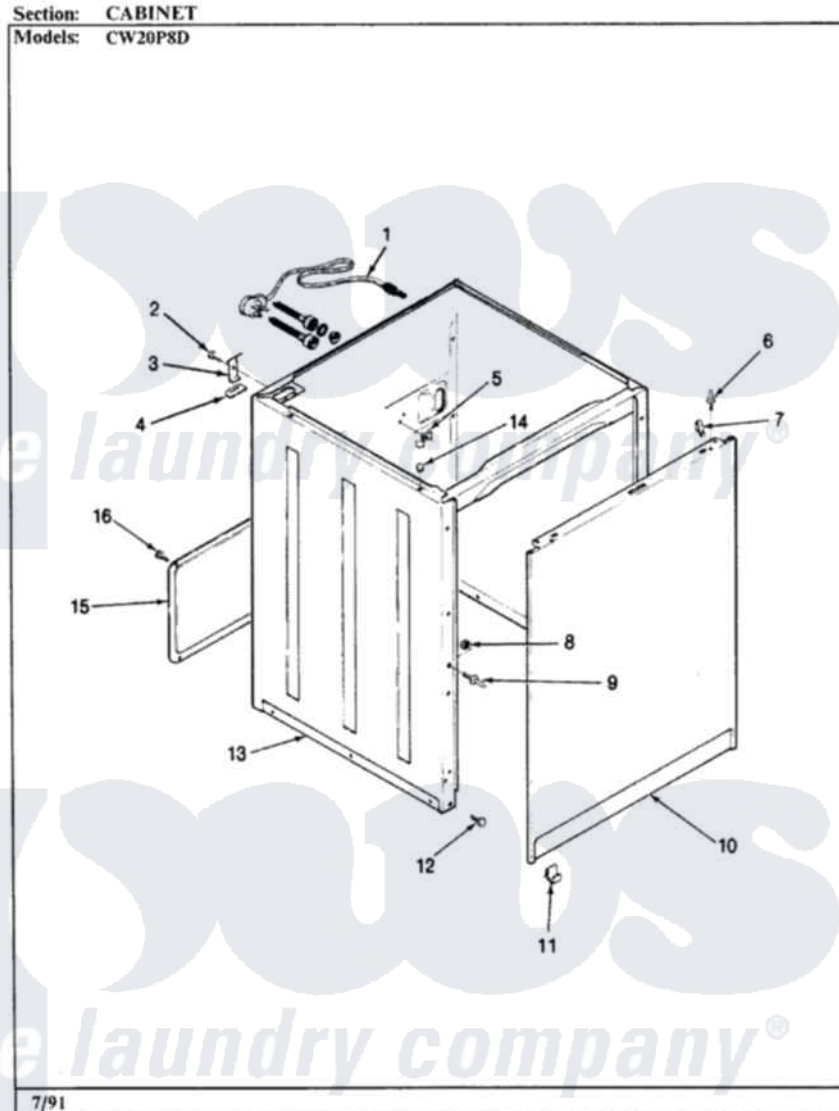

Crosley Residential Crosley CW20P8D Washer Parts Parts Diagram 02 - CABINET (CW20P8D)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
2	25-7893			Screw
3	33-7450	35-2846		Hinge, Cabinet Top
4	33-0930			Pad, Top Hinge
5	33-6099			Clamp
6	53-0643			Pin, Locator
7	34-9701			Guide, Cabinet
8	25-0224	3400029		Nut, Adapter Plate
9	53-0643			Pin, Locator
10	35-2084			Panel, Front
11	53-0120			Clip, Front Panel
12	33-2653			Bumper, Cabinet
13	35-2106	21001871		Cabinet
14	33-2653			Bumper, Cabinet
15	35-2108	21001871		Cabinet
16	25-7733	681414		Screw, 10AB X 1/2