


# Crosley CW20P8D 04 - CONTROL PANEL (CW20P8D)

Section: CONTROL PANEL

Models: CW20P8D

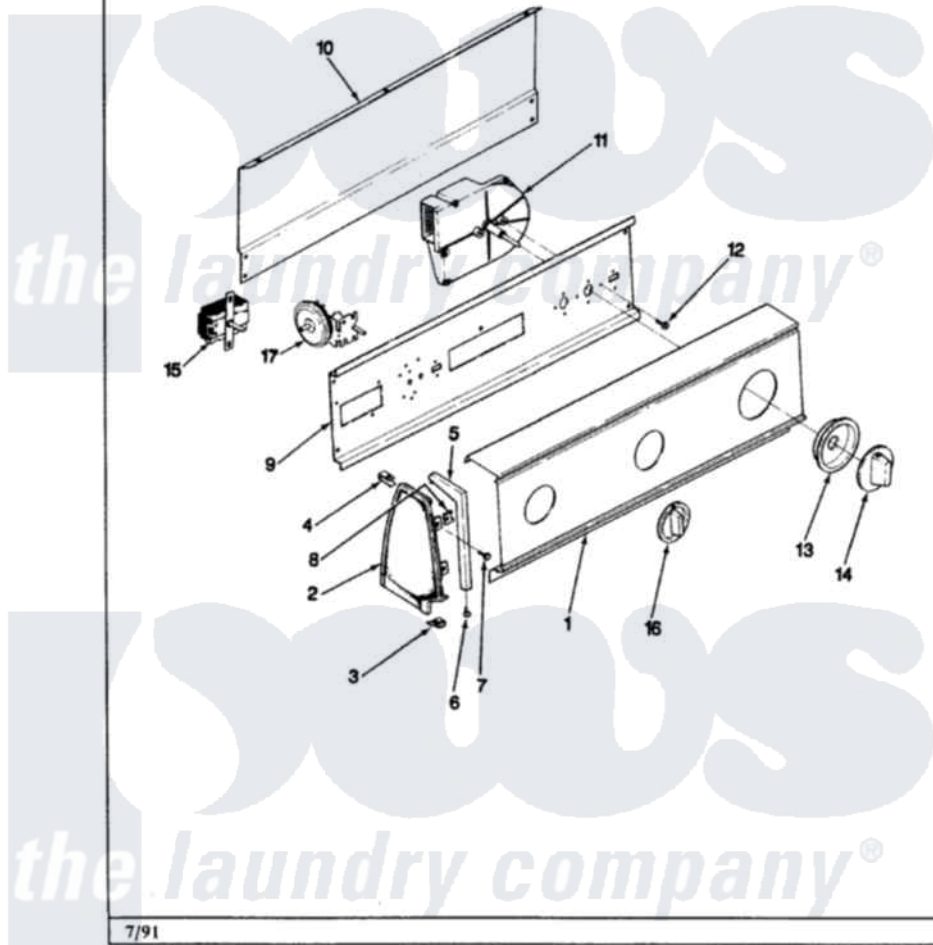

Crosley Residential Crosley CW20P8D Washer Parts Parts Diagram 04 - CONTROL PANEL (CW20P8D)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	<a href="#">25-7793</a>			Screw
"	35-2989		Not Available	CONTROL PANEL
2	35-2487	<a href="#">21001451</a>		Cap- End
"	35-2488	<a href="#">21001452</a>		Cap- End
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	<a href="#">25-7760</a>			Screw
7	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
8	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel

9	<a href="#">53-1676</a>		Shield, Control
10	35-2688	<a href="#">21001460</a>	Shield, Rear
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">25-3457</a>		Screw, Sems
11	<a href="#">35-2845</a>		Timer
12	25-0088	<a href="#">489483</a>	Screw 10-32 X 1/2
13	35-0180	<a href="#">12500058</a>	Knob Ski
14	35-0498	<a href="#">12500058</a>	Knob Ski
15	35-2838	<a href="#">35-2839</a>	Switch
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
16	35-0145	<a href="#">21001283</a>	Knob, Selector---Piq
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
17	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2801	<a href="#">21001554</a>	Switch, Water Level
"	35-2619	Not Available	SWITCH 4POS SPEED
NI	35-2990-1	Not Available	MANUAL, USE & CARE

