


Crosley CW20P8HSC 02 - CABINET (ORIG-CW20P8xSC)

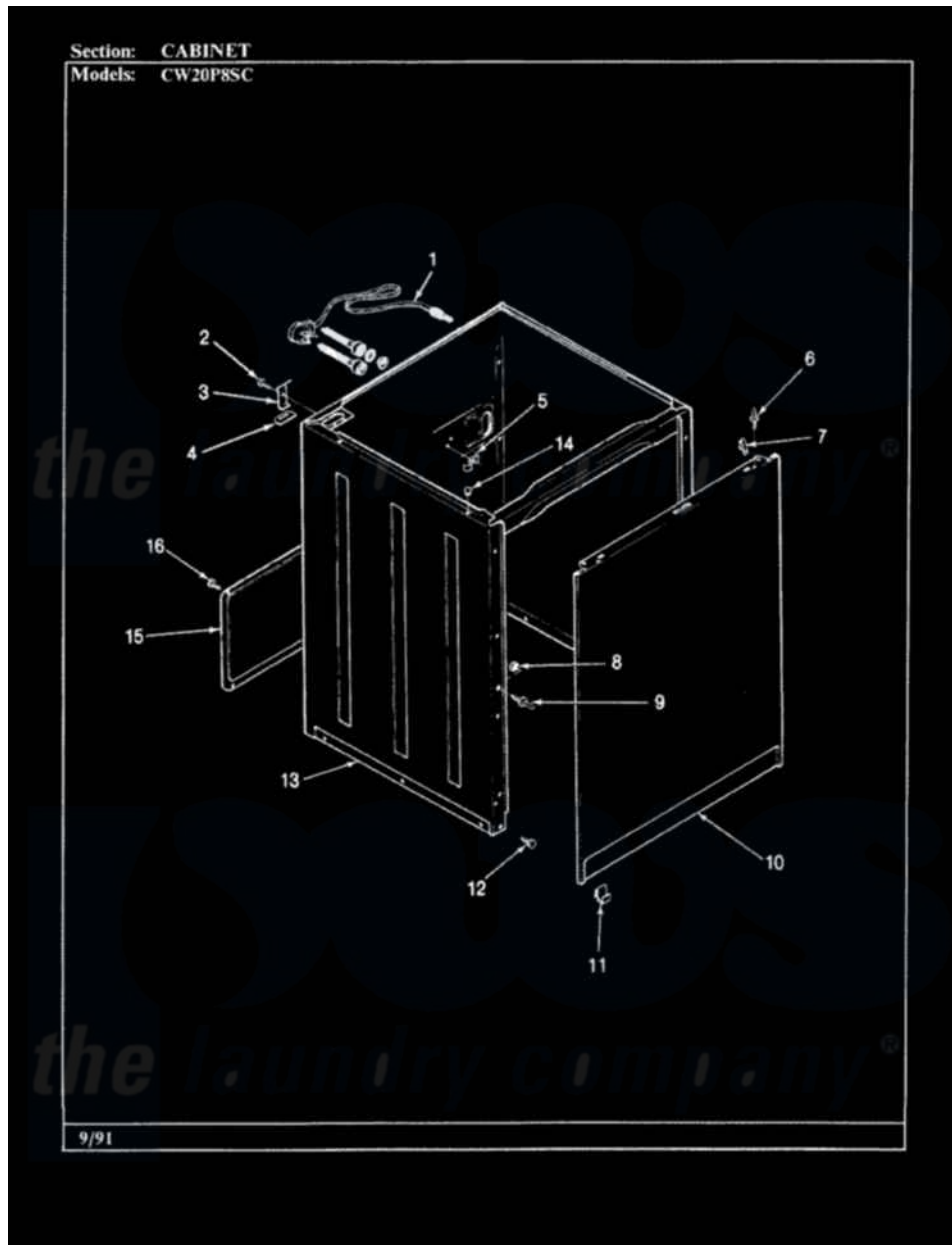

Crosley [Residential Crosley CW20P8HSC Washer Parts](#) Parts Diagram 02 - CABINET (ORIG-CW20P8xSC)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0680		Not Available	CORD, POWER
2	25-7893			Screw
3	33-7450	35-2846		Hinge, Cabinet Top
4	33-0930			Pad, Top Hinge
5	33-6099			Clamp
6	53-0643			Pin, Locator
7	25-6109			Screw
"	34-9701			Guide, Cabinet
8	25-0224	3400029		Nut, Adapter Plate
9	53-0643			Pin, Locator
10	35-2084-25		Not Available	PANEL, FRONT
11	53-0120			Clip, Front Panel
12	33-2653			Bumper, Cabinet
13	35-2106-25		Not Available	CABINET ASSY. (HW)
14	33-2653			Bumper, Cabinet
15	35-2108	21001871		Cabinet

