


Crosley CW20P8W 06 - EXTERIOR (ORIG. REV. E-J)

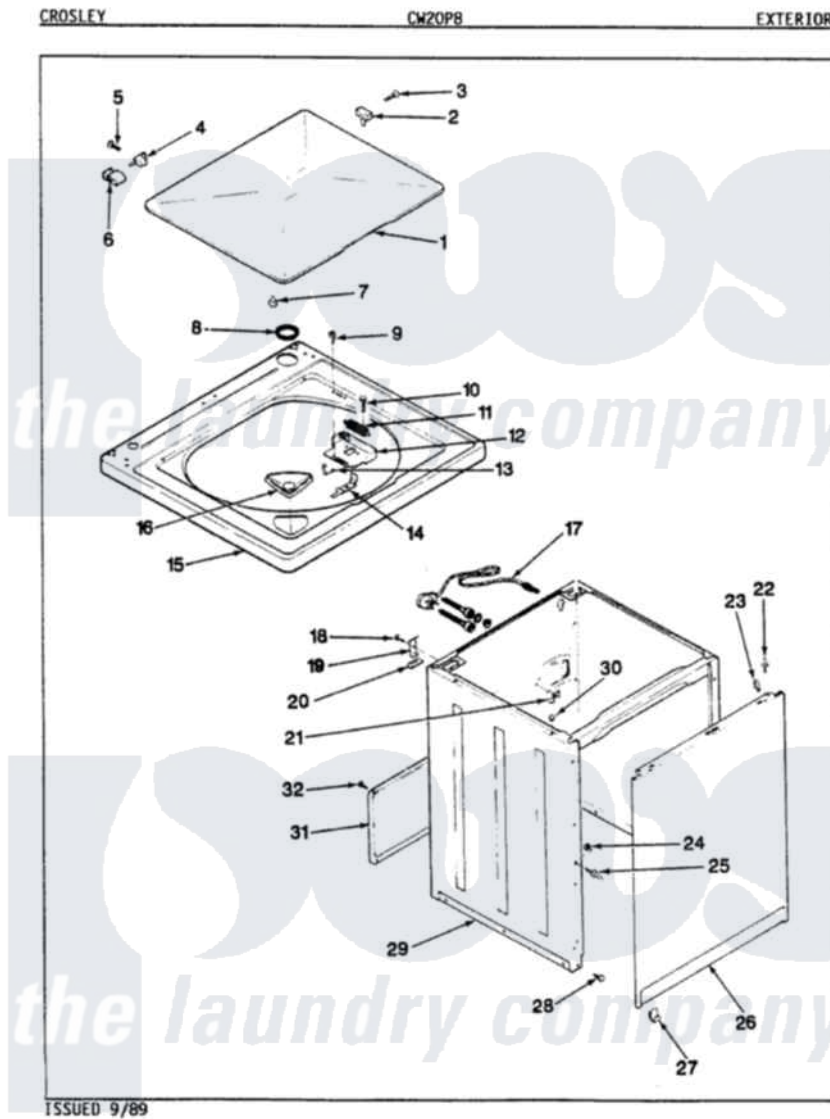

Crosley Residential Crosley CW20P8W Washer Parts Parts Diagram 06 - EXTERIOR (ORIG. REV. E-J)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2342	35-2026		Lid
2	25-7436			Nylite Washer
"	43-0057			Actuator, Door Switch
3	25-7438			Screw
4	25-7086	Y0308025		Washer, Stainless Steel
"	35-2045			Pin, Hinge
5	25-7893			Screw
6	35-2044			Hinge, Lid
7	35-0581			Bumper, Door
8	35-2064			Bushing, Insulating
"	35-2063			Bushing, Insulator
9	25-7463	7101P012-60		Screw
10	25-7437	40040701		Screw, Tapping No.6b-20
11	33-9064	12001187		Kit, Lid Switch Assembly
"	33-8911	12001187		Kit, Lid Switch Assembly
12	33-8289	12001187		Kit, Lid Switch Assembly

13	25-7878		Clip
14	33-9063	12001187	Kit, Lid Switch Assembly
15	35-2739		Top, Cabinet
16	33-9906	21001167	Dispenser, Bleach
17	35-0680		Not Available
18	25-7893		CORD, POWER
19	33-7450	35-2846	Screw
20	33-0930		Hinge, Cabinet Top
21	33-6099		Pad, Top Hinge
22	53-0643		Clamp
23	34-9701		Pin, Locator
24	25-0224	3400029	Guide, Cabinet
25	53-0643		Nut, Adapter Plate
26	35-2084		Pin, Locator
27	53-0120		Panel, Front
28	33-2653		Clip, Front Panel
29	35-2106	21001871	Bumper, Cabinet
30	33-2653		Cabinet
31	35-2108	21001871	Bumper, Cabinet
32	25-7733	681414	Cabinet
			Screw, 10AB X 1/2

