


Crosley CW20T6W 02 - CONTROL PANEL

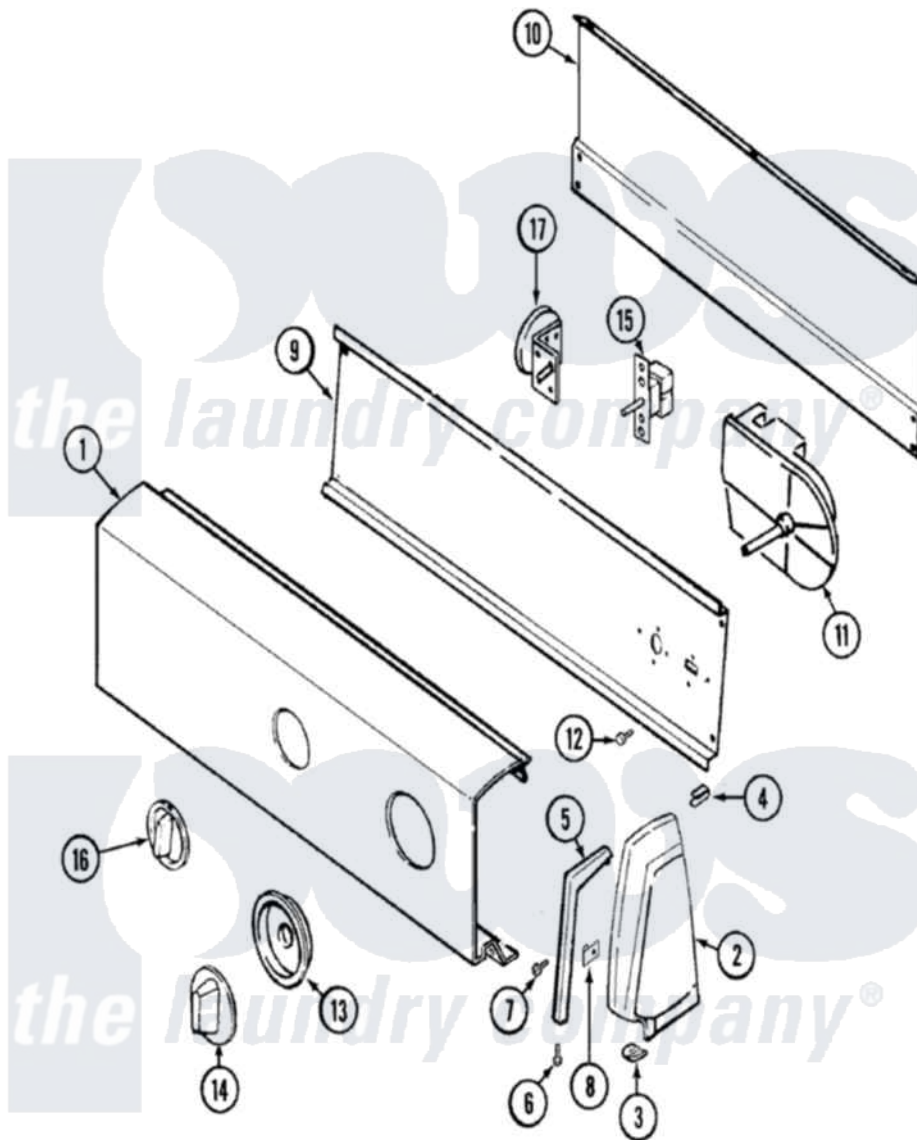

Crosley [Residential Crosley CW20T6W Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
"	35-3929		Not Available	PANEL, CONTROL
2	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702			Speedclip, End Cap To Control Panel

9	31001128		Not Available	SHIELD, CONTROL
"	31001146	31001193		Pad, Shield
"	53-2504	31001193		Pad, Shield
"	53-1676			Shield, Control
10	25-3457			Screw, Sems
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7853	25-7933		Ring, Retaining
"	35-2688	21001460		Shield, Rear
11	35-3840			Timer
12	31001029	3400094		Screw, 10-32 X 3/8
13	35-4197	12500058		Knob Ski
14	35-4195	12500058		Knob Ski
15	35-0124		Not Available	SWITCH, WATER TEMPERATURE
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001139			Switch, Water Temp. 3 Position
16	35-3974	22001267		Knob, Selector Switch
17	35-3691	21001554		Switch, Water Level
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
NI	35-3945		Not Available	MANUAL, USE & CARE
"	21001033		Not Available	MANUAL, USE & CARE
"	16002080		Not Available	GUIDE, QUICK REF - CROSLEY

