


Crosley CW20T6W 04 - TOP ASSEMBLY

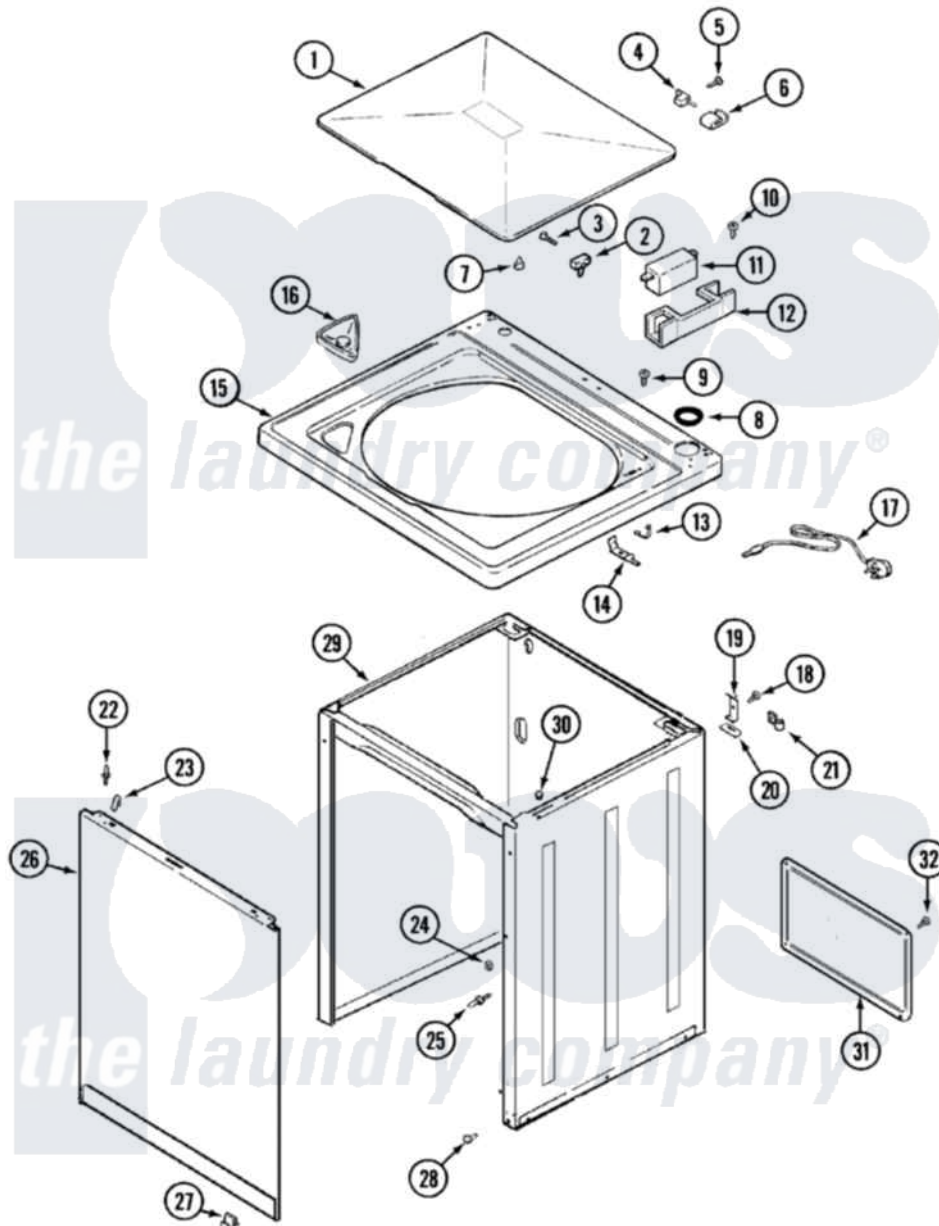

Crosley [Residential Crosley CW20T6W Washer Parts](#) Parts Diagram 04 - TOP ASSEMBLY
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2026			Lid
2	25-7436			Nylite Washer
"	43-0057			Actuator, Door Switch
3	25-7438			Screw
4	35-2045			Pin, Hinge
5	25-7893			Screw
6	35-2044			Hinge, Lid
7	35-0581			Bumper, Door
8	35-2063			Bushing, Insulator
9	25-7463	7101P012-60		Screw
10	25-7437	40040701		Screw, Tapping No.6b-20
"	21001136	3400872		Screw, 8-18 X 3/8
11	21001137	12001187		Kit, Lid Switch Assembly
"	35-2904		Not Available	PAD, LID SWITCH
"	21001148	12001187		Kit, Lid Switch Assembly
"	35-3382	12001187		Kit, Lid Switch Assembly

12	35-2795	12001187	Kit, Lid Switch Assembly
"	21001135		Housing, Lid Switch
13	25-7878		Clip
14	35-3076	12001187	Kit, Lid Switch Assembly
"	21001134		Lever, Lid Switch
15	35-2739		Top, Cabinet
16	35-2731	21001167	Dispenser, Bleach
"	21001167		Dispenser, Bleach
17	35-0680	Not Available	CORD, POWER
18	25-7732	681414	Screw, 10AB X 1/2
19	35-2846		Hinge, Cabinet Top
20	35-4128		Pad, Hinge
21	25-7796	596669	Clamp, Manifold
22	53-0643		Pin, Locator
"	35-4129		Bumper, Cabinet
23	25-7220		Clip, Cabinet Top
24	25-0224	3400029	Nut, Adapter Plate
"	53-0200		Sleeve, Locator Pin
25	53-0643		Pin, Locator
26	35-2084		Panel, Front
27	53-0120		Clip, Front Panel
28	33-2653		Bumper, Cabinet
29	35-2106	21001871	Cabinet
30	33-2653		Bumper, Cabinet
31	35-2108	21001871	Cabinet
32	25-7733	681414	Screw, 10AB X 1/2

the laundry company[®]

the laundry company[®]