


Crosley CW20T6WC 02 - CONTROL PANEL

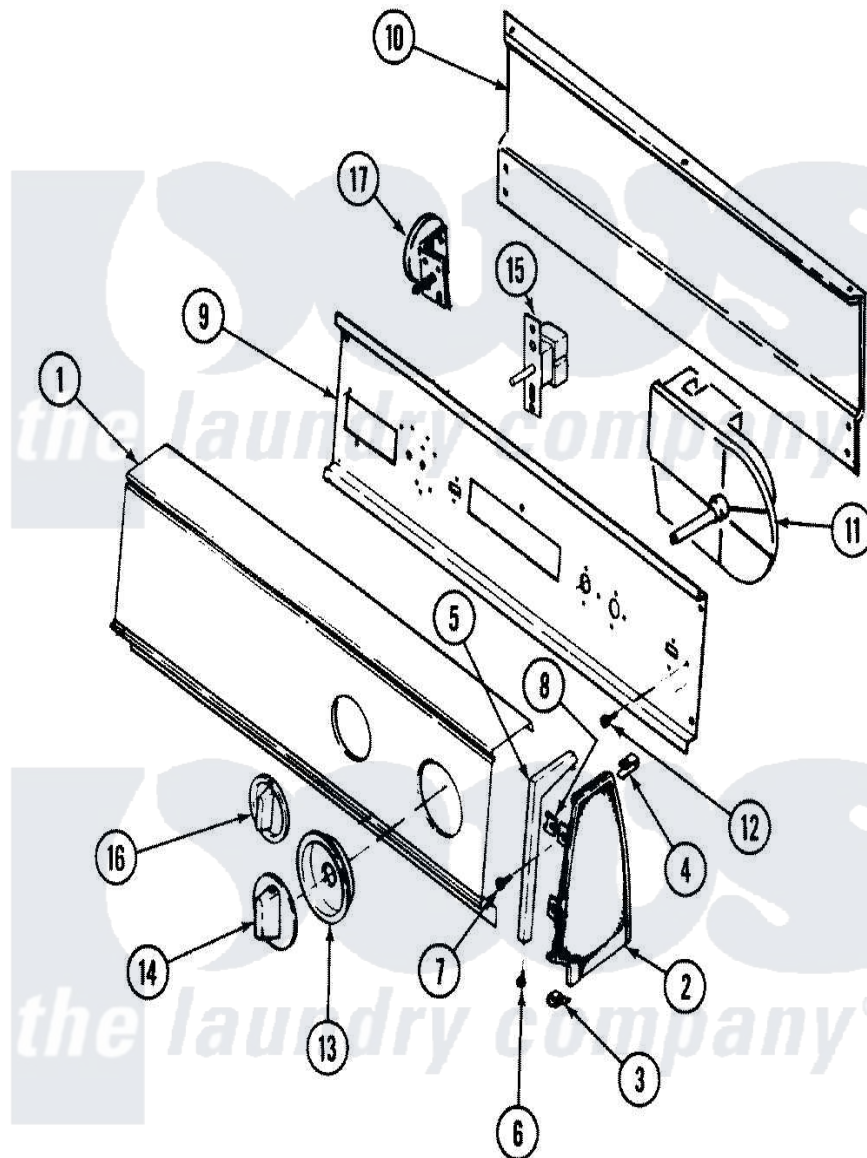

Crosley [Residential Crosley CW20T6WC Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
"	35-3929		Not Available	PANEL, CONTROL
2	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	25-7702		Speedclip, End Cap To Control Panel
9	53-1676		Shield, Control
"	53-2504	31001193	Pad, Shield
10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
"	25-7853	25-7933	Ring, Retaining
"	35-2688	21001460	Shield, Rear
11	35-3840		Timer
12	25-0205	216412	Screw, Bracket To Timer
13	35-4197	12500058	Knob Ski
14	35-4195	12500058	Knob Ski
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0124	Not Available	SWITCH, WATER TEMPERATURE
16	35-3974	22001267	Knob, Selector Switch
17	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-3691	21001554	Switch, Water Level
NI	16002080	Not Available	GUIDE, QUICK REF - CROSLEY
"	21001038	Not Available	MANUAL, USE & CARE
"	21001033	Not Available	MANUAL, USE & CARE

