


Crosley CW20T8V 02 - CONTROL PANEL (CW20T8V)

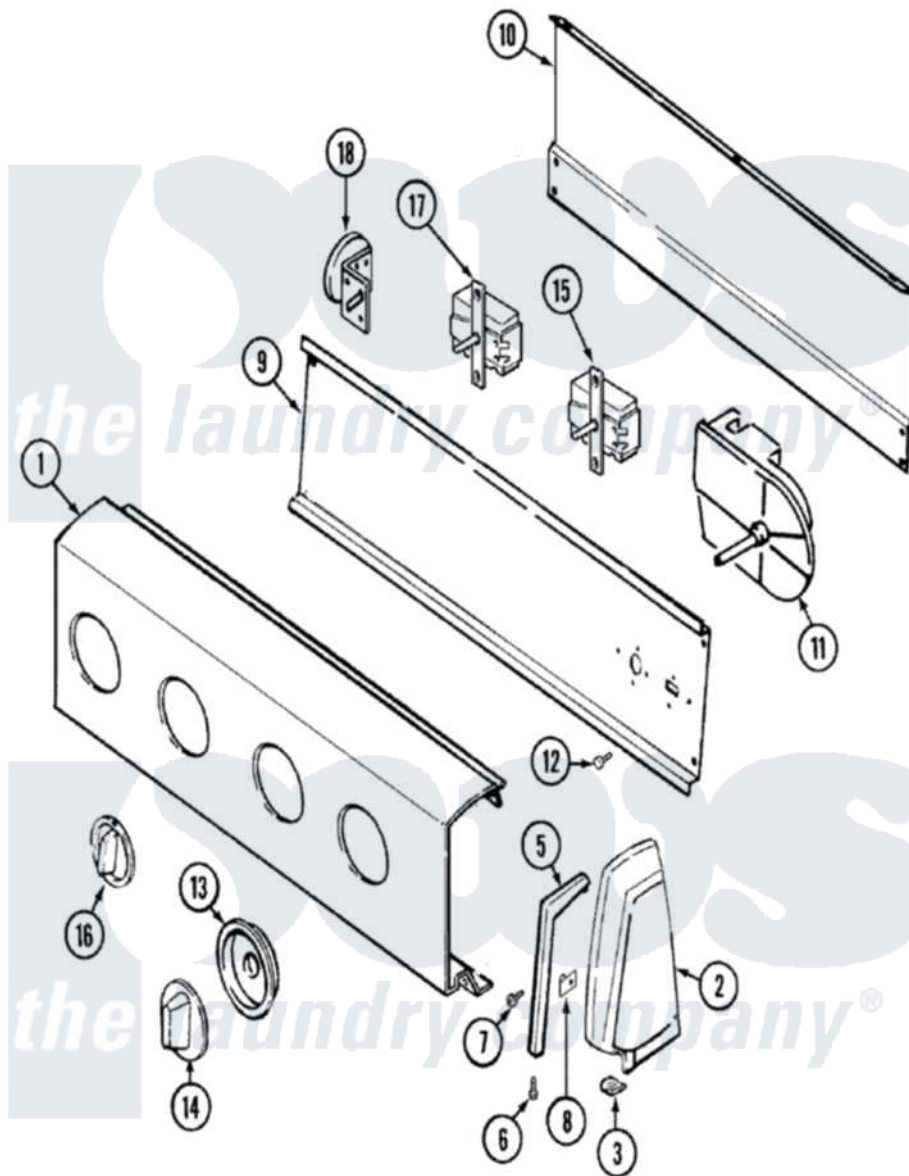

Crosley [Residential Crosley CW20T8V Washer Parts](#) Parts Diagram 02 - CONTROL PANEL (CW20T8V)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	35-3932		Not Available	PANEL, CONTROL
"	25-7793			Screw
2	35-2668	21001453		Cap- End
"	35-2669		Not Available	CAP, END (LT)(WHT)
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
NI	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 Hex Washer Head Tapping

8	25-7702		Speedclip, End Cap To Control Panel
9	35-3190	Not Available	SHIELD, CONTROL
"	31001128	Not Available	SHIELD, CONTROL
"	31001146	31001193	Pad, Shield
"	53-2504	31001193	Pad, Shield
10	25-3457		Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7853	25-7933	Ring, Retaining
"	35-2688	21001460	Shield, Rear
11	35-3843		Timer
12	31001029	3400094	Screw, 10-32 X 3/8
13	35-4199	21001499	Skirt Ri
14	35-4196		Timer Knob
15	35-3857	Not Available	SWITCH, WATER TEMPERATURE
"	21001223		Switch, Water Temperature
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	35-3975	21002196	Knob-Selector
17	21001142		Switch, Speed
"	35-3859		Switch, Speed
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-3691	21001554	Switch, Water Level
NI	35-3898	21001813	Switch, Rocker
"	21001033	Not Available	MANUAL, USE & CARE
"	35-3947-1	Not Available	MANUAL, USE & CARE
"	16002080	Not Available	GUIDE, QUICK REF - CROSLEY

