


Crosley CW22B5V 02 - CONTROL PANEL

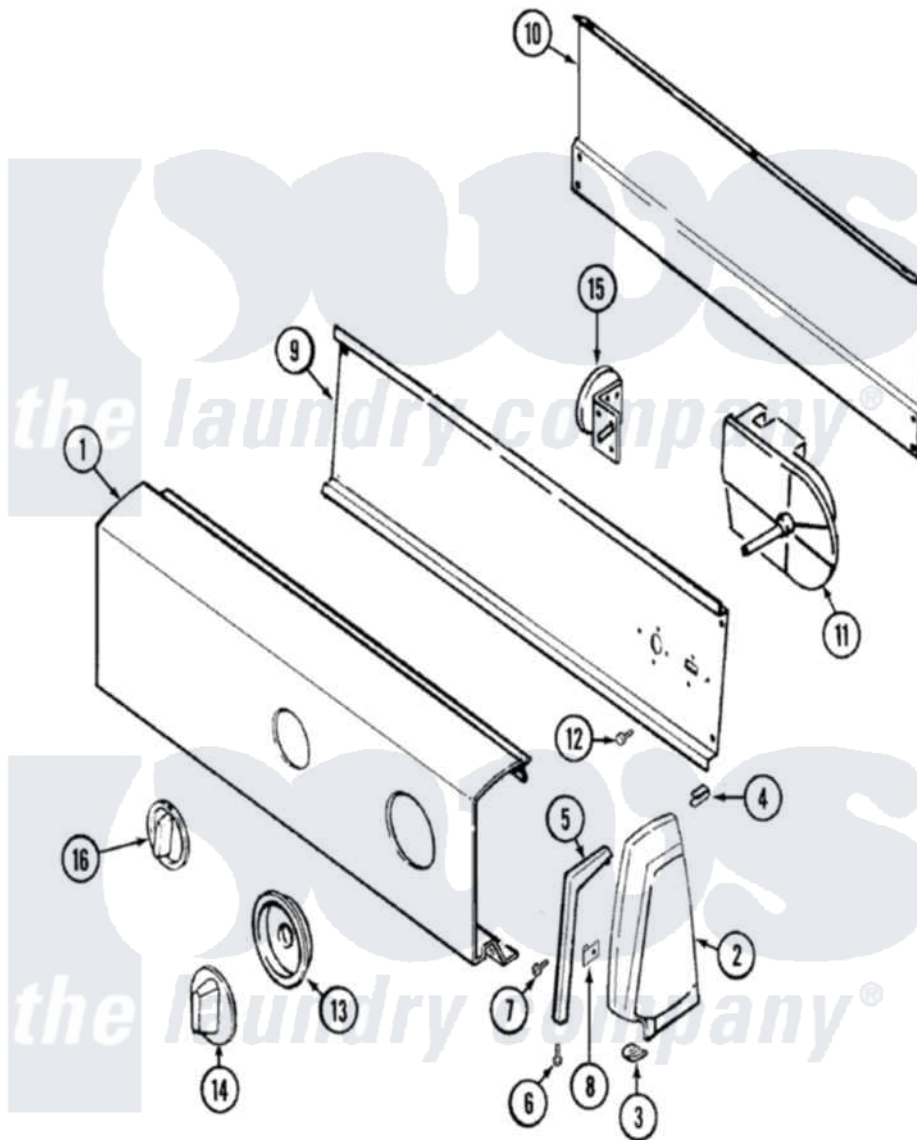

Crosley [Residential Crosley CW22B5V Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001187			Panel, Control
"	25-7496	25-7760		Screw
2	25-7496	25-7760		Screw
"	35-2669		Not Available	CAP, END (LT)(WHT)
"	35-2668	21001453		Cap- End
"	25-7702			Speedclip, End Cap To Control Panel
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	31001055		Not Available	TRIM, ENDCAP (LT WHT)
"	31001054		Not Available	TRIM, ENDCAP (RT WHT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	25-7702		Speedclip, End Cap To Control Panel
9	31001128	Not Available	SHIELD, CONTROL
"	31001146	31001193	Pad, Shield
10	25-3457		Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460	Shield, Rear
"	25-7853	25-7933	Ring, Retaining
11	21001340		Timer
"	35-3839		Timer
12	31001029	3400094	Screw, 10-32 X 3/8
13	35-4199	21001499	Skirt Ri
14	35-4196		Timer Knob
15	35-3691	21001554	Switch, Water Level
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	35-3975	21002196	Knob-Selector
NI	21001203	Not Available	MANUAL, USE & CARE
"	21001033	Not Available	MANUAL, USE & CARE
"	16002080	Not Available	GUIDE, QUICK REF - CROSLEY

