


Crosley CW22B6V 02 - CONTROL PANEL

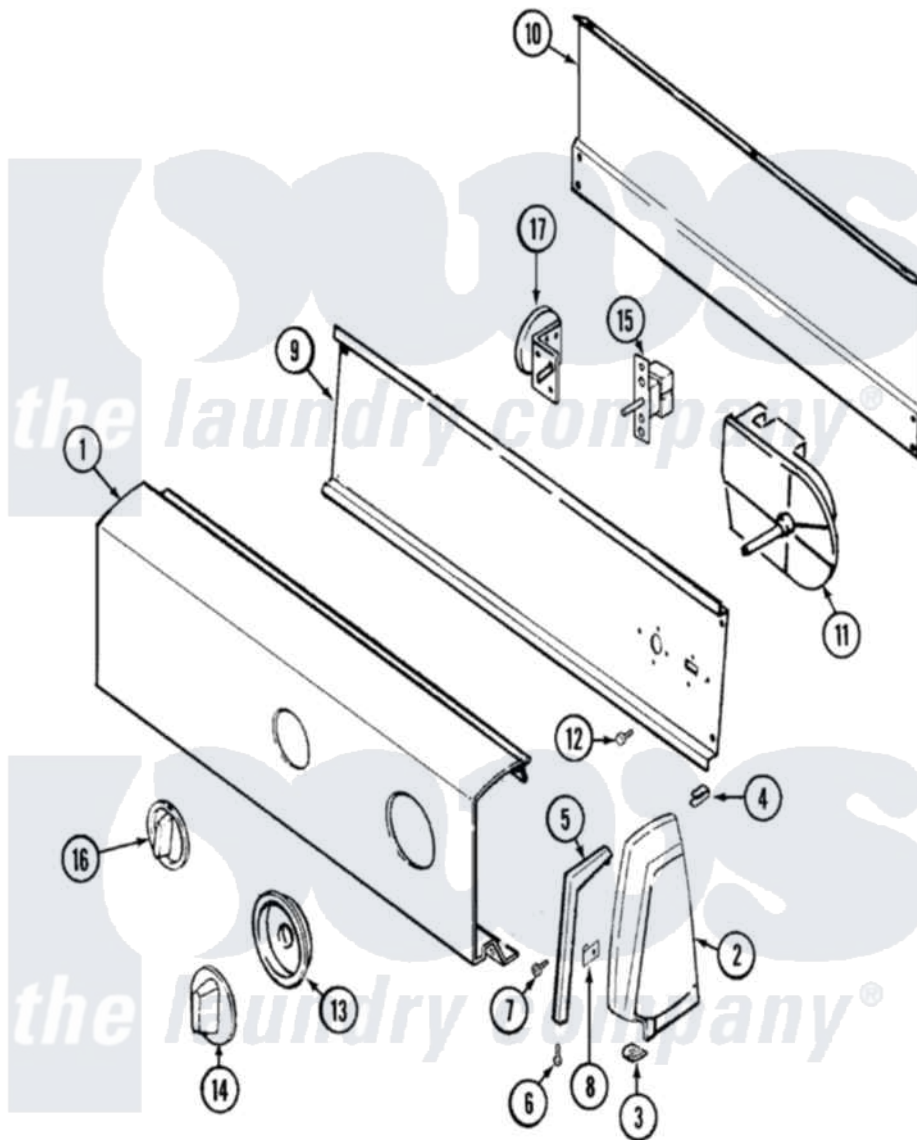

Crosley [Residential Crosley CW22B6V Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|--------------------------|--------------------------|---------------|---|
| 1 | 21001181 | | | Panel, Control |
| " | 25-7496 | 25-7760 | | Screw |
| " | 25-7702 | | | Speedclip, End Cap To Control Panel |
| 2 | 35-2669 | | Not Available | CAP, END (LT)(WHT) |
| " | 35-2668 | 21001453 | | Cap- End |
| 3 | 25-7851 | | | Speedclip, End Cap To Top |
| " | 25-7697 | 25-2219 | | Screw |
| 4 | 25-7435 | 33002917 | | Screw, No.10-16 |
| " | 25-7852 | | | Speedclip, Rr Shld To End Cap |
| 5 | 31001055 | | Not Available | TRIM, ENDCAP (LT WHT) |
| " | 31001054 | | Not Available | TRIM, ENDCAP (RT WHT) |
| 6 | 25-7760 | | | Screw |
| 7 | 25-3092 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 8 | 25-7702 | | | Speedclip, End Cap To Control Panel |

| | | | |
|----|--------------------------|--------------------------|---|
| 9 | 31001128 | Not Available | SHIELD, CONTROL |
| " | 31001146 | 31001193 | Pad, Shield |
| 10 | 25-3457 | | Screw, Sems |
| " | 25-7853 | 25-7933 | Ring, Retaining |
| " | 35-2688 | 21001460 | Shield, Rear |
| " | 25-3092 | 90767 | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 11 | 35-3840 | | Timer |
| " | 21001341 | | Timer |
| 12 | 31001029 | 3400094 | Screw, 10-32 X 3/8 |
| 13 | 35-4199 | 21001499 | Skirt Ri |
| 14 | 35-4196 | | Timer Knob |
| 15 | 21001139 | | Switch, Water Temp. 3 Position |
| " | 25-3092 | 90767 | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 16 | 35-3975 | 21002196 | Knob-Selector |
| 17 | 35-3691 | 21001554 | Switch, Water Level |
| " | 25-3092 | 90767 | Screw, 8A X 3/8 HeX Washer Head Tapping |
| NI | 21001204 | Not Available | MANUAL, USE & CARE |
| " | 21001033 | Not Available | MANUAL, USE & CARE |
| " | 16002080 | Not Available | GUIDE, QUICK REF - CROSLEY |

