


Crosley CW22B8M 02 - CONTROL PANEL

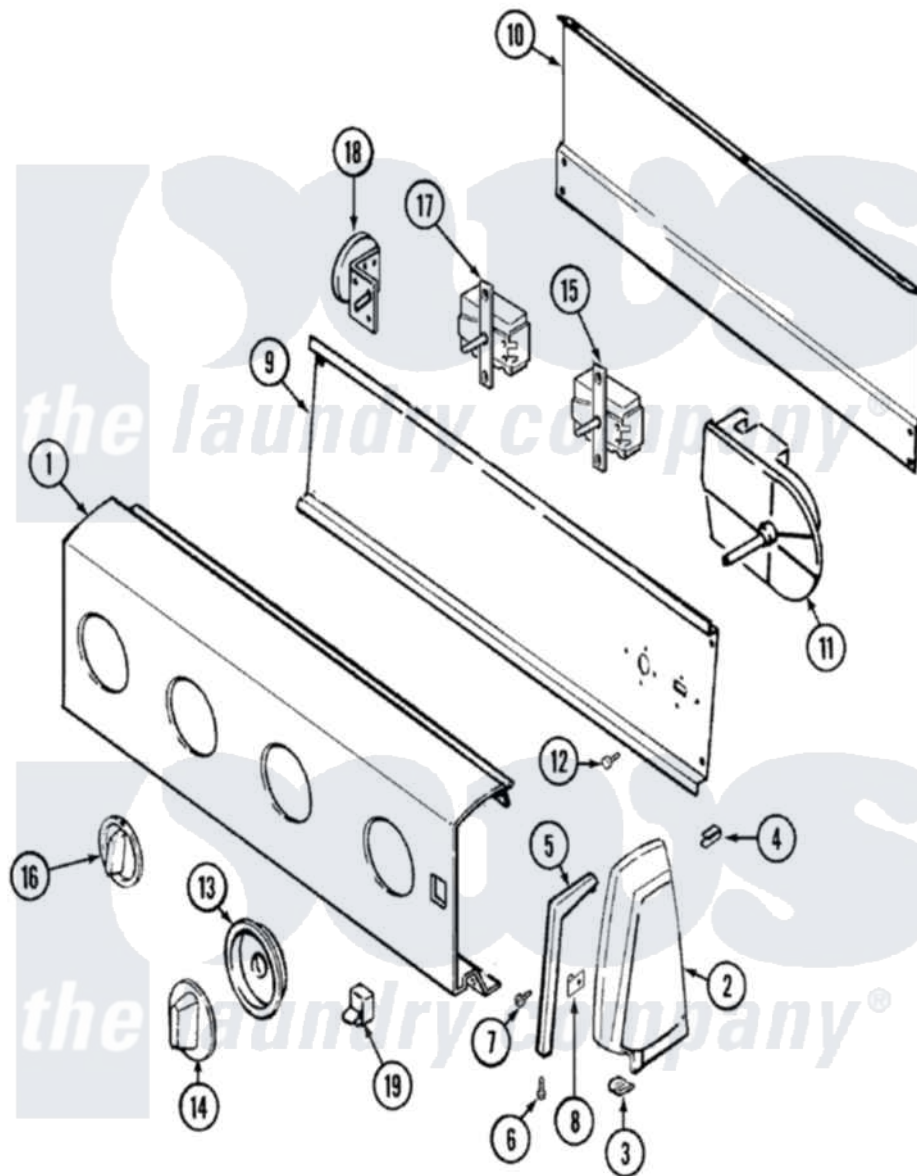

Crosley [Residential Crosley CW22B8M Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001183		Not Available	PANEL, CONTROL
"	25-7649	910187		Screw
2	21001069	12002263		Endcap Kit
"	21001070	21001456		Cap- End
"	25-7496	25-7760		Screw
"	25-7702			Speedclip, End Cap To Control Panel
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
5	31001056		Not Available	TRIM, ENDCAP (RT)(ALM)
"	31001057		Not Available	TRIM, ENDCAP (LT)(ALM)
6	25-7760			Screw
7	25-3002	00767		Screw, 8A X 3/8 HeX Washer

	25-3092	90767		Head Tapping
8	25-7702			Speedclip, End Cap To Control Panel
9	31001128		Not Available	SHIELD, CONTROL
"	31001146	31001193		Pad, Shield
10	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460		Shield, Rear
"	25-7853	25-7933		Ring, Retaining
"	25-3457			Screw, Sems
11	35-3843			Timer
"	21001325			Timer
12	31001029	3400094		Screw, 10-32 X 3/8
13	21001219	21001501		Skirt Ri
14	21001220	12500058		Knob Ski
15	21001223			Switch, Water Temperature
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
16	21001221			Knob, Selector
17	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001142			Switch, Speed
18	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-3691	21001554		Switch, Water Level
19	21001116	74008765		Switch, Rocker
20	21001206		Not Available	MANUAL, USE & CARE
"	21001033		Not Available	MANUAL, USE & CARE
21	16002080		Not Available	GUIDE, QUICK REF - CROSLEY

the laundry company[®]

PLWS
the laundry company[®]