


# Crosley CW22B8V 02 - CONTROL PANEL

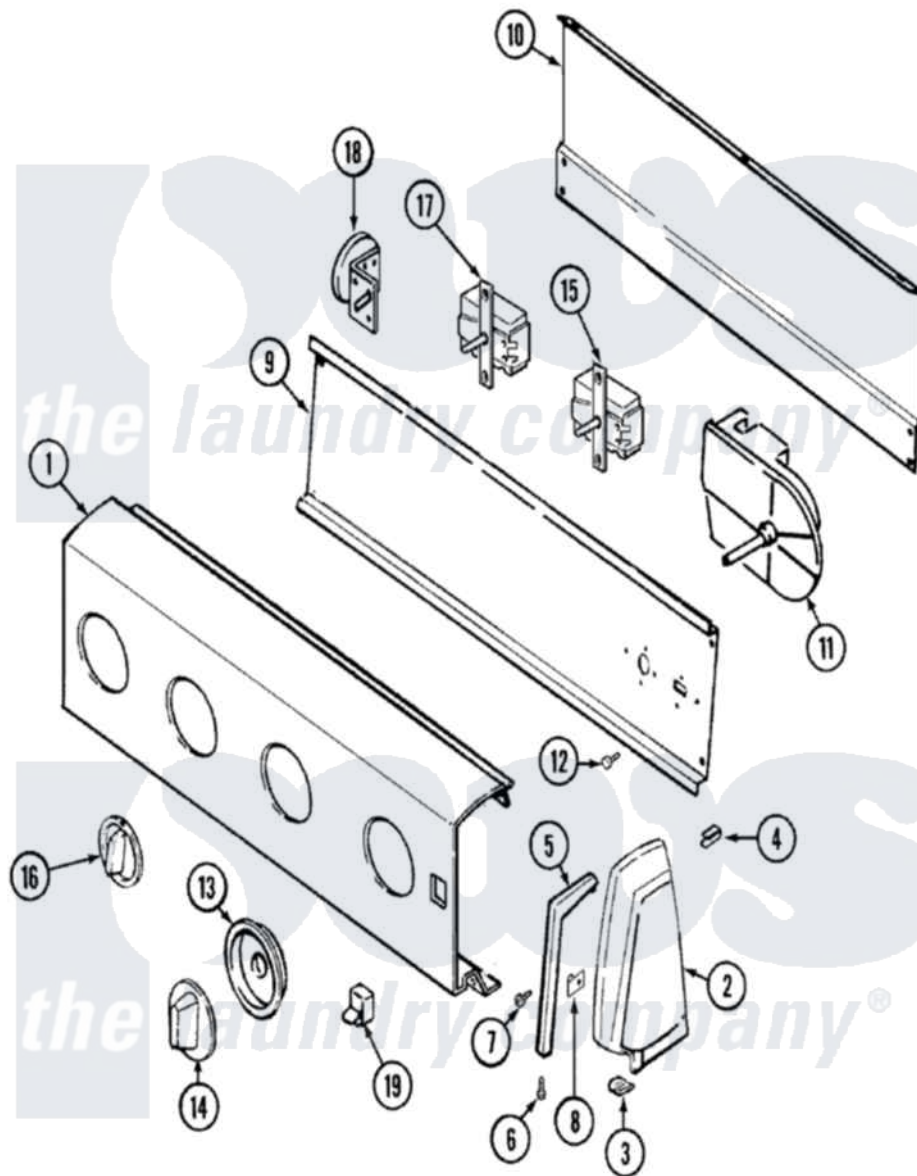

Crosley [Residential Crosley CW22B8V Washer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">21001182</a>			Panel, Control
"	25-7649	<a href="#">910187</a>		Screw
2	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	25-7496	<a href="#">25-7760</a>		Screw
"	35-2669		Not Available	CAP, END (LT)(WHT)
"	35-2668	<a href="#">21001453</a>		Cap- End
3	25-7697	<a href="#">25-2219</a>		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	31001055		Not Available	TRIM, ENDCAP (LT WHT)
"	31001054		Not Available	TRIM, ENDCAP (RT WHT)
6	<a href="#">25-7760</a>			Screw
7	25-3002	<a href="#">00767</a>		Screw, 8A X 3/8 HeX Washer

7	<a href="#">25-3092</a>	<a href="#">90767</a>	Head Tapping
8	<a href="#">25-7702</a>		Speedclip, End Cap To Control Panel
9	31001128	Not Available	SHIELD, CONTROL
"	31001146	<a href="#">31001193</a>	Pad, Shield
10	25-7853	<a href="#">25-7933</a>	Ring, Retaining
"	35-2688	<a href="#">21001460</a>	Shield, Rear
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">25-3457</a>		Screw, Sems
11	<a href="#">35-3843</a>		Timer
"	<a href="#">21001325</a>		Timer
12	31001029	<a href="#">3400094</a>	Screw, 10-32 X 3/8
13	35-4199	<a href="#">21001499</a>	Skirt Ri
14	<a href="#">35-4196</a>		Timer Knob
15	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">21001223</a>		Switch, Water Temperature
16	35-3975	<a href="#">21002196</a>	Knob-Selector
17	<a href="#">21001142</a>		Switch, Speed
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
18	35-3691	<a href="#">21001554</a>	Switch, Water Level
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
19	35-3898	<a href="#">21001813</a>	Switch, Rocker
20	21001206	Not Available	MANUAL, USE & CARE
"	21001033	Not Available	MANUAL, USE & CARE
21	16002080	Not Available	GUIDE, QUICK REF - CROSLEY

*the laundry company*<sup>®</sup>

**Howes**  
*the laundry company*<sup>®</sup>