


Crosley CW5500W 03 - CONTROL PANEL

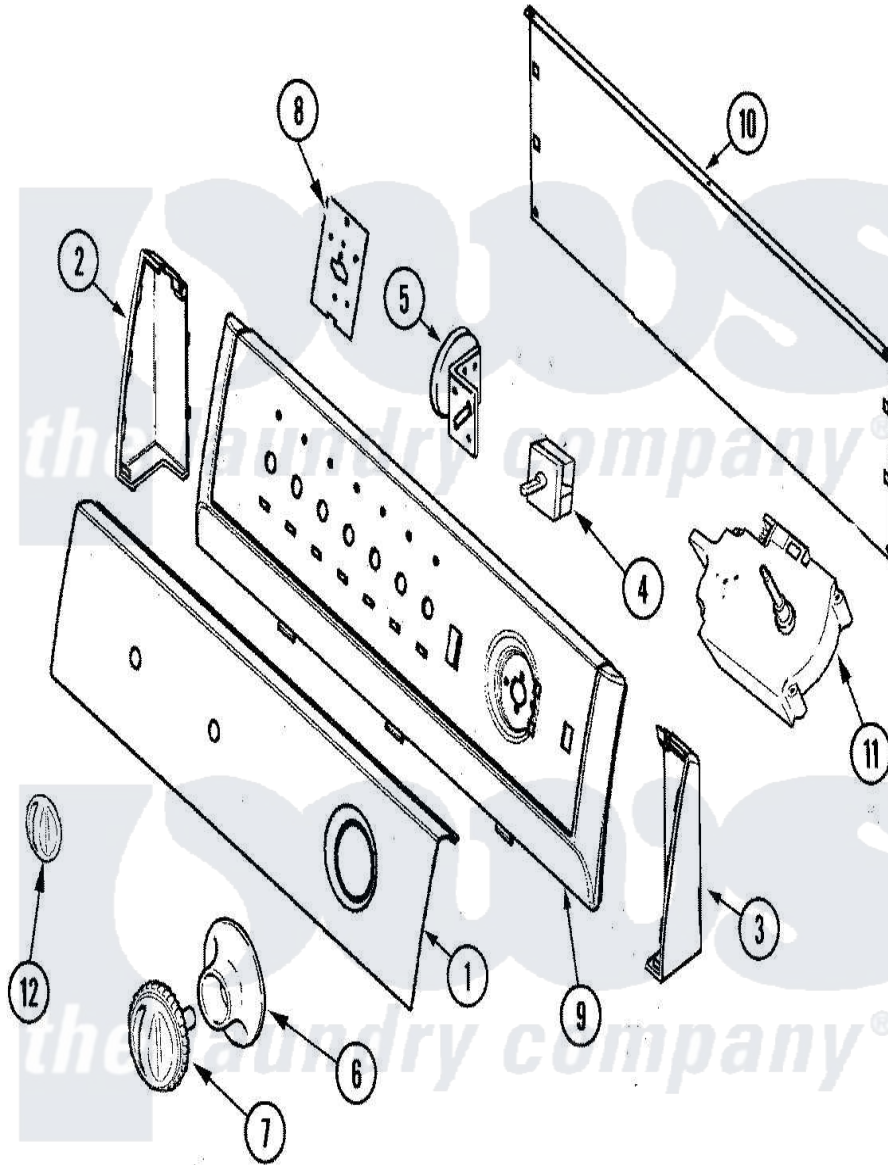

Crosley [Residential Crosley CW5500W Washer Parts](#) Parts Diagram 03 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21002017			Panel, Control / Facia
"	21002153			Facia
2	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001546			Endcap, Panel
3	21001547			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001139			Switch, Water Temp. 3 Position
5	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001882			Switch, Pressure
"	Y2201474			Switch, Pressure
"	21002077			Shield, Control-1 Hole/Console
6	21001520			Skirt, Timer Knob

7	21001526		Knob, Timer
8	21001517		Shield, Control
9	21001552		Frame , Control Panel
10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001527		Shield, Rear
11	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001522		Timer
12	21001544		Knob, Selector

