


# Crosley CW6000A 03 - CONTROL PANEL

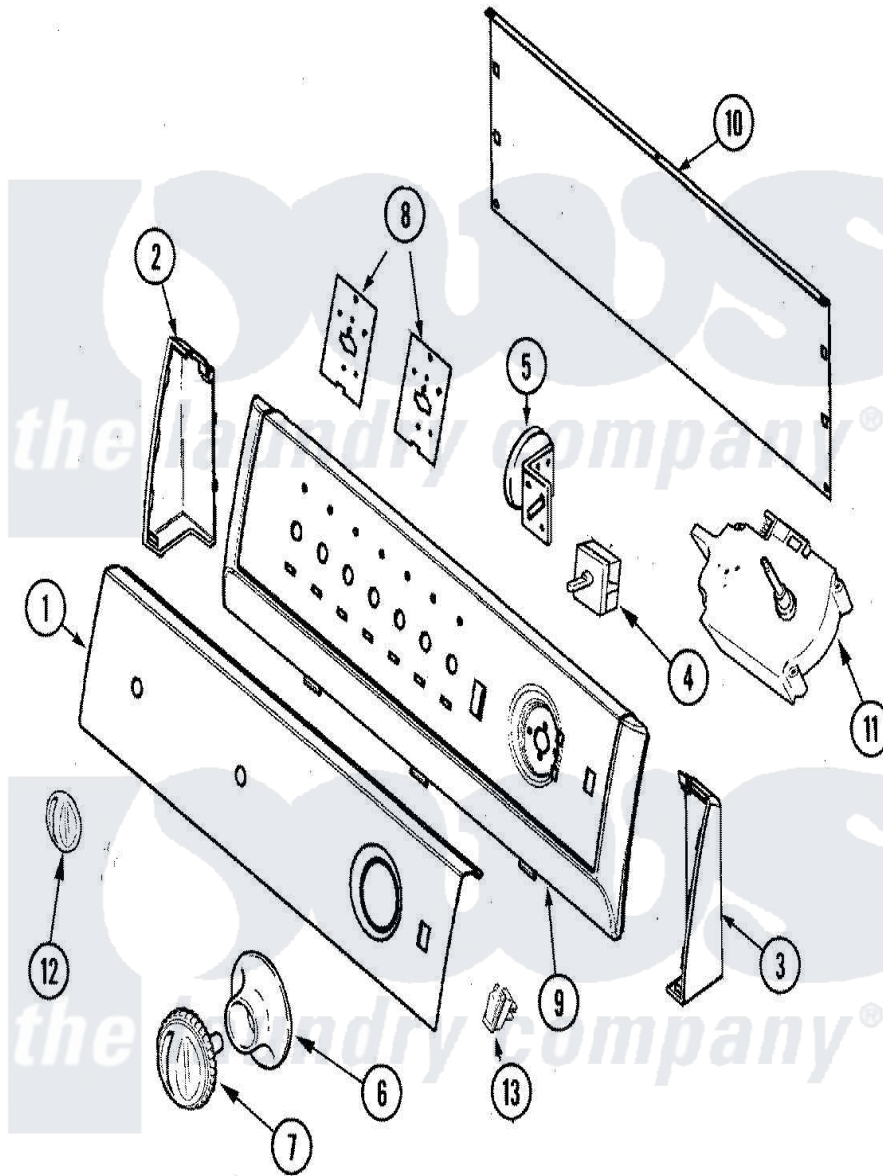

Crosley [Residential Crosley CW6000A Washer Parts](#) Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

| Item | Original Part Number     | Replaced By              | Status | Part Description                        |
|------|--------------------------|--------------------------|--------|---|
| 1    | <a href="#">21001580</a> |                          |        | Panel, Control                          |
| 2    | 25-3092                  | <a href="#">90767</a>    |        | Screw, 8A X 3/8 HeX Washer Head Tapping |
| "    | 21001557                 | <a href="#">21001769</a> |        | Endcap, Panel                           |
| 3    | 21001564                 | <a href="#">21001768</a> |        | Endcap, Panel                           |
| "    | 25-3092                  | <a href="#">90767</a>    |        | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 4    | <a href="#">21001226</a> |                          |        | Switch, Water Temp. 4 Position          |
| "    | 25-3092                  | <a href="#">90767</a>    |        | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 5    | 25-3092                  | <a href="#">90767</a>    |        | Screw, 8A X 3/8 HeX Washer Head Tapping |
| "    | <a href="#">21001554</a> |                          |        | Switch, Water Level                     |
| 6    | <a href="#">21001563</a> |                          |        | Skirt                                   |
| 7    | 21001559                 | <a href="#">21001770</a> |        | Knob, Timer                             |
| 8    | <a href="#">21001517</a> |                          |        | Shield, Control                         |
| 9    | 21001581                 | <a href="#">21001766</a> |        | Frame, Control Panel                    |

|    |                          |                          |   |
|----|--------------------------|--------------------------|---|
| 10 | <a href="#">21001527</a> |                          | Shield, Rear                            |
| "  | 25-3092                  | <a href="#">90767</a>    | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 11 | 25-3092                  | <a href="#">90767</a>    | Screw, 8A X 3/8 HeX Washer Head Tapping |
| "  | <a href="#">21001561</a> |                          | Timer                                   |
| 12 | 21001556                 | <a href="#">21001772</a> | Knob, Selector                          |
| 13 | 21001116                 | <a href="#">74008765</a> | Switch, Rocker                          |
| NI | 16009629                 | Not Available            | MANUAL, USE & CARE                      |
| "  | 21001725                 | Not Available            | MANUAL, USE & CARE (SPAN)               |
| "  | 21001790                 | Not Available            | HARNESSE, WIRE                          |

