


Crosley CW6000Q 05 - CONTROL PANEL

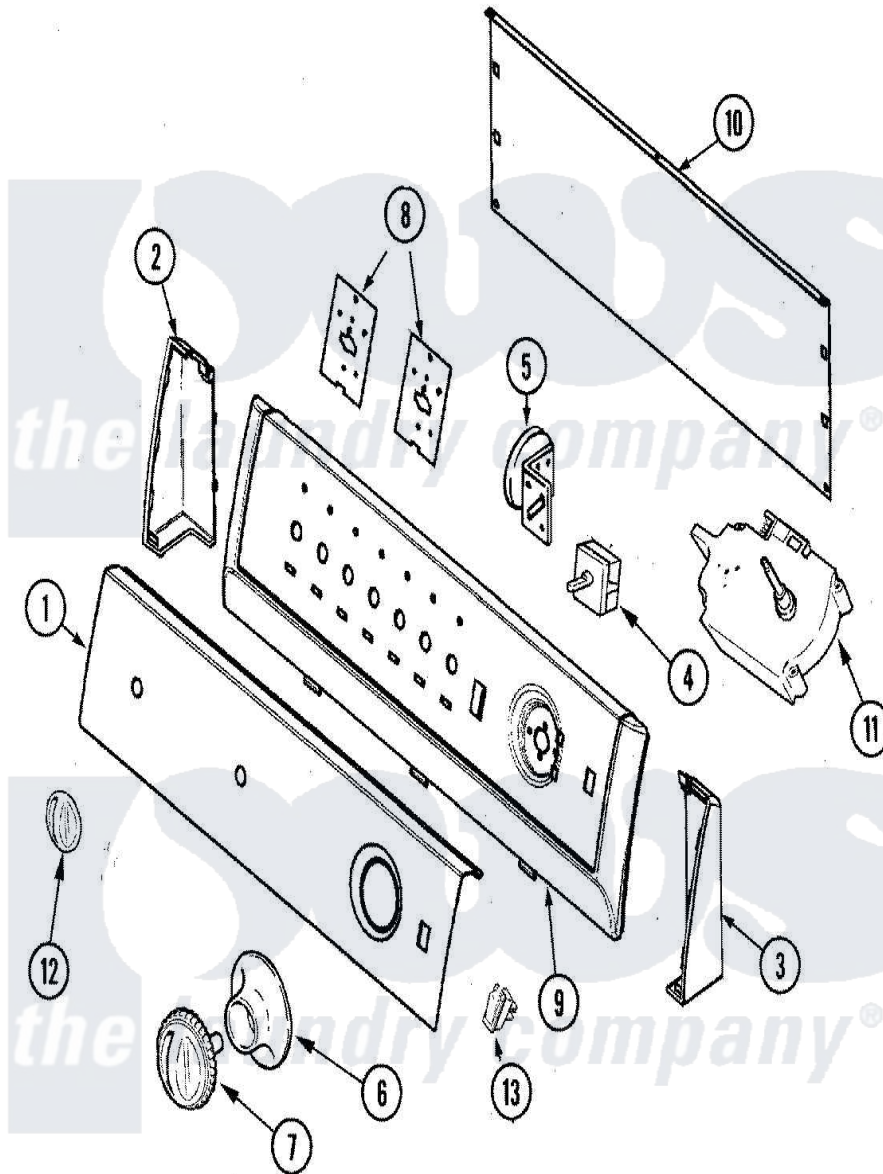

Crosley [Residential Crosley CW6000Q Washer Parts](#) Parts Diagram 05 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001773			Panel, Control
2	21001769			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001768			Endcap, Panel
4	21001226			Switch, Water Temp. 4 Position
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001554			Switch, Water Level
6	21001771			Skirt, Timer Knob
7	21001770			Knob, Timer
8	21001517			Shield, Control
9	21001766			Frame, Control Panel

10	21001527		Shield, Rear
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
11	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001561		Timer
12	21001772		Knob, Selector
13	21001776		Switch, Rocker
NI	16009629	Not Available	MANUAL, USE & CARE
"	21001725	Not Available	MANUAL, USE & CARE (SPAN)
"	21001790	Not Available	HARNES, WIRE

Howes
the laundry company®

Howes
the laundry company®

Howes
the laundry company®