


# Crosley CW6500W 08 - TUB

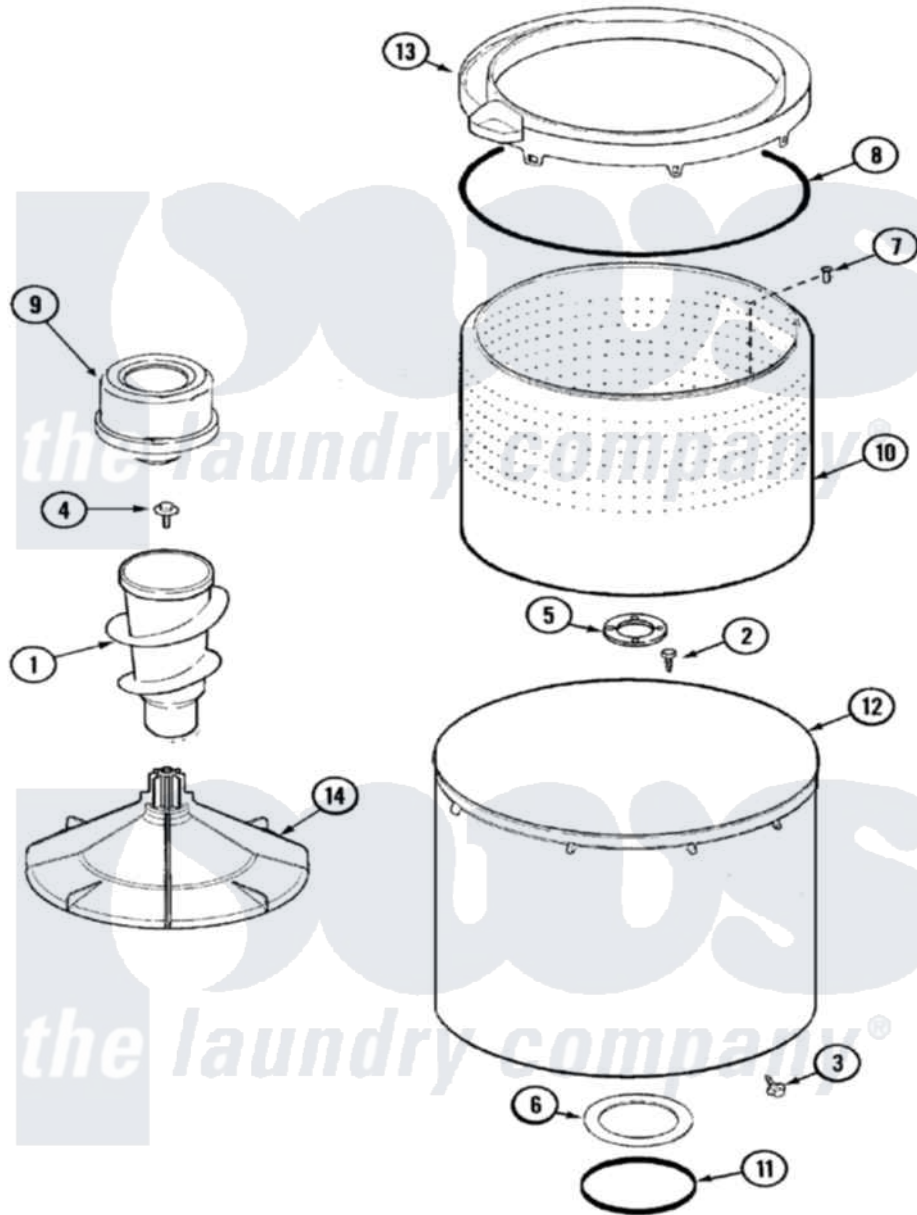

Crosley [Residential Crosley CW6500W Washer Parts](#) Parts Diagram 08 - TUB  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">21001878</a>			Auger/Post Assembly
2	21001510	<a href="#">22002947</a>		Bolt, Tub
3	25-7953	<a href="#">22002933</a>		Screw
4	25-8004	<a href="#">W10309247</a>		Screw
5	<a href="#">35-3685</a>			Gasket, Basket To Centerpost
6	<a href="#">35-3686</a>			Gasket, Tub To Housing
7	25-7967	<a href="#">3400504</a>		Screw
8	<a href="#">35-2328</a>			Seal, Tub Top
9	<a href="#">21002006</a>			Fabric Disp Assembly
"	<a href="#">21001905</a>			Dispenser, Fabric
10	<a href="#">21001529</a>			Basket Assembly
11	<a href="#">35-2978</a>			Seal, Tub/Housing
12	<a href="#">35-3700</a>			Tub Assembly
13	21001531		Not Available	TOP, TUB (PLASTIC)
14	<a href="#">21001530</a>			Base, Agitator