


Crosley CW7000Q 03 - TOP

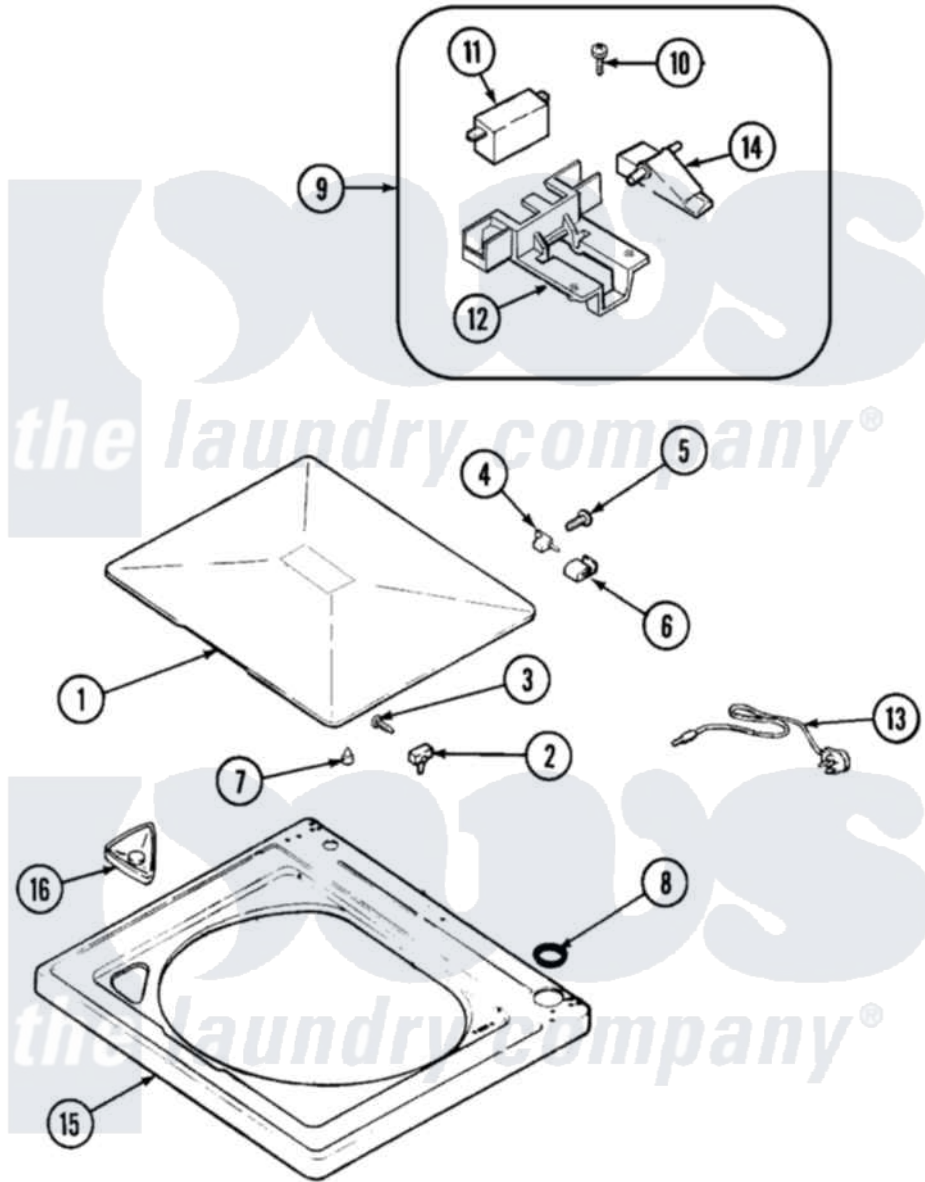

Crosley [Residential Crosley CW7000Q Washer Parts](#) Parts Diagram 03 - TOP  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">21001779</a>			Lid
2	<a href="#">43-0057</a>			Actuator, Door Switch
3	<a href="#">25-7438</a>			Screw
4	<a href="#">35-2045</a>			Pin, Hinge
5	<a href="#">25-7893</a>			Screw
6	<a href="#">35-2044</a>			Hinge, Lid
7	<a href="#">35-0581</a>			Bumper, Door
8	<a href="#">35-2063</a>			Bushing, Insulator
9	<a href="#">12001187</a>			Kit, Lid Switch Assembly
10	21001136	<a href="#">3400872</a>		Screw, 8-18 X 3/8
11	21001148	<a href="#">12001187</a>		Kit, Lid Switch Assembly
12	<a href="#">21001135</a>			Housing, Lid Switch
13	<a href="#">21001592</a>			Cord, Power
14	<a href="#">21001134</a>			Lever, Lid Switch
15	<a href="#">21001778</a>			Top, Cabinet
16	<a href="#">21001597</a>			Dispenser, Bleach