


# Crosley CW7000W 03 - CONTROL PANEL

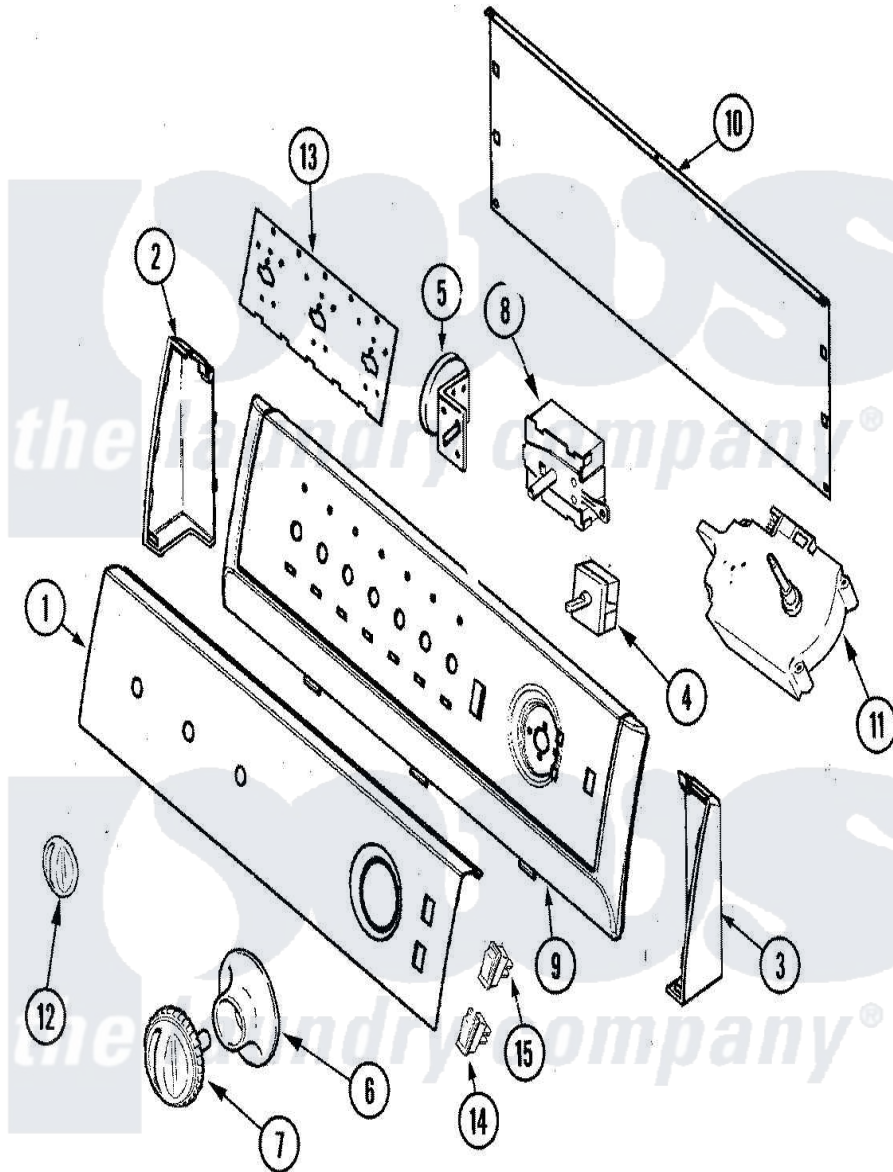

Crosley [Residential Crosley CW7000W Washer Parts](#) Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">21001566</a>			Panel, Control
2	<a href="#">21001546</a>			Endcap, Panel
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
3	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">21001547</a>			Endcap, Panel
4	<a href="#">21001226</a>			Switch, Water Temp. 4 Position
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
5	<a href="#">21001554</a>			Switch, Water Level
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
6	<a href="#">21001520</a>			Skirt, Timer Knob
7	<a href="#">21001526</a>			Knob, Timer
8	21001173	<a href="#">21001687</a>		Switch, Speed
9	<a href="#">21001552</a>			Frame , Control Panel

10	<a href="#">21001527</a>		Shield, Rear
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
11	<a href="#">21001595</a>		Timer
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
12	<a href="#">21001544</a>		Knob, Selector
13	<a href="#">21001603</a>		Shield, Control
14	21001714	<a href="#">21001813</a>	Switch, Rocker
15	<a href="#">21001482</a>		Switch, Momentary
NI	21001725	Not Available	MANUAL, USE & CARE (SPAN)
"	21001576	Not Available	MANUAL, USE & CARE

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>