


Crosley CW7500Q 03 - CABINET

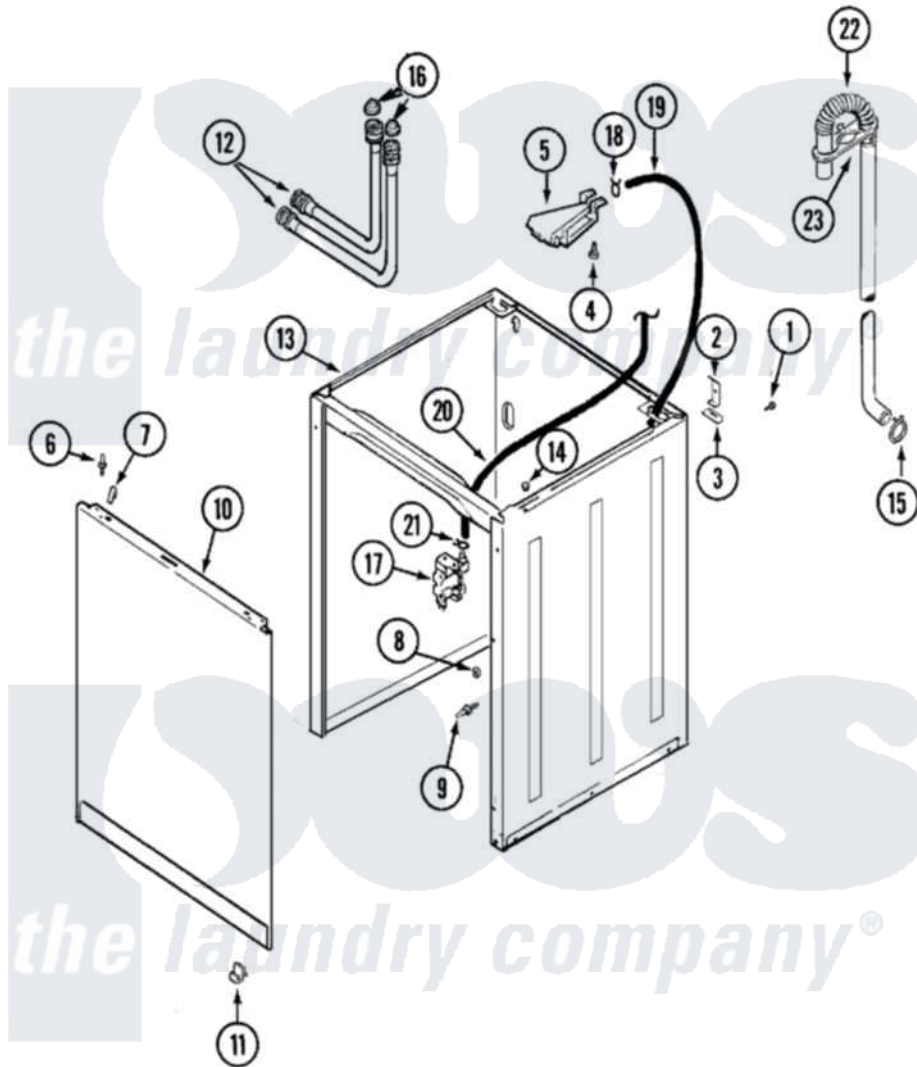

Crosley [Residential Crosley CW7500Q Washer Parts](#) Parts Diagram 03 - CABINET
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7732	681414		Screw, 10AB X 1/2
2	35-2846			Hinge, Cabinet Top
3	35-4128			Pad, Hinge
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	21001760			Flume Assembly / Water Diverter
6	53-0643			Pin, Locator
7	25-7220			Clip, Cabinet Top
8	25-0224	3400029		Nut, Adapter Plate
9	53-0643			Pin, Locator
10	21001781			Panel, Front
"	21002011			Pad, Cabinet
11	53-0120			Clip, Front Panel
"	31001041	308685		Side Trim)
12	33-7046	89503		Hose-Inlet
"	33-7891	89503		Hose-Inlet

13	21001780	21001877	Cabinet
"	21001281		Damper, Sound Pad
14	33-2653		Bumper, Cabinet
15	25-7080	285655	Clamp, Hose
16	33-4264N		Strainer And Washer Kit
17	21001747	21001932	Valve, Water Inlet
"	21001396	35-2374N	Valve, Water
18	25-7867	596669	Clamp, Manifold
19	35-2378	12002749	Hose, Flume Kit
20	21001749	21001748	Hose, Pressure Switch
21	25-7796	596669	Clamp, Manifold
22	21001513	21001872	Hose, Drain
23	22002701	22003814	Retainer, Drain Hose

the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]