


Crosley CW7500Q 04 - CABINET (SERIES 16)

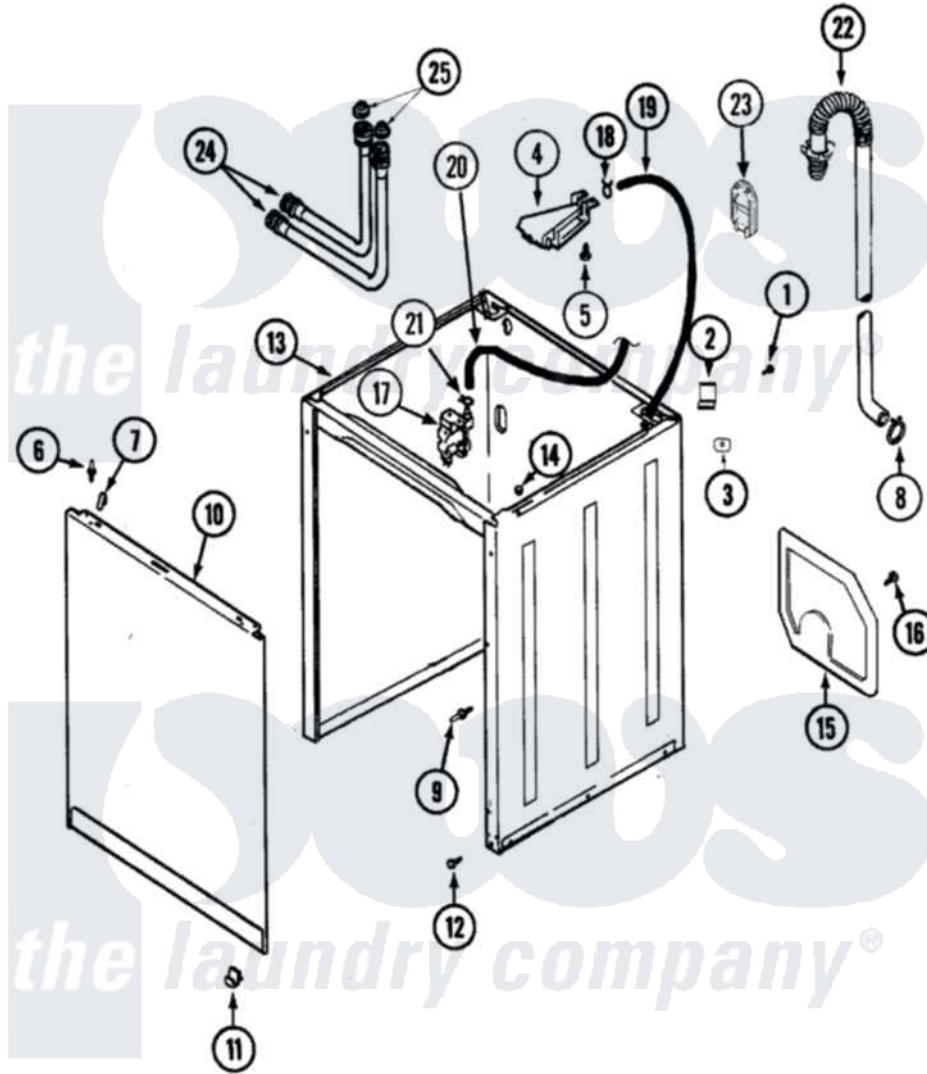

Crosley [Residential Crosley CW7500Q Washer Parts](#) Parts Diagram 04 - CABINET (SERIES 16)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7893			Screw
2	35-2846			Hinge, Cabinet Top
3	35-4128			Pad, Hinge
4	21001760			Flume Assembly / Water Diverter
5	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
6	25-0224	3400029		Nut, Adapter Plate
"	53-0643			Pin, Locator
"	53-0200			Sleeve, Locator Pin
7	25-7220			Clip, Cabinet Top
8	21001875	285655		Clamp, Hose
9	21001829			Post, Locating
10	21001781			Panel, Front
"	21002011			Pad, Cabinet
"	21001281			Damper, Sound Pad
11	53-0120			Clip, Front Panel

"	25-7732	681414	Screw, 10AB X 1/2
12	35-4129		Bumper, Cabinet
13	21001877		Cabinet
14	33-2653		Bumper, Cabinet
15	21001876		Shield, Rear
16	25-7732	681414	Screw, 10AB X 1/2
17	21001747	21001932	Valve, Water Inlet
18	25-7867	596669	Clamp, Manifold
19	35-2378	12002749	Hose, Flume Kit
20	21001748		Hose, Pressure Switch
21	25-7796	596669	Clamp, Manifold
22	21001872		Hose, Drain
23	21001874		Outlet, Drain Hose
24	33-7046	89503	Hose-Inlet
"	33-7891	89503	Hose-Inlet
25	33-4264N		Strainer And Washer Kit

