


Crosley CW7500Q 05 - CONTROL PANEL

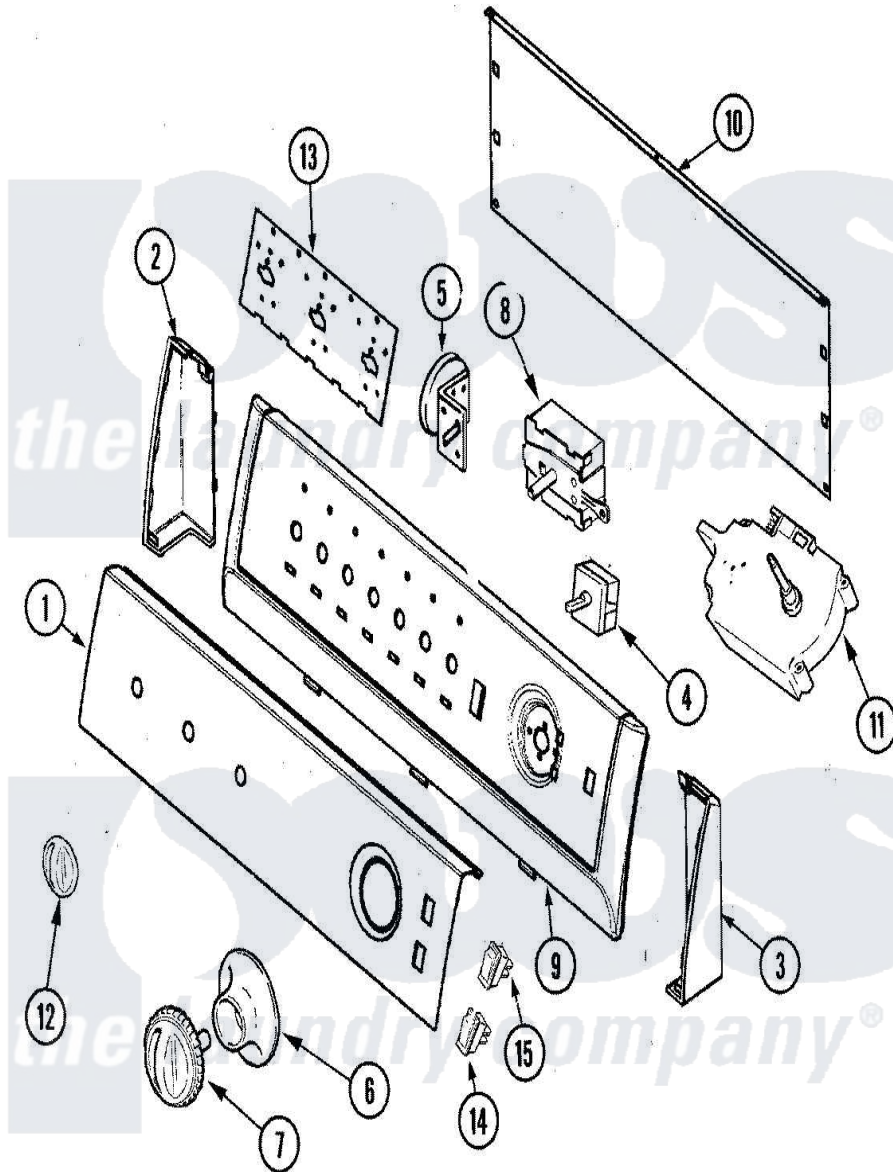

Crosley [Residential Crosley CW7500Q Washer Parts](#) Parts Diagram 05 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001807			Panel, Control
"	21001566			Panel, Control
2	21001769			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	21001768			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	21001226			Switch, Water Temp. 4 Position
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001554			Switch, Water Level
"	21001882			Switch, Pressure
6	21001771			Skirt, Timer Knob
7	21001770			Knob, Timer

8	21001173	21001687	Switch, Speed
9	21001767		Frame
10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001527		Shield, Rear
11	21001595		Timer
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
12	21001772		Knob, Selector
13	21001603		Shield, Control
14	21001776		Switch, Rocker
15	21001777	Not Available	SWITCH, MOMENTARY (BSQ)
NI	21001935		Harness, Wiring
"	21001788		Harness, Wire
"	21001810	Not Available	MANUAL, USE & CARE

