


Crosley CW8000W 02 - CABINET

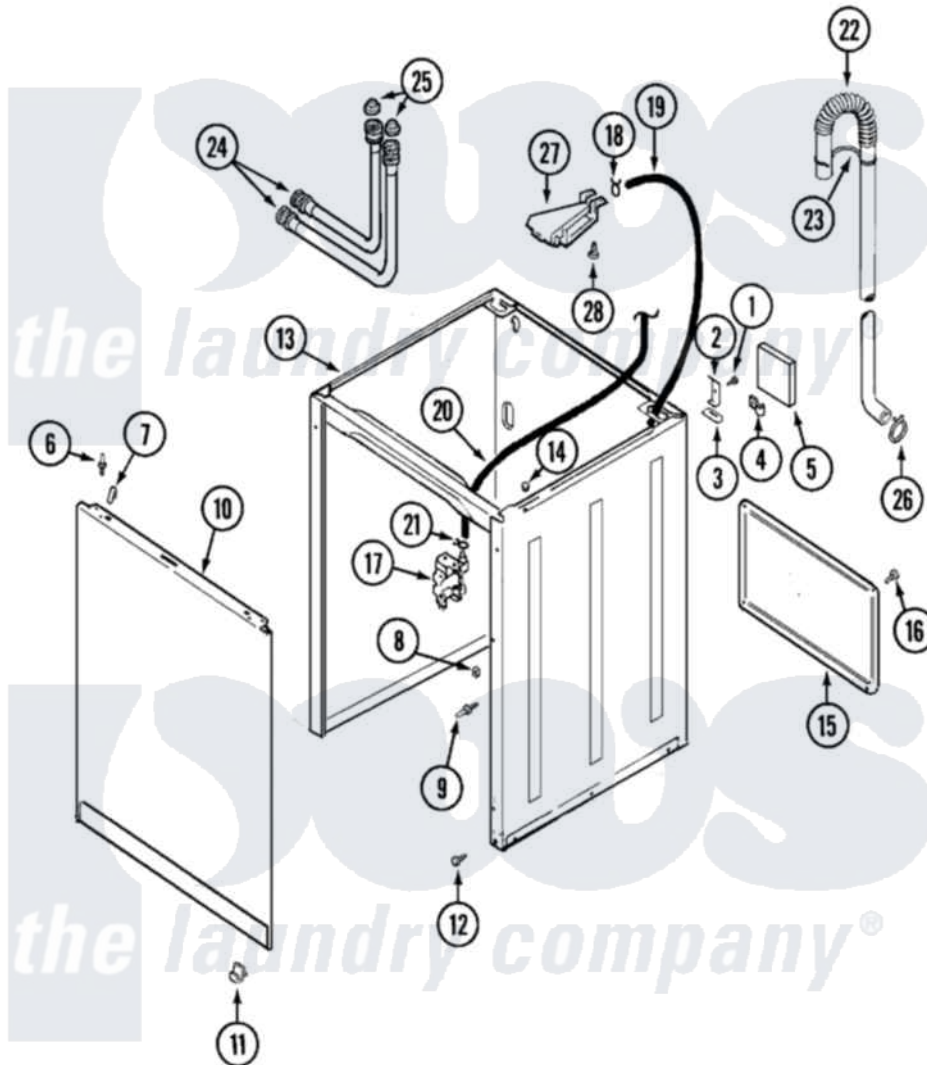

Crosley [Residential Crosley CW8000W Washer Parts](#) Parts Diagram 02 - CABINET
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7893			Screw
2	35-2846			Hinge, Cabinet Top
"	35-2846			Hinge, Cabinet Top
"	21001751			Hinge, Cabinet
3	35-4128			Pad, Hinge
4	25-7027	16515		Clip
5	35-0706		Not Available	PAD, FOAM
6	53-0643			Pin, Locator
7	25-7220			Clip, Cabinet Top
8	25-0224	3400029		Nut, Adapter Plate
9	53-0200			Sleeve, Locator Pin
"	53-0643			Pin, Locator
10	21002011			Pad, Cabinet
"	35-2084			Panel, Front
11	25-7732	681414		Screw, 10AB X 1/2
"	53-0120			Clip, Front Panel

12	35-4129		Bumper, Cabinet
13	21001753	21001871	Cabinet
"	12001801	21001871	Cabinet
"	21001281		Damper, Sound Pad
"	35-2106	21001871	Cabinet
14	33-2653		Bumper, Cabinet
15	35-2108	21001871	Cabinet
16	25-7732	681414	Screw, 10AB X 1/2
17	21001396	35-2374N	Valve, Water
"	21001747	21001932	Valve, Water Inlet
18	25-7867	596669	Clamp, Manifold
19	35-2378	12002749	Hose, Flume Kit
20	21001060	21001748	Hose, Pressure Switch
21	25-7796	596669	Clamp, Manifold
22	21001513	21001872	Hose, Drain
23	33-9537	22003814	Retainer, Drain Hose
24	35-3400		Inlet Hose Assembly
"	35-3401		Inlet Hose Assembly
25	33-4264N		Strainer And Washer Kit
26	25-7080	285655	Clamp, Hose
27	35-2051	21001760	Flume Assembly / Water Diverter
28	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping

the laundry company[®]

the laundry company[®]