


Crosley CW8000W 03 - CONTROL PANEL

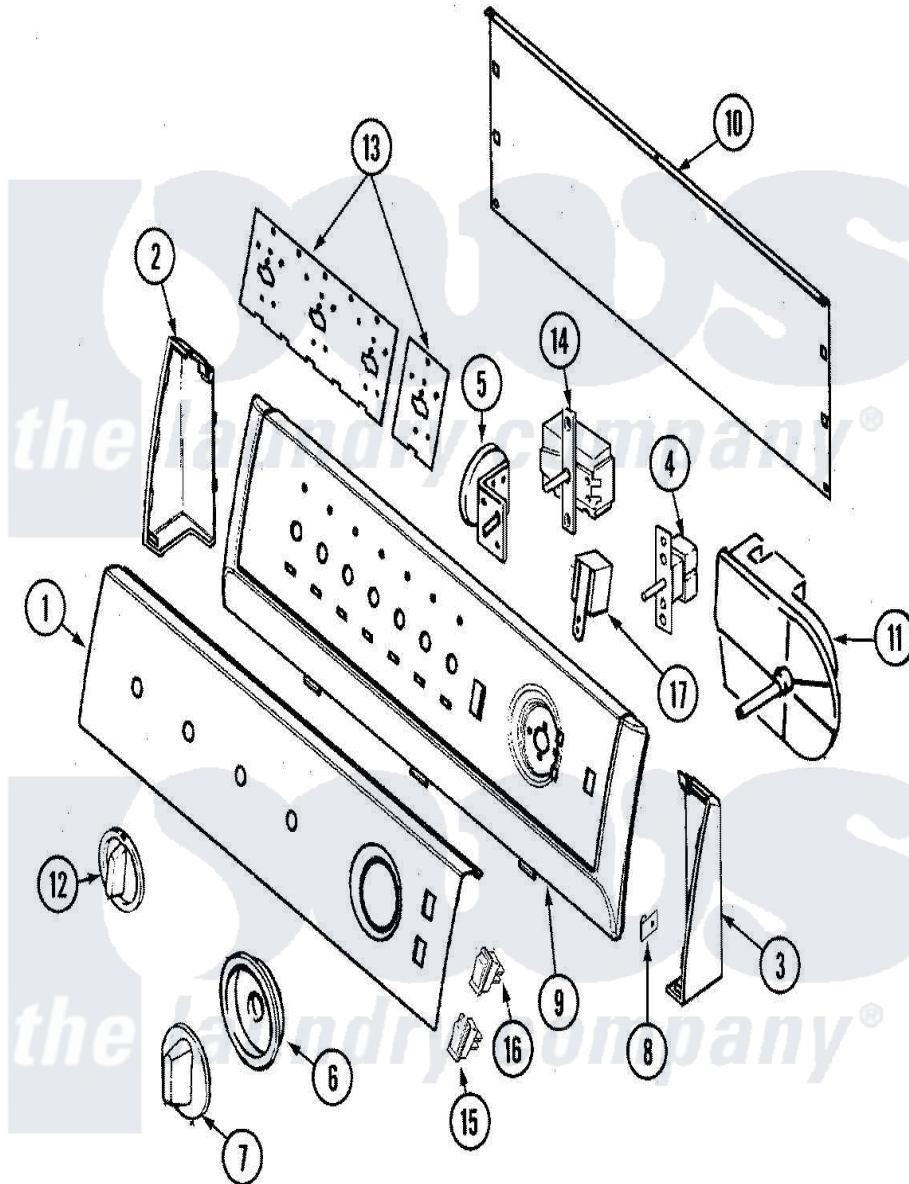

Crosley [Residential Crosley CW8000W Washer Parts](#) Parts Diagram 03 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001558			Panel, Control
2	21001546			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	21001547			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001224	21001676		Switch, Water Temperature
5	21001554			Switch, Water Level
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
6	21001520			Skirt, Timer Knob
7	21001526			Knob, Timer
8	25-7851			Speedclip, End Cap To Top
9	21001552			Frame , Control Panel
10	25-3457			Screw, Sems

"	21001527		Shield, Rear
"	25-7853	25-7933	Ring, Retaining
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
11	21001595		Timer
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
12	21001544		Knob, Selector
13	53-2504	31001193	Pad, Shield
"	21001517		Shield, Control
"	21001603		Shield, Control
"	31001193		Pad, Shield
14	21001227	21001673	Switch, Speed 4 Pos Rotary
15	21001116	74008765	Switch, Rocker
16	21001482		Switch, Momentary
17	31001397		Buzzer
	21001725		Not Available
			MANUAL, USE & CARE (SPAN)
NI	21001578		Not Available
			MANUAL, USE & CARE

