


Crosley CW8500W 02 - CABINET

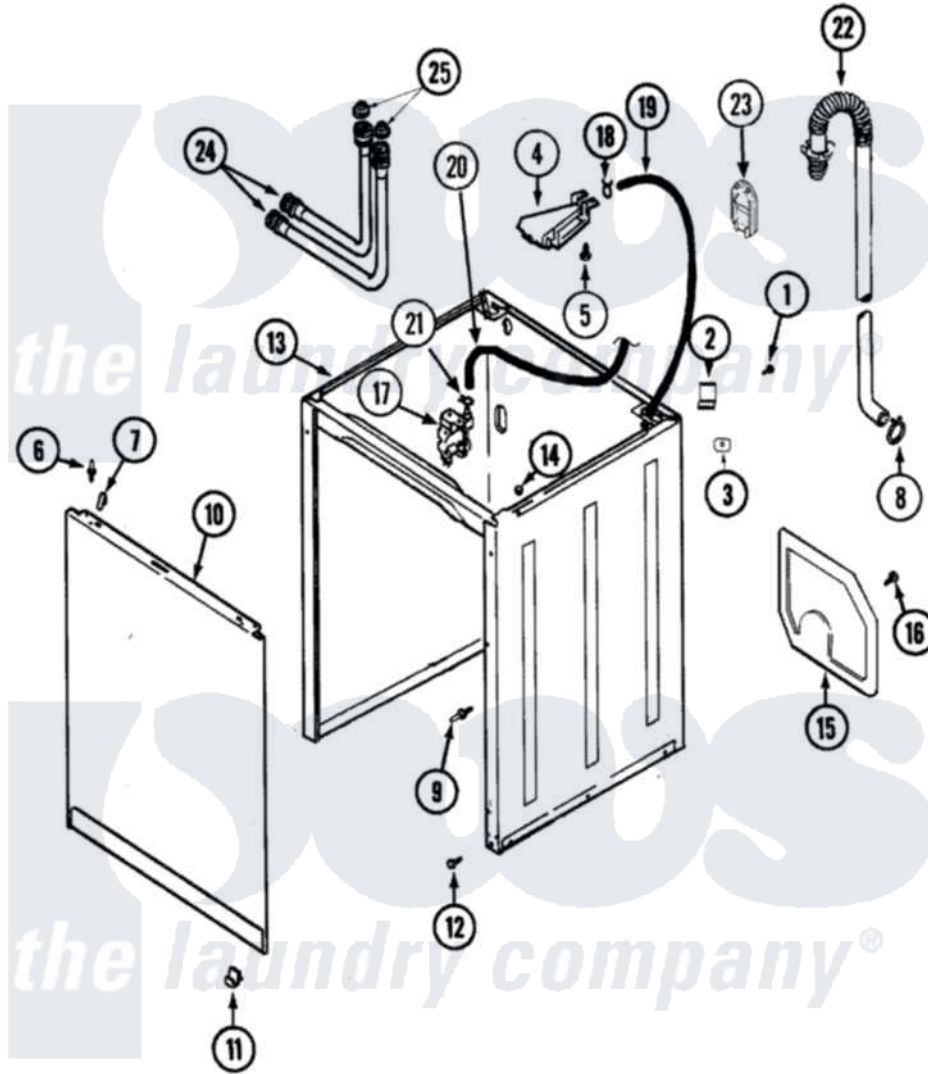

Crosley [Residential Crosley CW8500W Washer Parts](#) Parts Diagram 02 - CABINET
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7893			Screw
2	35-2846			Hinge, Cabinet Top
3	35-4128			Pad, Hinge
4	21001854			Flume Assembly
5	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
6	53-0643			Pin, Locator
"	53-0200			Sleeve, Locator Pin
"	25-0224	3400029		Nut, Adapter Plate
7	25-7220			Clip, Cabinet Top
8	21001875	285655		Clamp, Hose
9	21001829			Post, Locating
10	21001281			Damper, Sound Pad
"	35-2084			Panel, Front
"	21002011			Pad, Cabinet
11	25-7732	681414		Screw, 10AB X 1/2
"	53-0120			Clip, Front Panel

12	35-4129		Bumper, Cabinet
13	21001871		Cabinet
"	21001281		Damper, Sound Pad
"	21001982	21001281	Damper, Sound Pad
14	33-2653		Bumper, Cabinet
15	21001876		Shield, Rear
16	25-7732	681414	Screw, 10AB X 1/2
17	21001932		Valve, Water Inlet
18	25-7867	596669	Clamp, Manifold
19	35-2378	12002749	Hose, Flume Kit
20	21001748		Hose, Pressure Switch
21	25-7796	596669	Clamp, Manifold
22	21001872		Hose, Drain
23	21001874		Outlet, Drain Hose
24	33-7891	89503	Hose-Inlet
"	35-0874	76313	Hosefill
25	33-4264N		Strainer And Washer Kit

