


Crosley CW8500W 03 - CONTROL PANEL

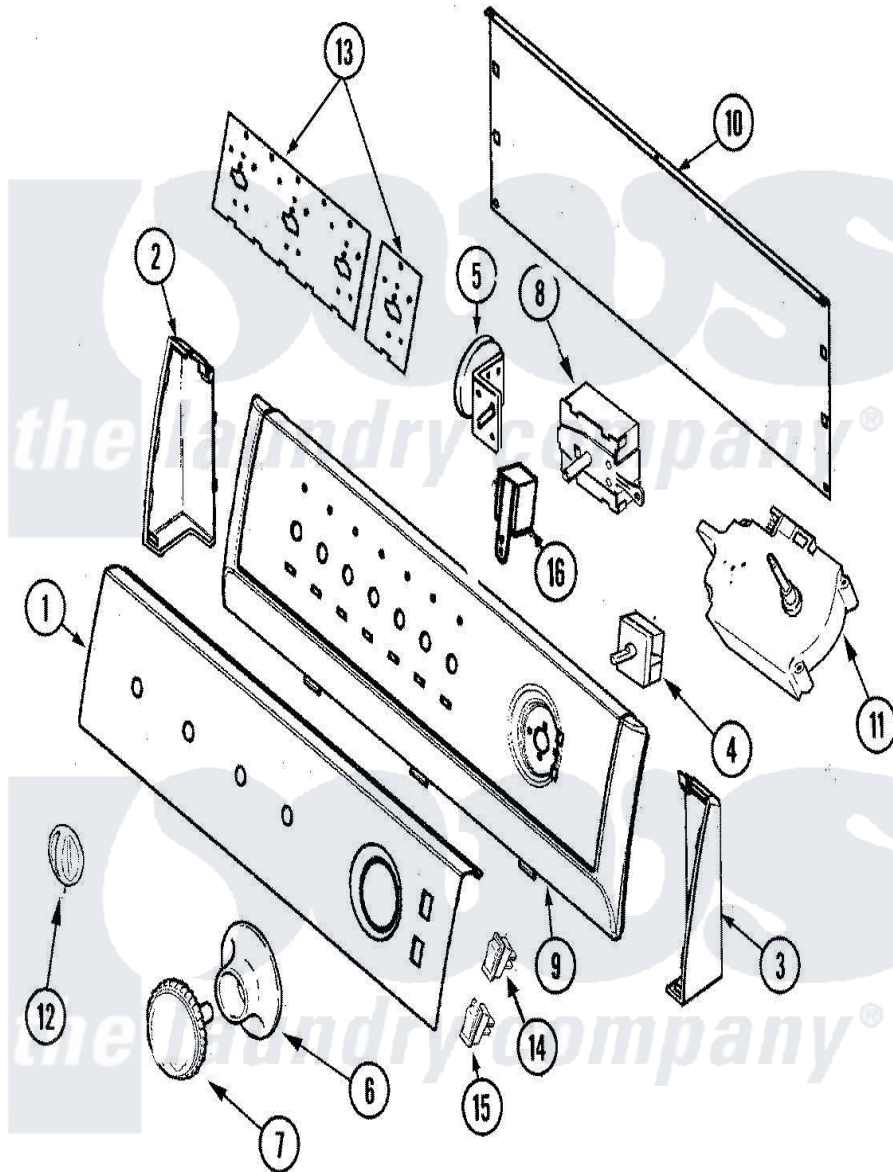

Crosley [Residential Crosley CW8500W Washer Parts](#) Parts Diagram 03 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21002016			Panel, Control
2	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001546			Endcap, Panel
3	21001547			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001852			Switch, Temperature
5	21001882			Switch, Pressure
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
6	21001520			Skirt, Timer Knob
7	21001526			Knob, Timer
8	21001687			Switch, Speed
9	21001552			Frame , Control Panel
10	25-3092	90767		Screw, 8A X 3/8 HeX Washer

10	25-3092	90767	Head Tapping
"	21001527		Shield, Rear
"	25-3457		Screw, Sems
11	21001929		Timer
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
12	21001544		Knob, Selector
13	21001517		Shield, Control
"	21001603		Shield, Control
14	21001482		Switch, Momentary
15	21001813		Switch, Rocker
16	31001397		Buzzer
NI	21002024		Harness, Wiring

the laundry company[®]

the laundry company[®]

the laundry company[®]