


Crosley CW9500W 02 - CONTROL PANEL

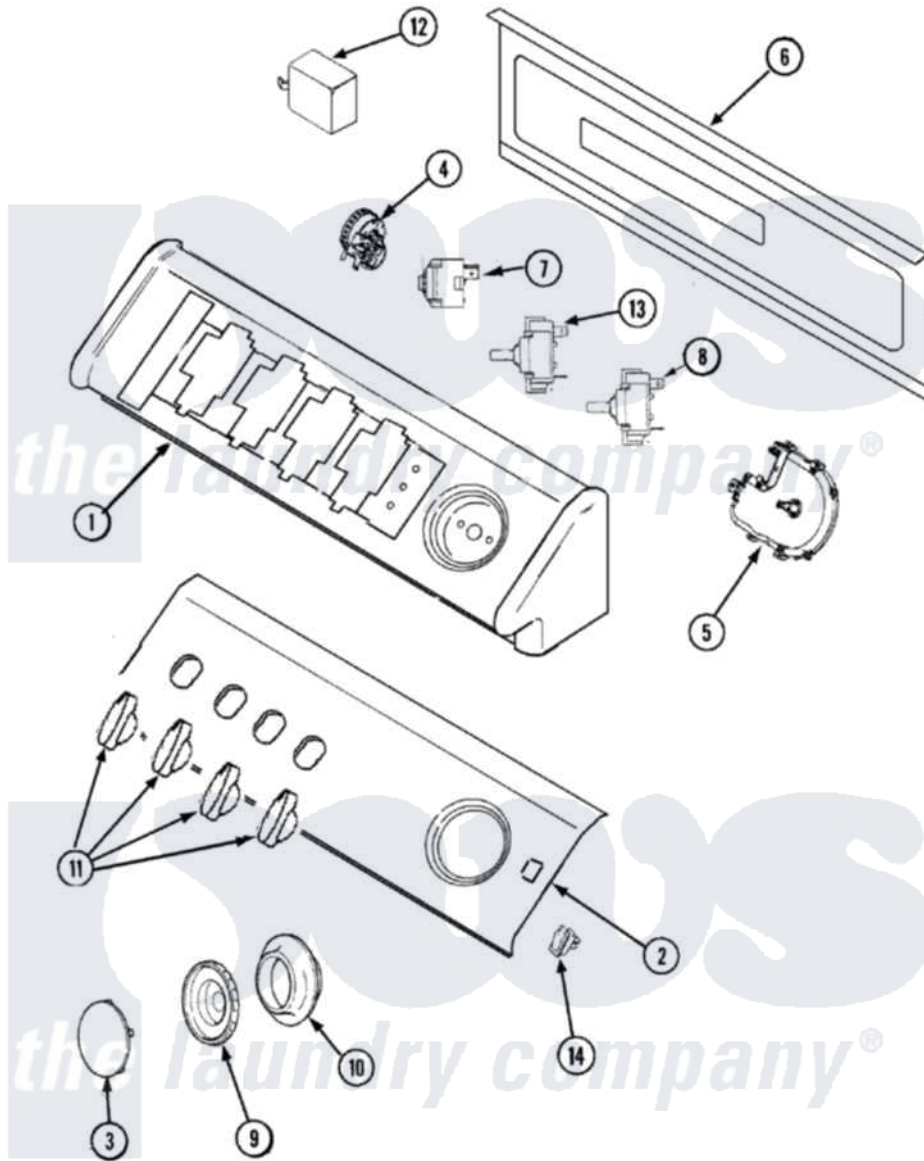

Crosley [Residential Crosley CW9500W Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	27001110		Not Available	CONSOLE (WHT)
2	27001050			Facia Ground Wire Assembly
"	27001198			Facia
3	22001664			Timer Knob Insert/Cap
4	27001127	27001203		Switch, Pressure
5	27001113			Timer
"	33001855	33002917		Screw, No.10-16
6	27001051			Back Panel, Hood/Console
7	27001103			Switch, Rotary
8	27001114			Switch, Rotary
9	22002996	22003952		Knob, Timer
10	22002997			Pin, Locking
"	22002995		Not Available	SKIRT, TIMER KNOB (WHT)
11	22001663			Knob, Selector Switch
12	33001623			Buzzer, Non-Adjustable
13	27001089			Switch, Temperature

