


Crosley CW9500W 06 - TOP AND LID SWITCH

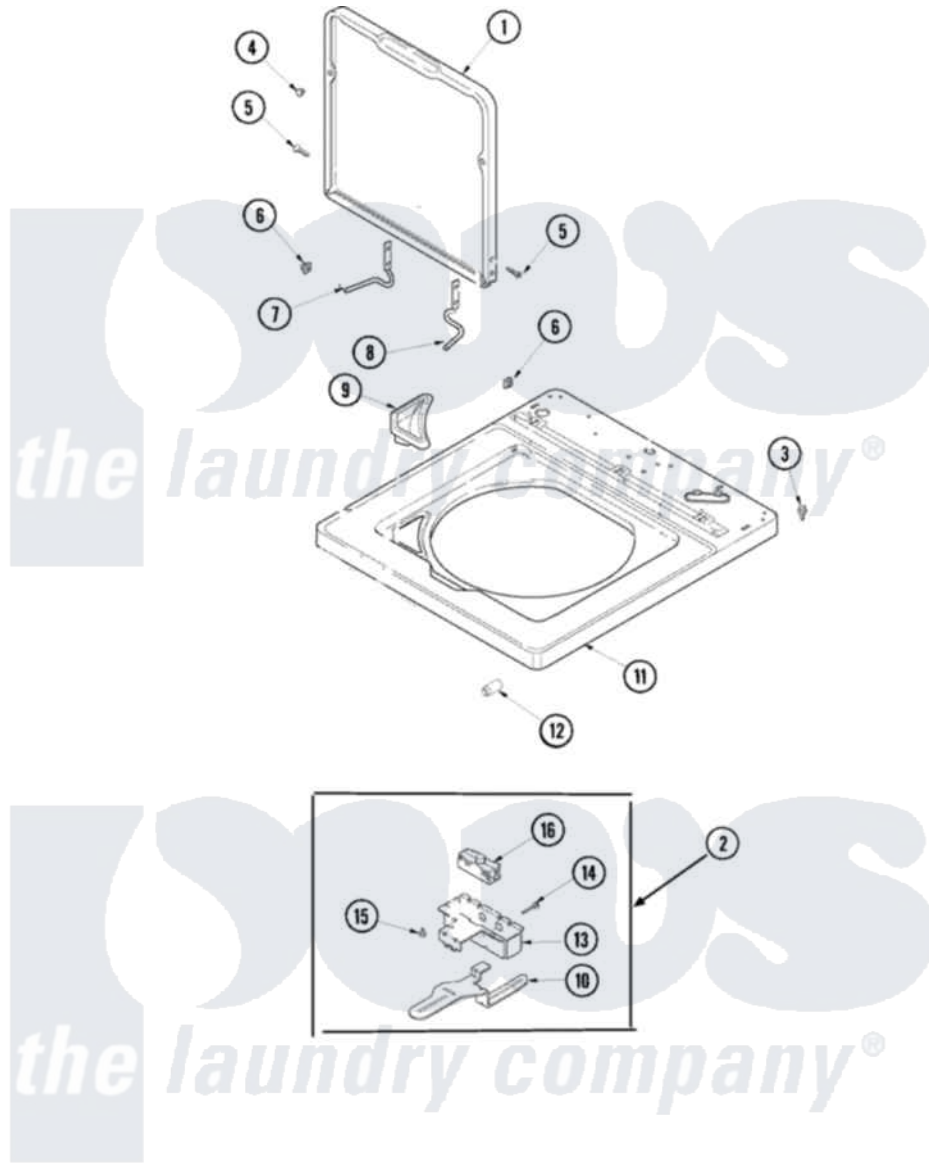

Crosley Residential Crosley CW9500W Washer Parts Parts Diagram 06 - TOP AND LID SWITCH
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	27001199			Lid W/Instruction
2	40034901	40034901P		Assembly- Lid
3	501086	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	40038001			Bumper
5	40039201	W10119828		Screw, Lid Hinge Mounting
6	40008201			Bushing, Hinge
7	40094002			Hinge, Lid Left Stop
8	40094101			Hinge, Lid Right Pass
9	27001117			Dispenser, Bleach
10	40009701			Arm, Lid Switch
11	27001118	27001182		Top
12	40102101			Cap, Hinge
13	40009801			Holder, Lid Switch
14	40040701			Screw, Tapping No.6b-20
15	501086	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

