


Crosley CW9500W 09 - TUB, INNER & OUTER (SERIES 12)

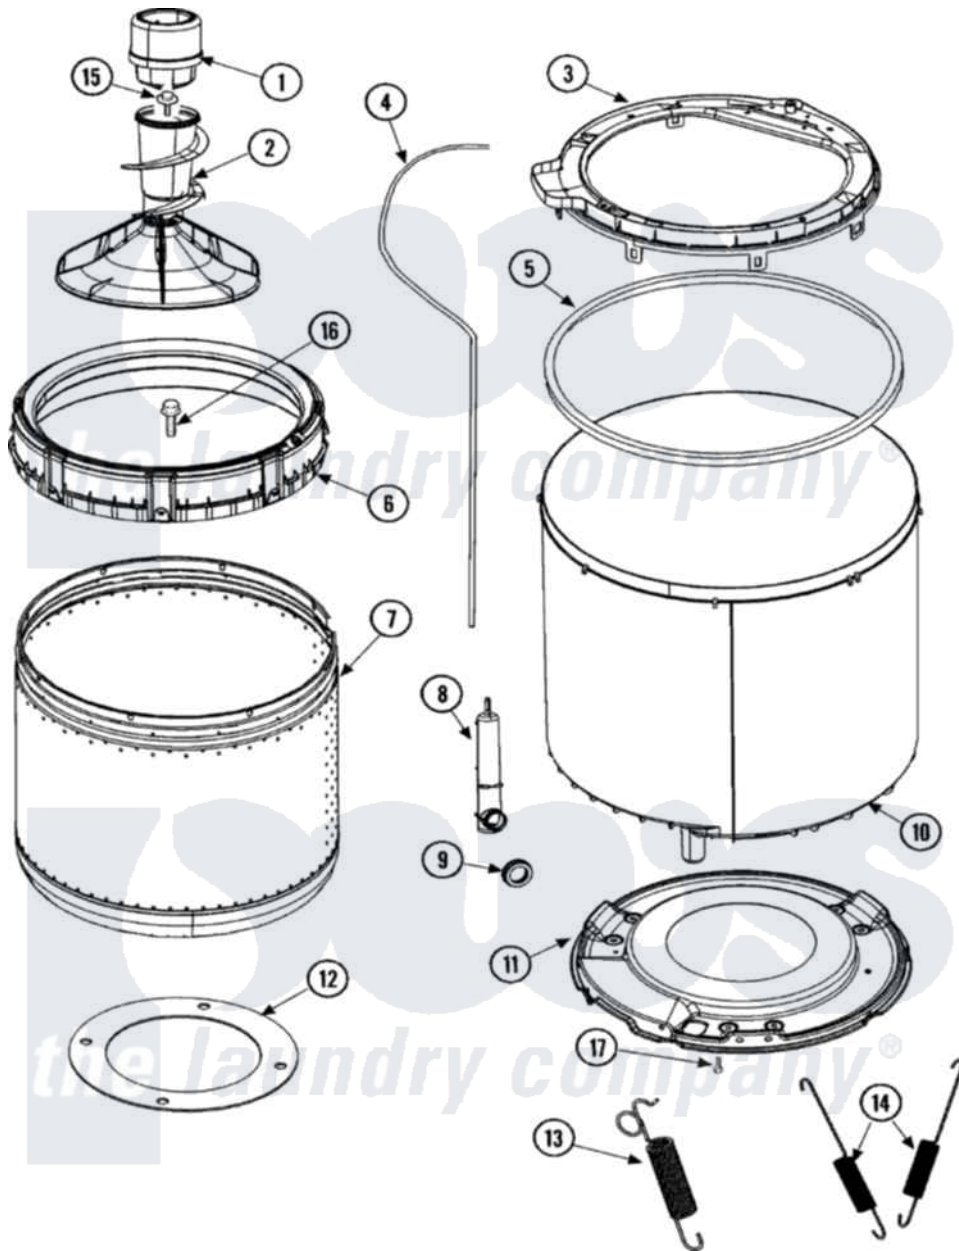

Crosley Residential Crosley CW9500W Washer Parts Parts Diagram 09 - TUB, INNER & OUTER (SERIES 12)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001905			Dispenser, Fabric
2	22004042			Agitator/Auger Assembly
3	27001195		Not Available	COVER, OUTER TUB W GASKET
4	27001194	21001748		Hose, Pressure Switch
5	27001130			Seal, Tub Cover
6	27001052			Balance Ring
7	Y2201200	12002787		Kit- S.s.
8	40008501			Assembly, Pressure Bulb
9	40037801			Grommet
10	40111001P			Tub, Plastic Outer
11	40128701			Screw, 5/16-18 X .50
"	40001102	40001102P		Bottom, Outer Tub
"	40015401			Seal-Head
"	27001067			Bottom, Outer Tub
12	27001222			Gasket, Foam
13	Y2201244			Spring, Counterweight

14	Y37001124		Spring, Tall Tub
15	25-8004	W10309247	Screw
16	Y2201470	W1011678Z	Screw
17	40064301		Screw, 1/4-15 x 3/4 Hex

