


Crosley CW9505W 03 - CONTROL PANEL & TOP

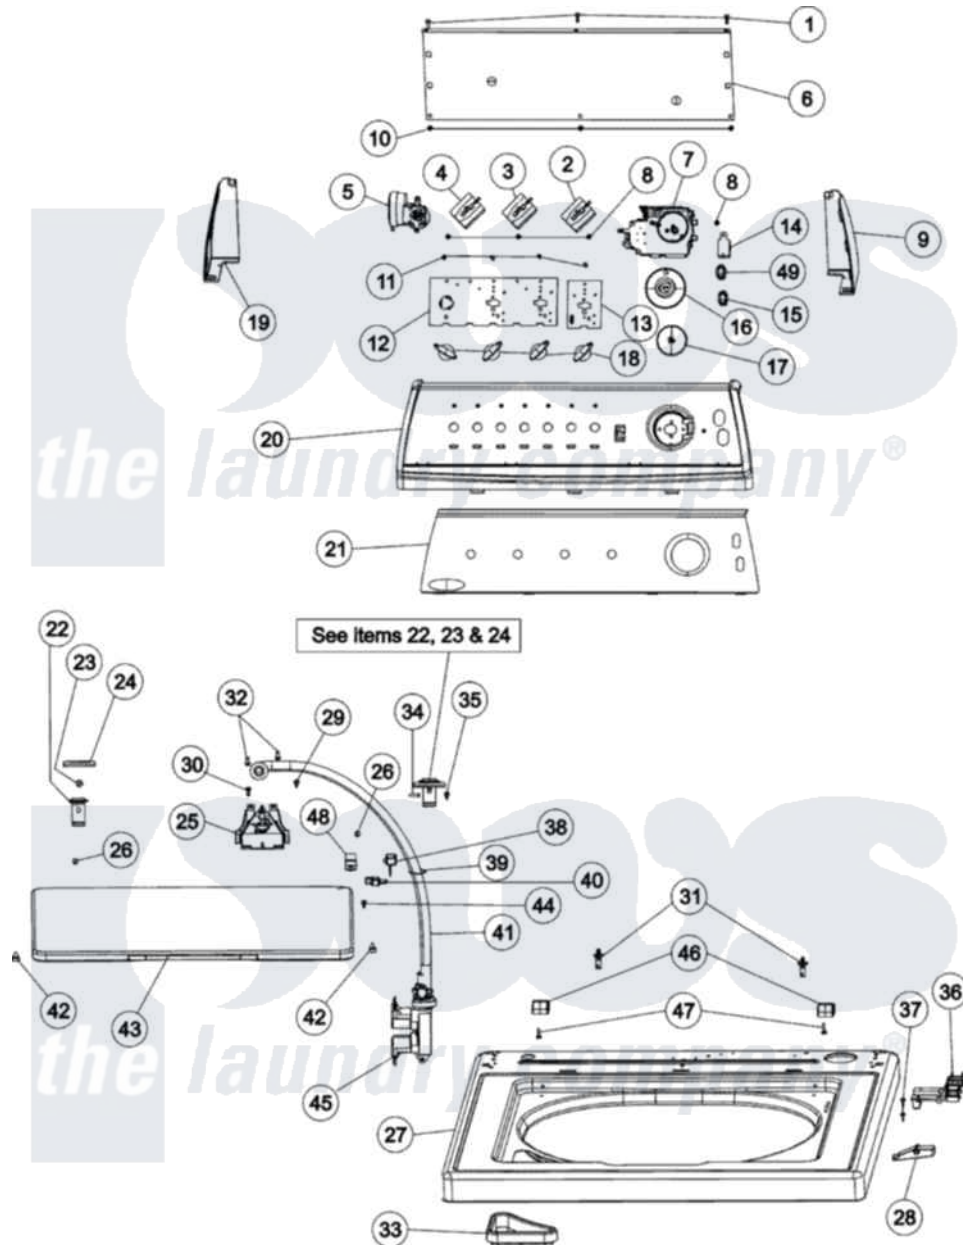

Crosley [Residential Crosley CW9505W Washer Parts](#) Parts Diagram 03 - CONTROL PANEL & TOP
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21002224			Screw
2	21001852			Switch, Temperature
3	21001687			Switch, Speed
4	21001226			Switch, Water Temp. 4 Position
5	Y2201474			Switch, Pressure
6	21001527			Shield, Rear
7	21001929			Timer
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	21001547			Endcap, Panel
10	31001721			Screw, Abno.8-18 x 3/8 Hxws
11	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
12	21002067			Shield, Control
13	21001517			Shield, Control
14	31001397			Buzzer

15	21001813		Switch, Rocker
16	21001520		Skirt, Timer Knob
17	21001985		Knob, Timer
18	21001544		Knob, Selector
19	21001546		Endcap, Panel
20	21001552		Frame , Control Panel
21	21002151		Facia
22	35-2846		Hinge, Cabinet Top
23	Y257732	681414	Screw, 10AB X 1/2
24	35-4128		Pad, Hinge
25	21001854		Flume Assembly
26	25-7893		Screw
27	21001602		Top, Cabinet
28	21001134		Lever, Lid Switch
29	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	31001560		Washer, Roller
31	21001857		Clip, Plastic Snap-In
32	31001721		Screw, Abno.8-18 x 3/8 Hxws
33	21001597		Dispenser, Bleach
34	25-7438		Screw
35	31001721		Screw, Abno.8-18 x 3/8 Hxws
36	21001135		Housing, Lid Switch
37	21001136	3400872	Screw, 8-18 X 3/8
38	43-0057		Actuator, Door Switch
39	25-7430		Clip, Wiring Harness
40	35-2045		Pin, Hinge
41	12002749		Hose, Flume Kit
"	35-2378	12002749	Hose, Flume Kit
42	35-0581		Bumper, Door
43	35-2026		Lid
44	31001721		Screw, Abno.8-18 x 3/8 Hxws
45	21001932		Valve, Water Inlet
46	35-2044		Hinge, Lid
47	25-7893		Screw
48	21001148	12001187	Kit, Lid Switch Assembly
49	21001482		Switch, Momentary

