


Hoover HAV1200AWW 01 - BASE

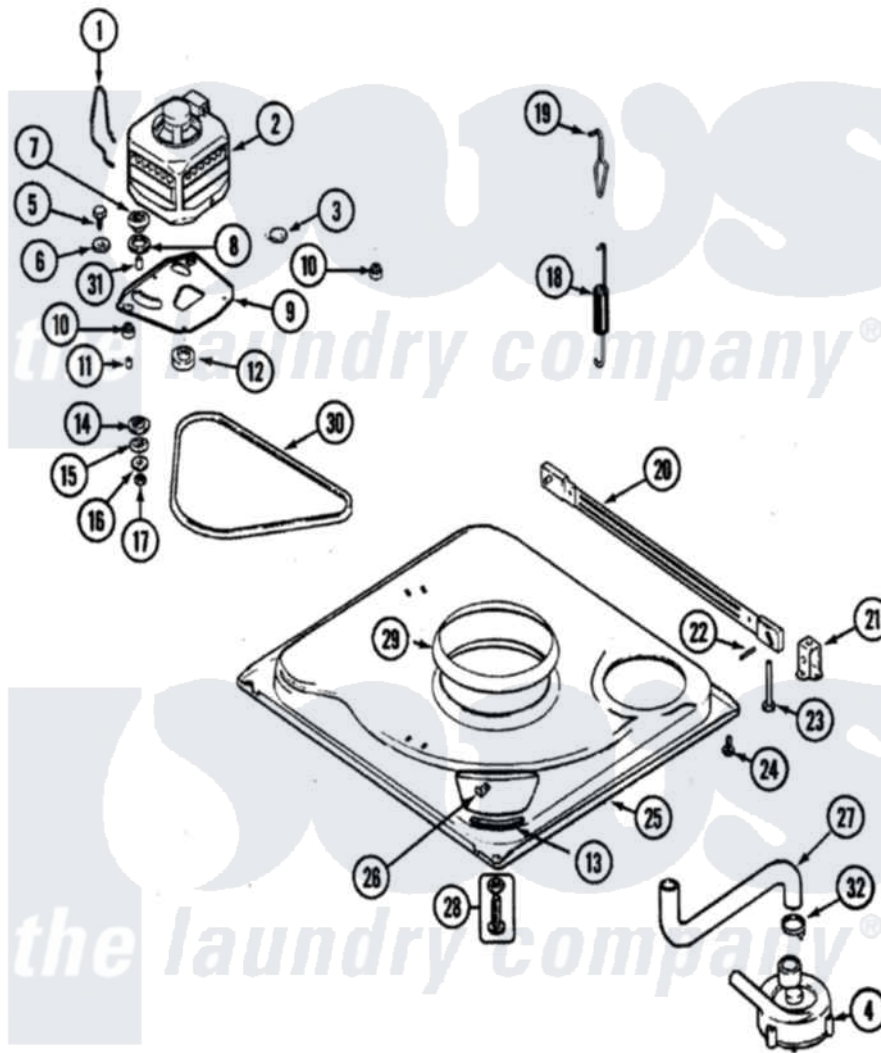

Hoover [Residential Hoover HAV1200AWW Washer Parts](#) Parts Diagram 01 - BASE
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001110	22004376		Spring, Motor Pivot
2	21001632			Motor
3	21001486			Foot Slide, Isolator
4	21001873	35-6780		Pump-Water
"	21001732	35-6465		Pump Assem
5	25-7833	21001977		Screw
6	25-7834			Washer, Motor/Base Screw
7	33-9946			Isolator, Motor
8	35-3570			Washer, Motor Pivot
9	21001366	21001783		Plate And Screw Assembly
10	35-3646			Isolator, Motor Plate
11	25-7831			Spacer, Mounting
12	25-7117			Set Screw
"	21001475	W10143344		Pulley
13	35-2065			Pad, Motor Plate
14	35-3571			Slide, Motor Pivot

15	33-9967		Washer, Motor Isolator
16	25-7047		Washer, Flat
17	25-7325	Y707702	Locknut
18	21001598		Spring, Suspension
19	21001166		Hook, Suspension Spring
20	21001754	21001881	Bar, Stabilizer
21	35-2046		Bracket, Stabilizer
22	35-2052		Pin, Stabilizer
23	35-3020	22004469	Leg And Foot Self Stabilizing
24	25-7828	489483	Screw 10-32 X 1/2
25	21001169	12002701	Base Kit
"	21001893	12002701	Base Kit
26	25-7845		Speednut, Motor
27	21001915		Hose, Tub To Pump
"	35-3584	21001915	Hose, Tub To Pump
28	35-3507	25001119	Foot And Pad Assembly
29	21001161	21002026	Snubber
30	21352320		Belt, Drive
31	25-7830		Spacer
32	21002254	285655	Clamp, Hose
"	25-6068	285655	Clamp, Hose

