


Hoover HWA2006W 01 - BASE & DRIVE (ORIG. - REV. D)

HOOVER HWA2006 BASE & DRIVE

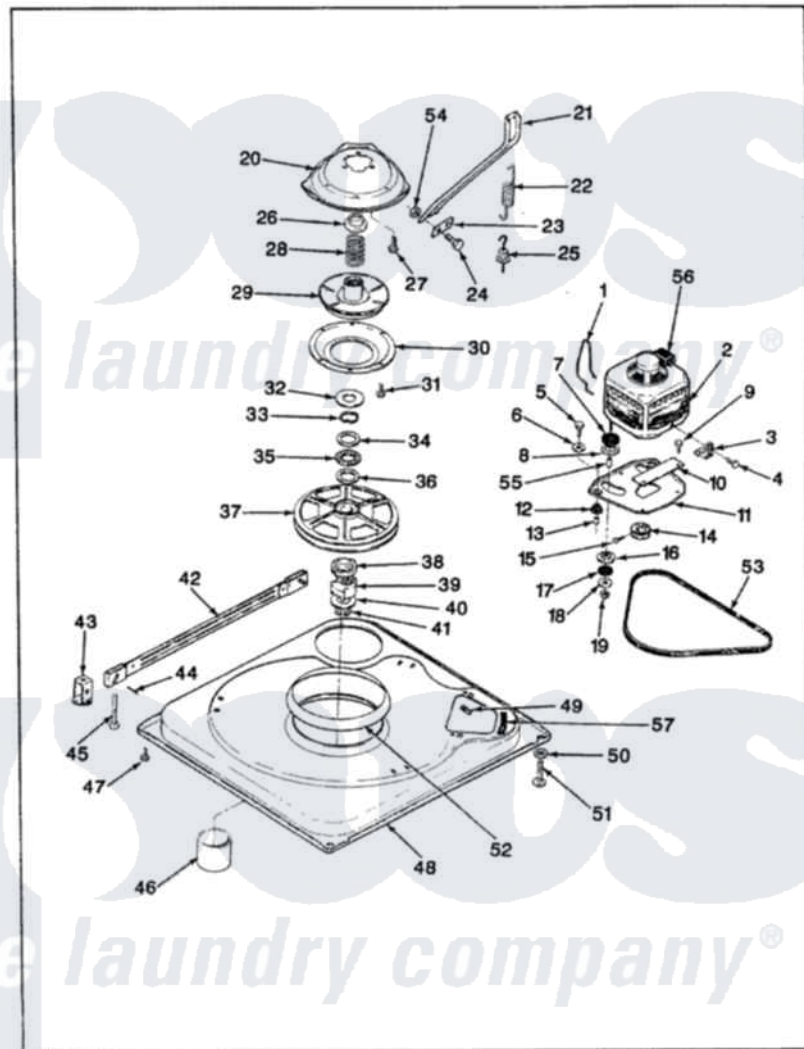

ISSUED 1/90

Hoover [Residential Hoover HWA2006W Washer Parts](#) Parts Diagram 01 - BASE & DRIVE (ORIG. - REV. D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0235			Spring, Motor Pivot
2	LA-2002		Not Available	MOTOR KIT
"	35-2030		Not Available	MOTOR
3	33-9945			Slide, Foot
4	25-7418	33001178		Back, Tumbler
5	25-7833	21001977		Screw
6	25-7834			Washer, Motor/Base Screw
7	33-9946			Isolator, Motor
8	33-9944	35-3570		Washer, Motor Pivot
9	25-3083	212951		Screw, No.6-32 X 1/4 Inch
10	33-9947		Not Available	DBL.PIVOT SLIDE
11	35-2021	21001783		Plate And Screw Assembly
"	35-2810	21001783		Plate And Screw Assembly
12	33-9941	35-3646		Isolator, Motor Plate
13	25-7831			Spacer, Mounting
14	35-2124	W10143344		Pulley

15	25-7117		Set Screw
16	33-9943	35-3571	Slide, Motor Pivot
17	33-9967		Washer, Motor Isolator
18	25-7047		Washer, Flat
19	25-7325	Y707702	Locknut
20	35-2015		Not Available
			SUSPENSION HOUSING
21	25-7930	21001858	Screw 5/16-18 x 1/2
"	35-2024		Brace, Tub
"	35-2531		Not Available
			BRACE, TUB
22	35-2092		Not Available
			SUSPENSION SPRING
"	35-2682		Hook Suspension Spring
23	35-2025		Not Available
			PLATE, REINFORCEMENT
24	25-7912		Screw
25	25-7365		Eye Bolt
26	35-2017		Retainer, Brake Spring
27	25-7895	21001858	Screw 5/16-18 x 1/2
28	35-2112	21001910	Spring, Brake
29	35-2113	35-6714	Brake Roto
30	35-2018	35-6918	Stator, Brake
31	25-7359		Screw
32	35-2016		Not Available
			SPACER-BEARING
33	25-7909		Washer
34	35-2318		Not Available
			WASHER
35	35-2078	12002213	Thrust Bearing Kit
36	35-2081	35-3456	Washer
37	35-2683	12002213	Thrust Bearing Kit
"	35-2119	12002213	Thrust Bearing Kit
38	35-2441	12002213	Thrust Bearing Kit
39	35-2439	12002213	Thrust Bearing Kit
40	35-2082		Washer, 1.25ODX.530IDX.062
41	25-7854		Ring, Retaining
42	35-2049	21001881	Bar, Stabilizer
43	35-2046		Bracket, Stabilizer
44	35-2052		Pin, Stabilizer
45	35-2039		Not Available
			PAD, FOOT
"	35-2050	22004469	Leg And Foot Self Stabalizing
46	35-2007		Cap, Dust
47	25-7828	489483	Screw 10-32 X 1/2
48	35-2019		Not Available
			BASE, WASHER
"	35-2815		Not Available
			BASE, WASHER
49	25-7838	25-7845	Speednut, Motor
50	25-7915		Hex Nut
51	35-0772	25001119	Foot And Pad Assembly
"	35-0837	25001119	Foot And Pad Assembly
52	35-2357	21002026	Snubber
53	35-2320	21352320	Belt, Drive
54	25-0226		Not Available
			HEX NUT
55	25-7830		Spacer
56	33-9765		Switch, Motor
"	25-7413		Not Available
			FLAT WASHER
57	35-2065		Pad, Motor Plate