


Inglis IV87001 02 - TOP AND CONSOLE PARTS

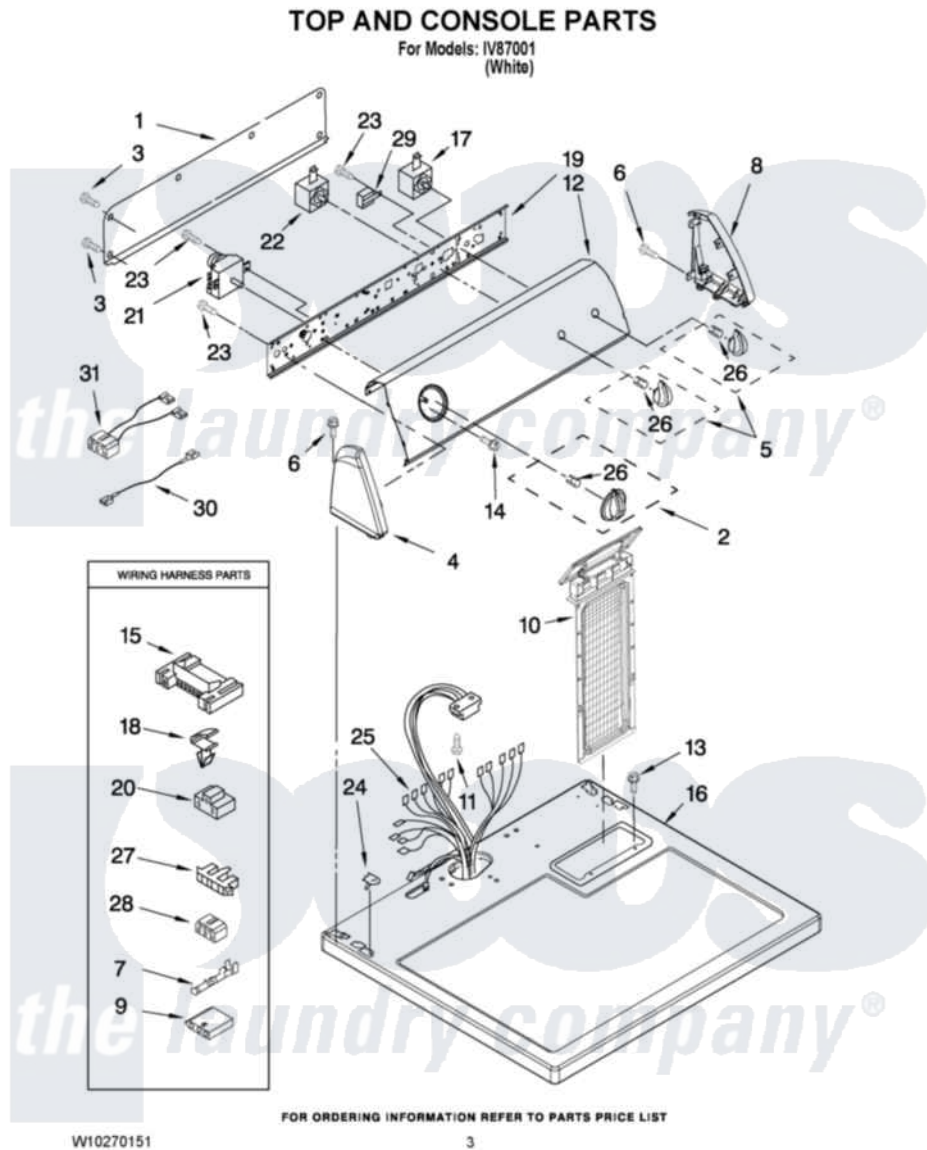

Inglis [Residential Inglis IV87001 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	8543273		Not Available	Timer Knob Assembly (Grey)
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
5	8543270		Not Available	Knob, Control (3) (Grey)
6	388326			Screw, 8-18 X 1.25
7	94614			Terminal
8	8271359	279962		Endcap
9	3936144			Do-It-Yourself Repair Manuals
10	8558463			HANDLE AND LINT SCREEN ASSEMBLY
11	343641	681414		Screw, 10AB X 1/2
12	W10167871		Not Available	Panel, Control
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding
15	3395683			Receptacle, Multi-Terminal

16	8557930	8563985	Top
17	3398095		Switch, Push-To-Start
18	3394427		Clip-Harness
19	8271418		Bracket, Control
20	3401144		Connector
21	W10185982		Timer Assembly
22	3399640		Switch, Rotary
23	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
24	357213		Nut, Push-In
25	W10186090	Not Available	HARNESS, WIRING
26	8536939		Clip, Knob
27	3397269		Connector, Timer
28	3347243		Block, Disconnect
29	694419		Mini-Buzzer
30	3401684		Jumper, Wire
31	3976562		Jumper, Wire

