


Inglis YIED4400VQ1 02 - TOP AND CONSOLE PARTS

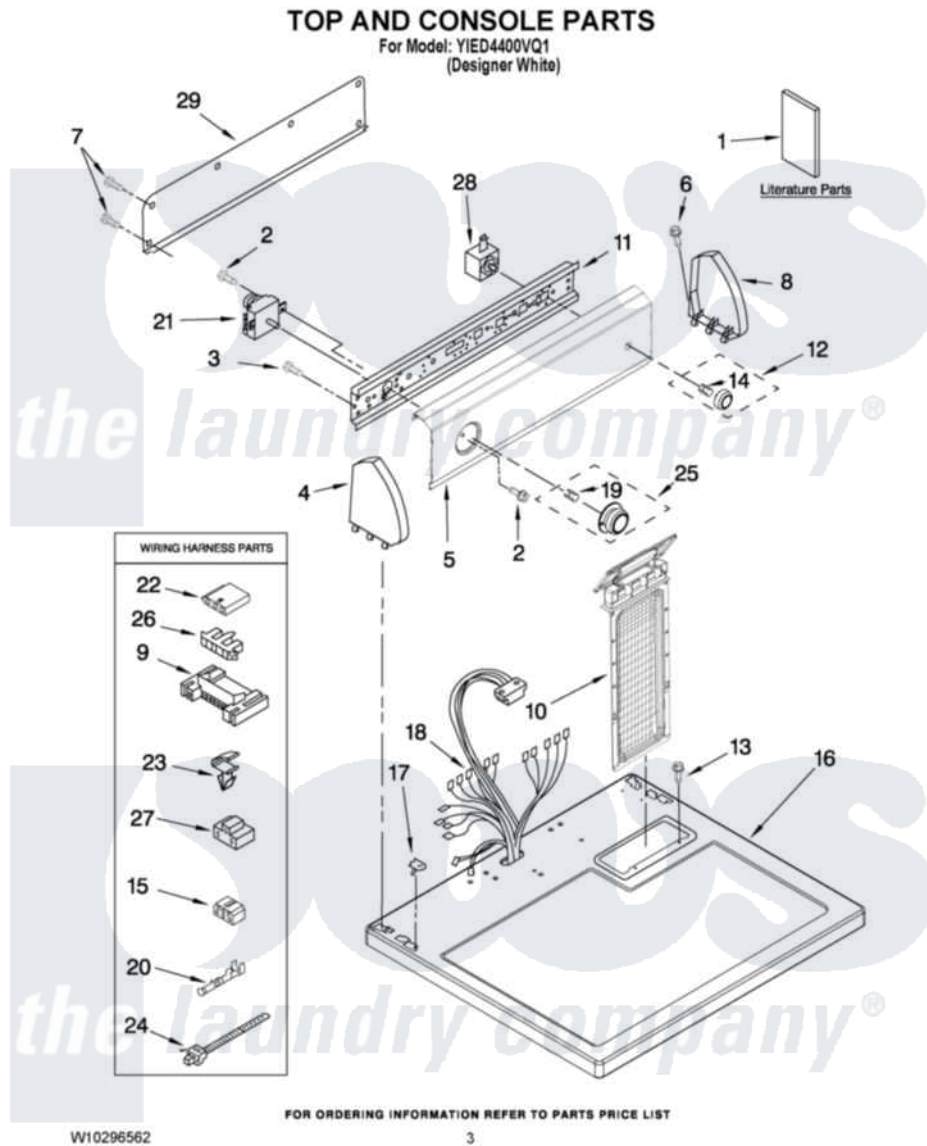

Inglis [Residential Inglis YIED4400VQ1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10185977		Not Available	Wiring Diagram
"	W10150612		Not Available	Instructions, Installation
"	W10151578		Not Available	Use & Care Guide
"	W10281715		Not Available	DRYER CYCLE SHEET
"	W10213194		Not Available	ENERGY GUIDE
2	8533951	3400859		Screw, Grounding
3	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	8274437	279960		Endcap
5	W10207807			Panel, Control
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8274434	279960		Endcap
9	3395683			Receptacle, Multi-Terminal
10	8558463			HANdle And Lint Screen Assembly
11	8271418			Bracket, Control

12	8538959		Knob, Push-To-Start
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8536939		Clip, Knob
15	3347243		Block, Disconnect
16	8557930	8563985	Top
17	357213		Nut, Push-In
18	W10186165	Not Available	HARNES, WIRING
19	688805		Clip, Spring Knob
20	94614		Terminal
21	W10185972		Timer, 60 Hz
22	3936144		Do-It-Yourself Repair Manuals
23	3394427		Clip-Harness
24	3391249		Cable Tie, Push Mount
25	8538953		Timer Knob Assembly
26	3397269		Connector, Timer
27	3401144		Connector
28	3977456		Switch, Push-To-Start
29	8274261		Do-It-Yourself Repair Manuals

