


Magic Chef CAV2004AWW 05 - TOP

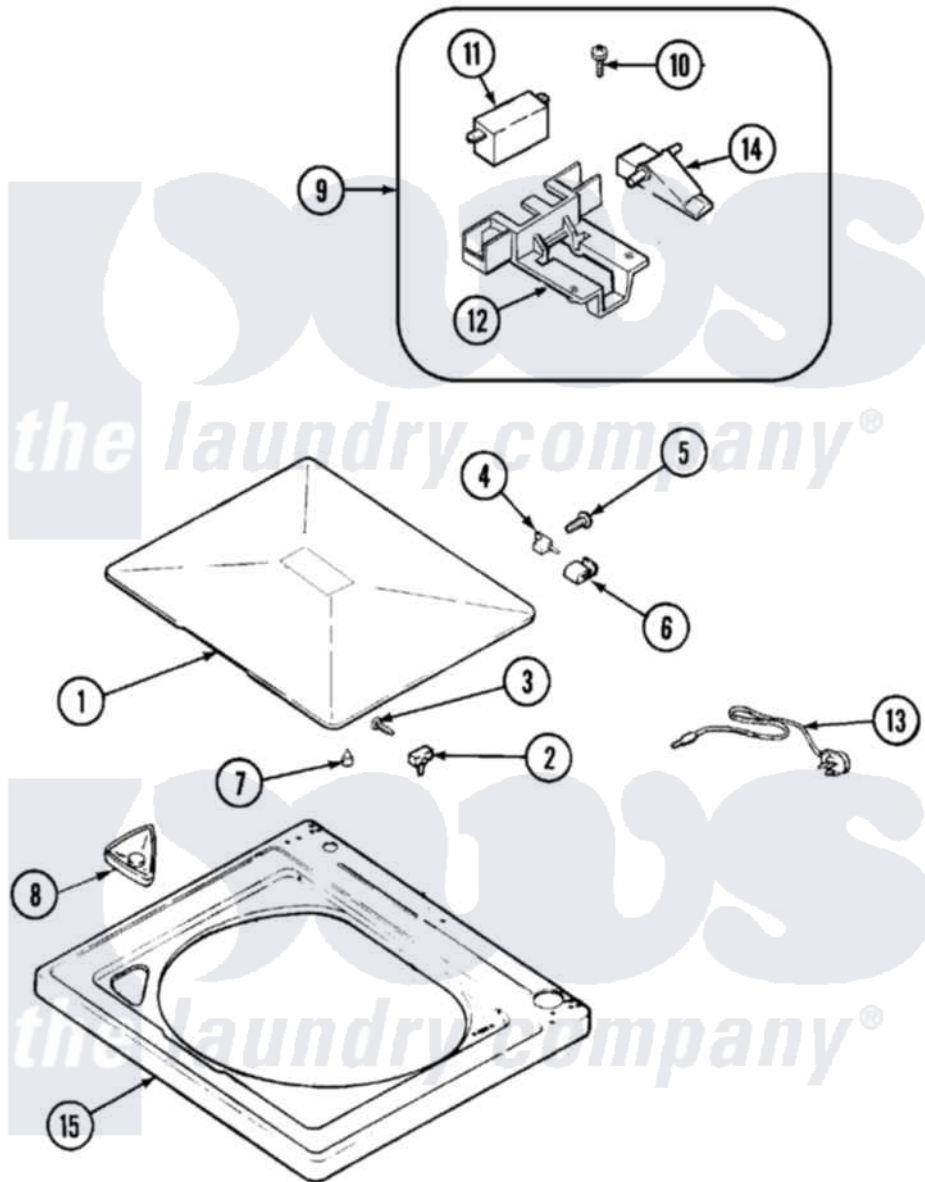

Magic Chef [Residential Magic Chef CAV2004AWW Washer Parts](#) Parts Diagram 05 - TOP
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|--------------------------|--------------------------|--------|--------------------------|
| 1 | 35-2026 | | | Lid |
| 2 | 43-0057 | | | Actuator, Door Switch |
| 3 | 25-7438 | | | Screw |
| 4 | 35-2045 | | | Pin, Hinge |
| 5 | 25-7893 | | | Screw |
| 6 | 35-2044 | | | Hinge, Lid |
| 7 | 35-0581 | | | Bumper, Door |
| 8 | 21001597 | | | Dispenser, Bleach |
| 9 | 21001137 | 12001187 | | Kit, Lid Switch Assembly |
| 10 | 21001136 | 3400872 | | Screw, 8-18 X 3/8 |
| 11 | 21001148 | 12001187 | | Kit, Lid Switch Assembly |
| 12 | 21001135 | | | Housing, Lid Switch |
| 13 | 21001592 | | | Cord, Power |
| " | 22003817 | 3370225 | | Screw |
| 14 | 21001134 | | | Lever, Lid Switch |
| 15 | 21001602 | | | Top, Cabinet |