


# Magic Chef CAV2050AWW 03 - CONTROL PANEL

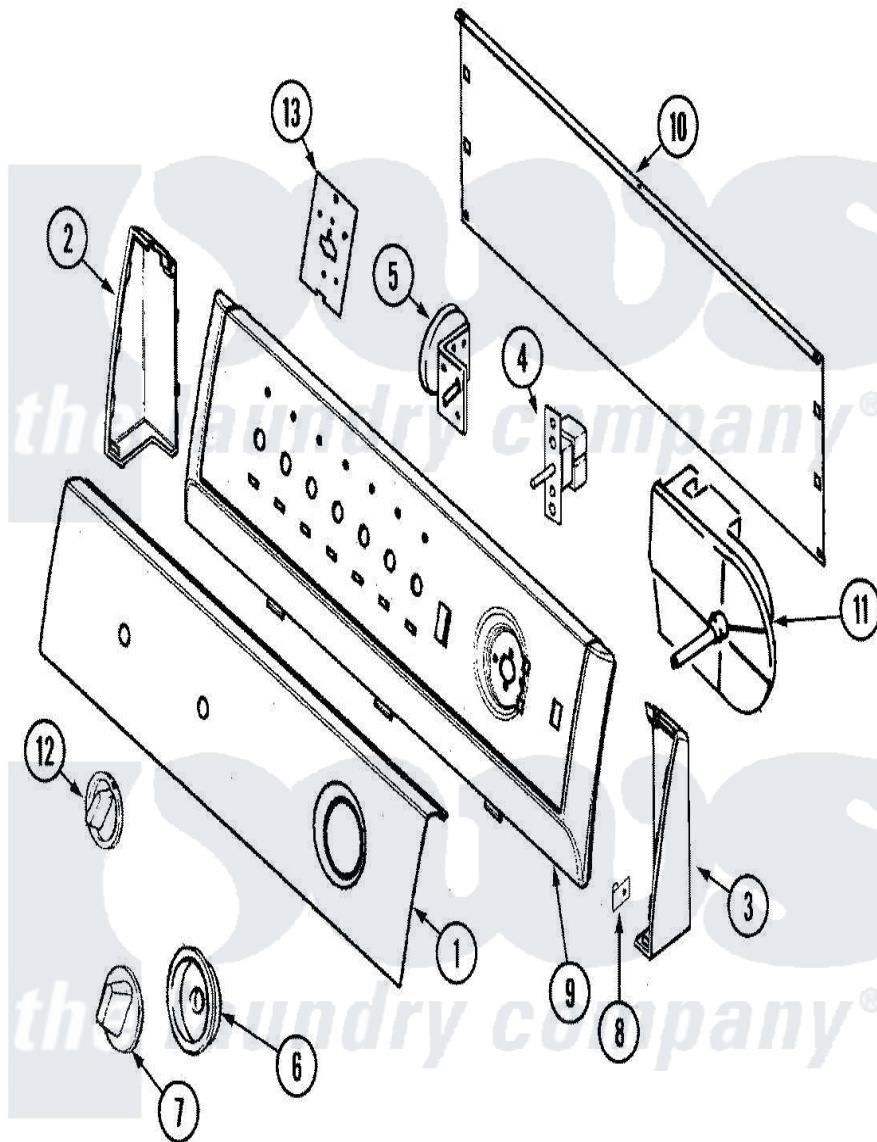

Magic Chef [Residential Magic Chef CAV2050AWW Washer Parts](#) Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">21001626</a>			Panel, Control
2	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001636	<a href="#">21001547</a>		Endcap, Panel
3	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001629	<a href="#">21001546</a>		Endcap, Panel
4	<a href="#">21001139</a>			Switch, Water Temp. 3 Position
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
5	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001625	<a href="#">21001741</a>		Switch, Pressure
8	<a href="#">25-7851</a>			Speedclip, End Cap To Top
9	21001635	<a href="#">21001552</a>		Frame , Control Panel
10	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">25-3457</a>			Screw, Sems

"	<a href="#">21001527</a>		Shield, Rear
"	25-7853	<a href="#">25-7933</a>	Ring, Retaining
11	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">21001522</a>		Timer
12	<a href="#">21001544</a>		Knob, Selector
13	<a href="#">21001517</a>		Shield, Control
"	53-2504	<a href="#">31001193</a>	Pad, Shield
"	<a href="#">31001193</a>		Pad, Shield
NI	21001613	Not Available	MANUAL, USE & CARE
"	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF
"	<a href="#">12002417</a>		Wire Kit

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>