


# Magic Chef CAV4000AWA 03 - TOP

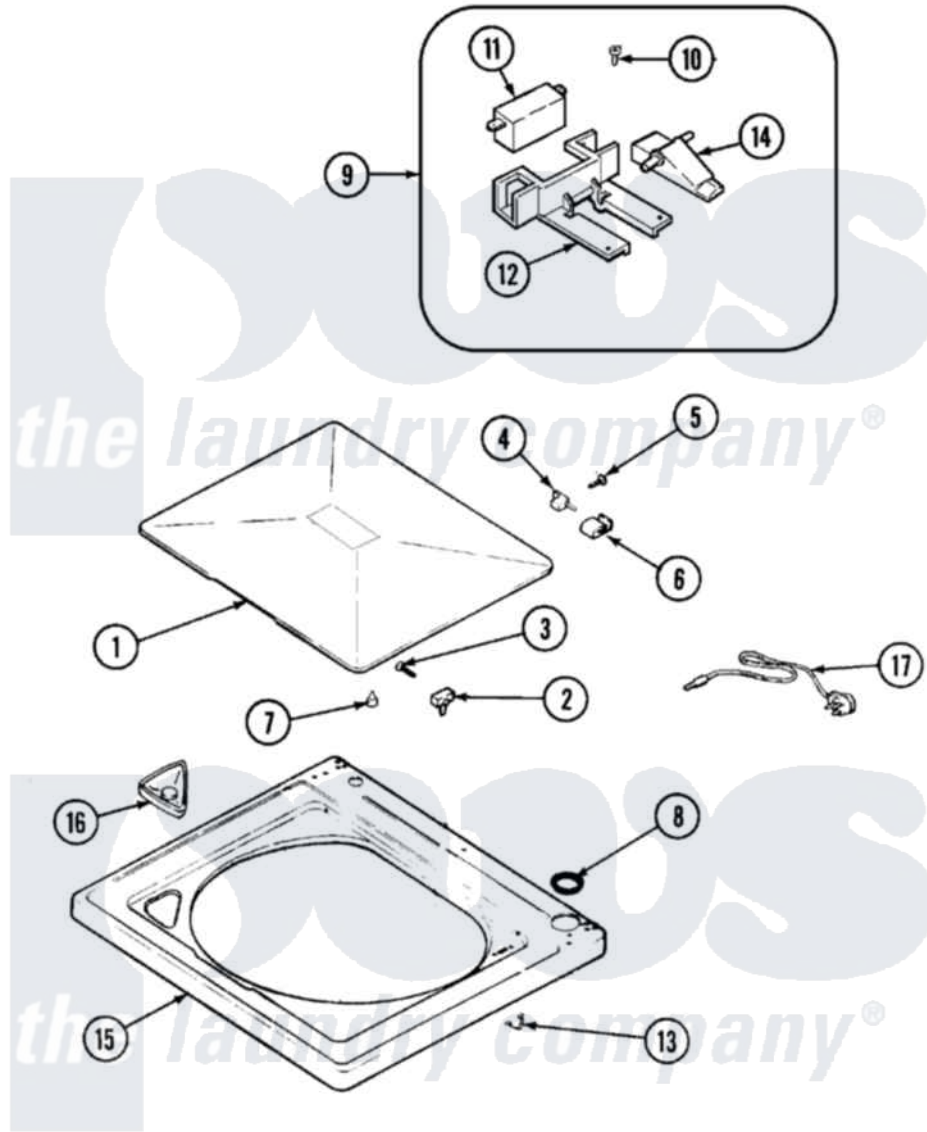

Magic Chef [Residential Magic Chef CAV4000AWA Washer Parts](#) Parts Diagram 03 - TOP  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2026-24		Not Available	LID (ALM)
2	<a href="#">43-0057</a>			Actuator, Door Switch
3	<a href="#">25-7438</a>			Screw
4	<a href="#">35-2045</a>			Pin, Hinge
5	<a href="#">25-7893</a>			Screw
6	<a href="#">35-2044</a>			Hinge, Lid
7	<a href="#">35-0581</a>			Bumper, Door
8	<a href="#">35-2063</a>			Bushing, Insulator
9	21001137	<a href="#">12001187</a>		Kit, Lid Switch Assembly
10	21001136	<a href="#">3400872</a>		Screw, 8-18 X 3/8
11	21001148	<a href="#">12001187</a>		Kit, Lid Switch Assembly
12	<a href="#">21001135</a>			Housing, Lid Switch
13	<a href="#">25-7878</a>			Clip
14	<a href="#">21001134</a>			Lever, Lid Switch
15	<a href="#">21001763</a>			Top, Cabinet
16	<a href="#">21001597</a>			Dispenser, Bleach

