


Magic Chef CAV4004AWW 03 - CONTROL PANEL

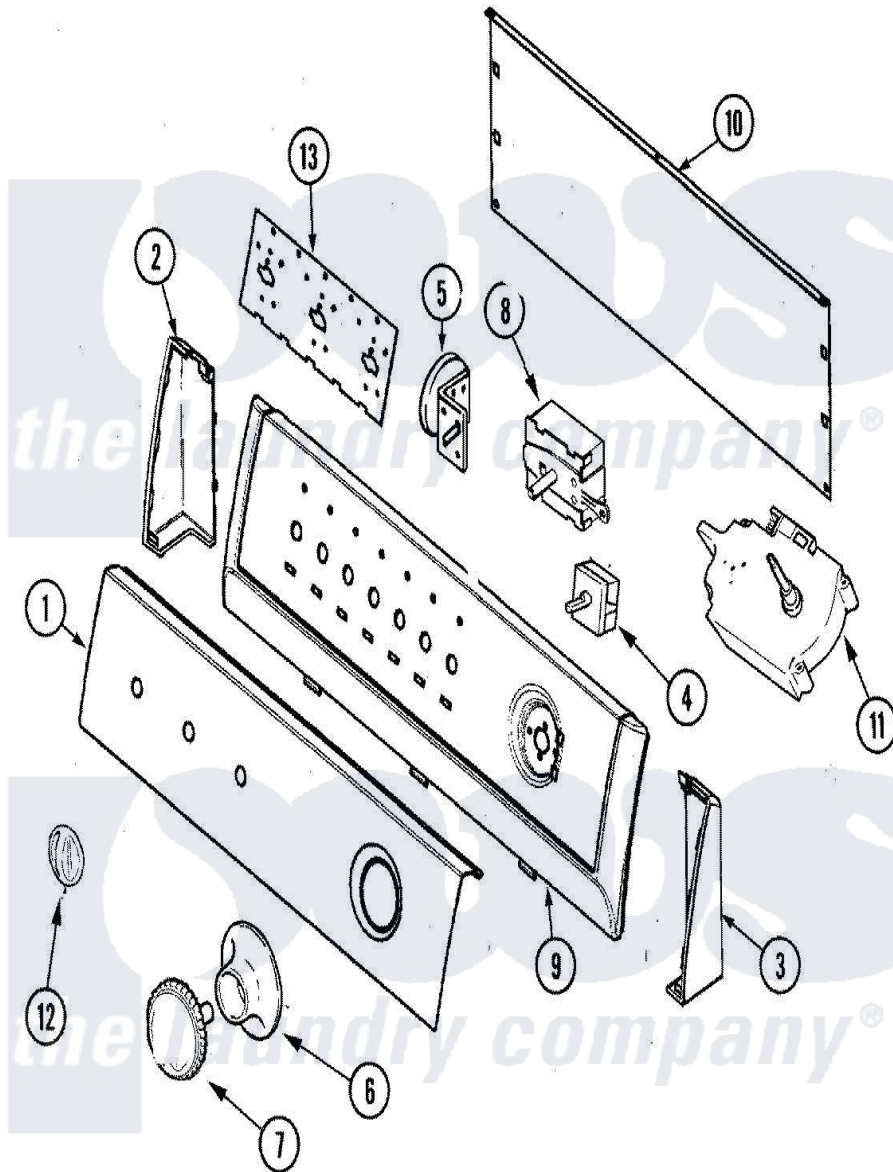

Magic Chef [Residential Magic Chef CAV4004AWW Washer Parts](#) Parts Diagram 03 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21002022			Panel, Control / Facia
"	21002157			Facia
2	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001546			Endcap, Panel
3	21001547			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	31001443			Switch, Two Pos Rotary
"	31001190			Switch, Two Position Rotary
5	21001882			Switch, Pressure
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	Y2201474			Switch, Pressure
6	21001520			Skirt, Timer Knob
7	21001526			Knob, Timer
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

"	21001226		Switch, Water Temp. 4 Position
9	21001552		Frame , Control Panel
10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001527		Shield, Rear
11	21001561		Timer
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
12	21001544		Knob, Selector
13	21002067		Shield, Control
"	21001603		Shield, Control

Howes
the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]