


Magic Chef CYE2000AZW 02 - CONTROL PANEL

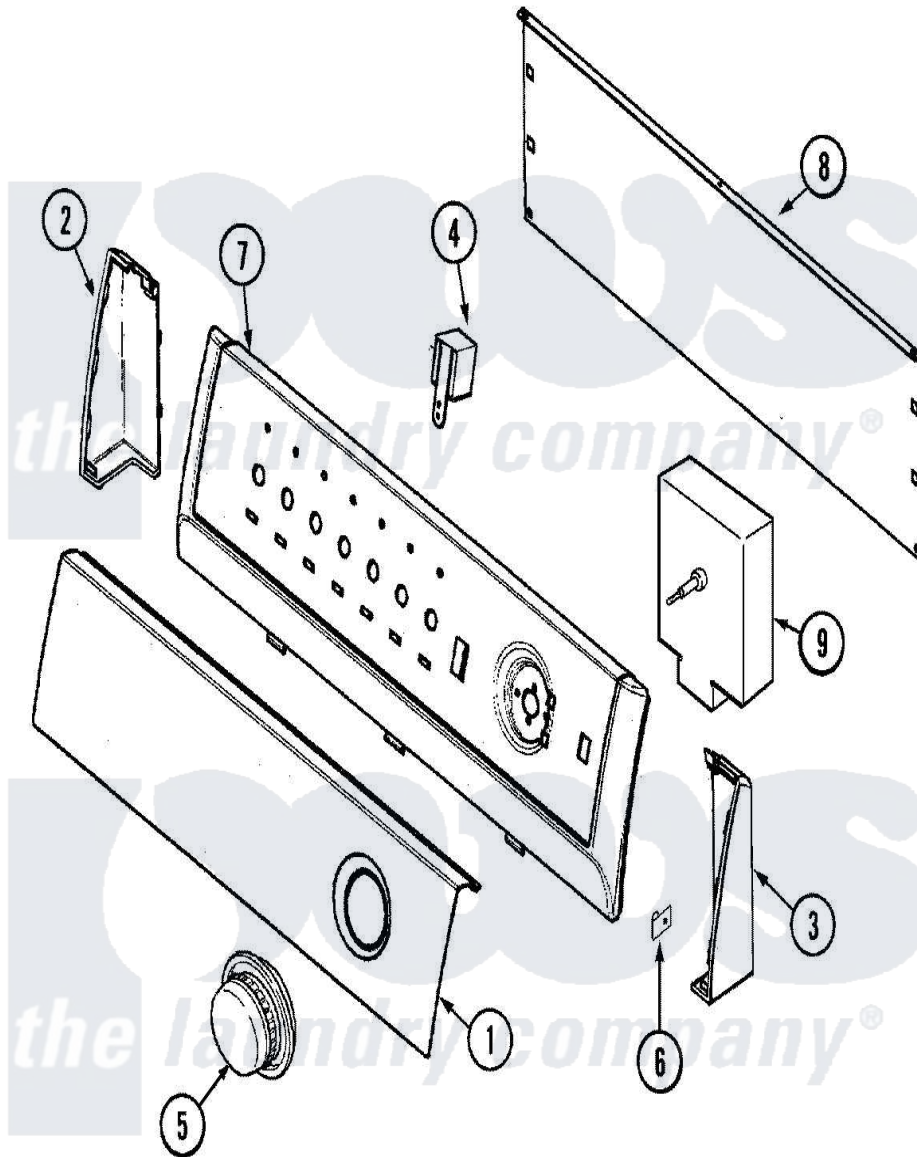

Magic Chef [Residential Magic Chef CYE2000AZW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001383	31001434		Panel, Control
2	21001546			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	21001547			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	53-1639			Buzzer Assembly
5	31001388			Knob/Skirt, Timer
6	25-7851			Speedclip, End Cap To Top
7	21001552			Frame , Control Panel
8	21001527			Shield, Rear
"	25-3457			Screw, Sems
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	63-6743	31001484		Resistor Assembly
"	31001108			Timer

NI	21001419	Not Available	MANUAL, LAUNDERING TIPS
"	31001406		Manual, Use And Care
"	31001413	Not Available	MANUAL, USE & CARE (FRCH)
"	31001460	Not Available	MANUAL, USE & CARE (SPAN)

