


Magic Chef CYE3004AZW 02 - CONTROL PANEL

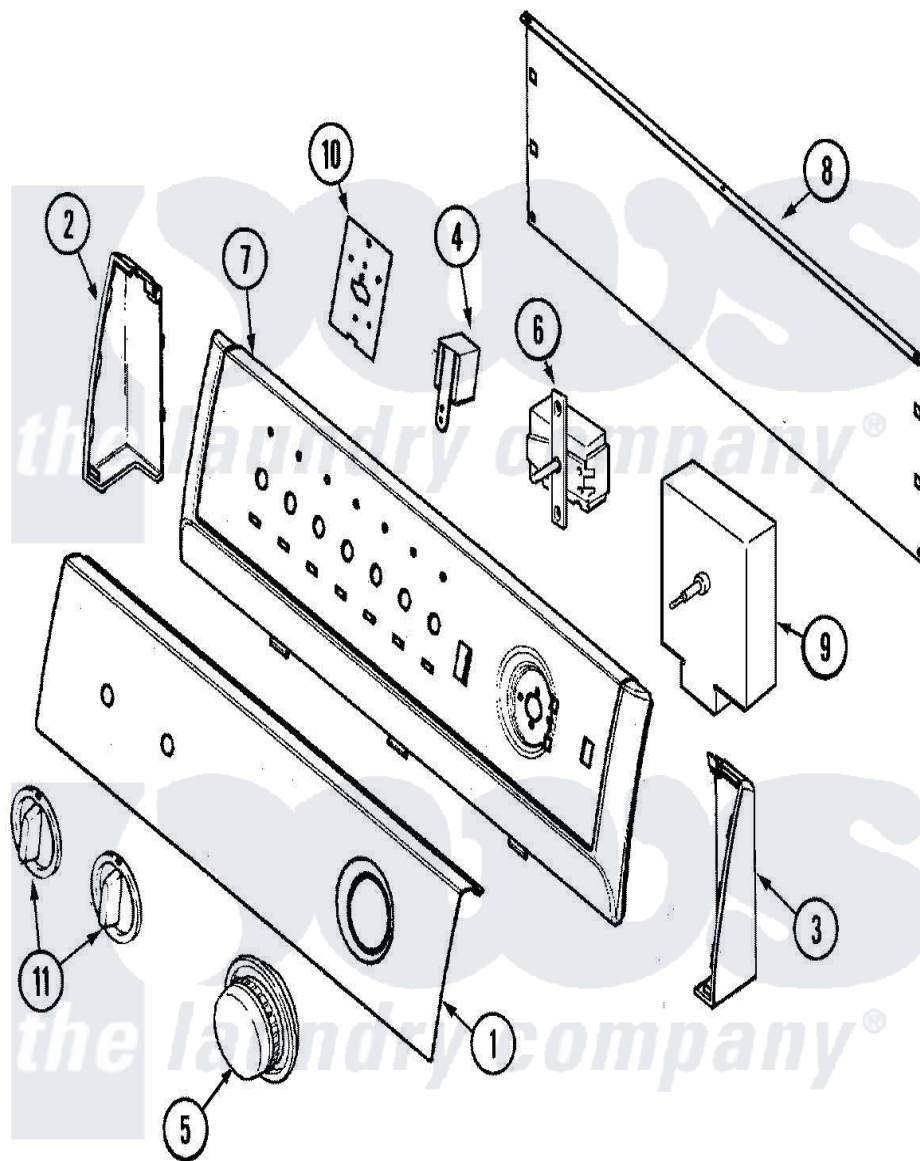

Magic Chef [Residential Magic Chef CYE3004AZW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001738			Panel, Control
2	21001546			Endcap, Panel
3	21001547			Endcap, Panel
4	31001397			Buzzer
5	31001388			Knob/Skirt, Timer
6	31001449			Switch, Selector
"	53-4394			Switch, Temperature
7	21001552			Frame , Control Panel
8	21001527			Shield, Rear
9	53-1810			Timer
"	31001484			Resistor Assembly
10	21001517			Shield, Control
11	21001544			Knob, Selector
NI	31001496			Harness, Wire
"	53-4453			Harness, Wiring
"	21001978			Lead Assembly

"

[31001740](#)

Lead Assembly

"

31001741

Not Available

LEAD ASSEMBLY (BUZZER)

