


Magic Chef CYE3005AYW 02 - CABINET & FRONT PANEL

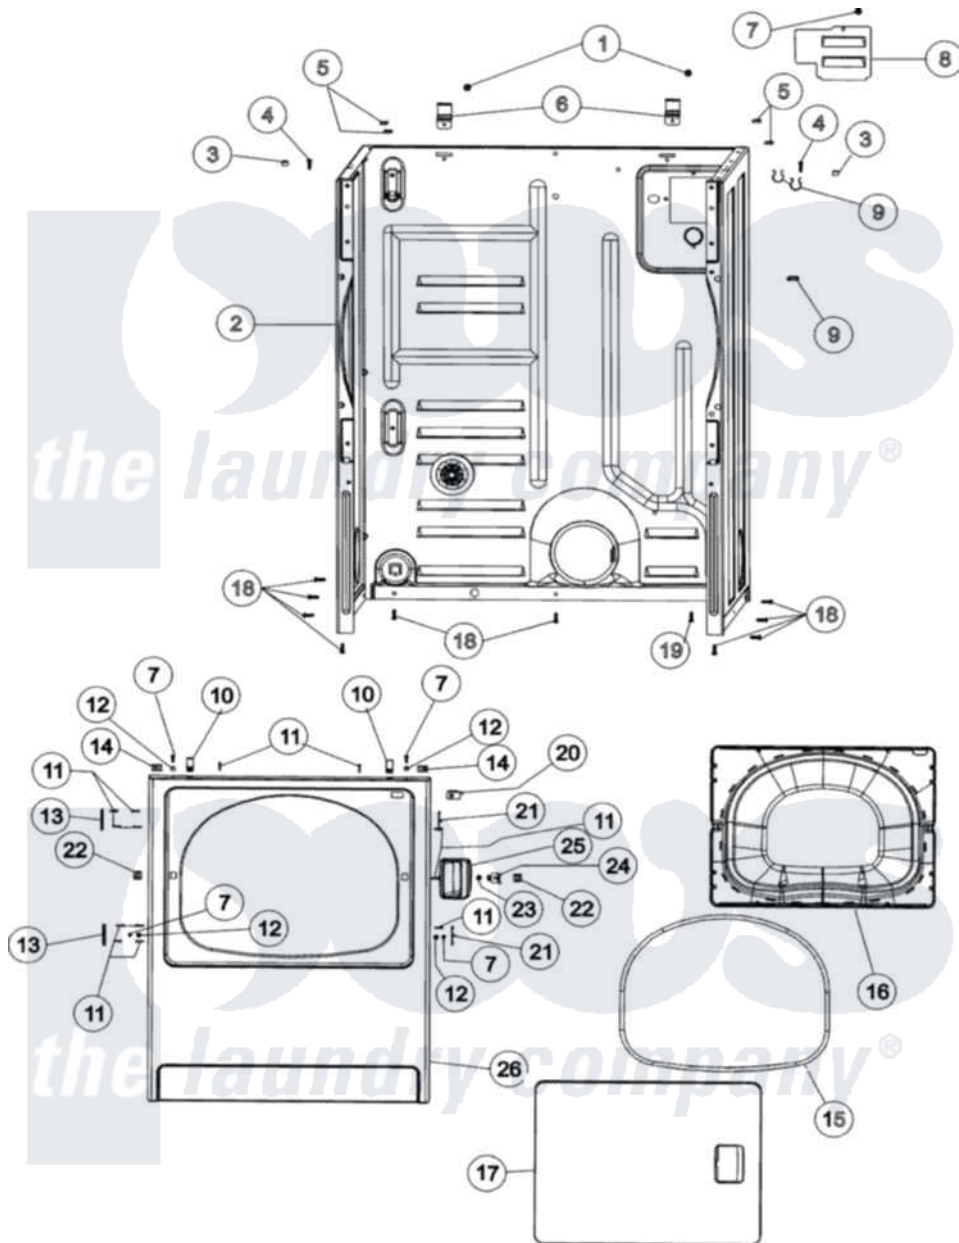

Magic Chef [Residential Magic Chef CYE3005AYW Dryer Parts](#) Parts Diagram 02 - CABINET & FRONT PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	503688			Screw, 10B-16 X .34 I
2	37001155	37001284		Cabinet As Pack
3	505187			Locator, Panel
4	32671	Y014874		Screw, Idler Arm And Sleeve
5	Y56128			Pad, Bumper
6	500003			Hinge, Top
7	32671	Y014874		Screw, Idler Arm And Sleeve
8	503293			Plate, Access Cover
9	504034			Clip, Wire
10	25-7220			Clip, Cabinet Top
11	37001030			Screw, No.8ab-16 x 3/4 Fh
12	505187			Locator, Panel
13	Y503676			Hinge, Door And Top
14	213280	204439		Screw And Fstner Assembly
15	504005	511056		Seal Front Panel
16	37001028			Seal And Liner, Assembly

17	37001029		Door, Dryer
18	27001200		Screw
19	20530		Screw, 10-24 x 3/8 Hex
20	Y504570	W10169313	Switch-Dor
21	503126		Plug, Hinge Hole
22	54660	LA-1003	Door Catch Kit
23	500039	510181	Strike Doormetal
24	40116201		Bracket, Door Strike
25	33001241		Handle, Door
26	37001154		Front Panel - White

