


# Magic Chef CYE3005AYW 03 - CONTROL PANEL & TOP

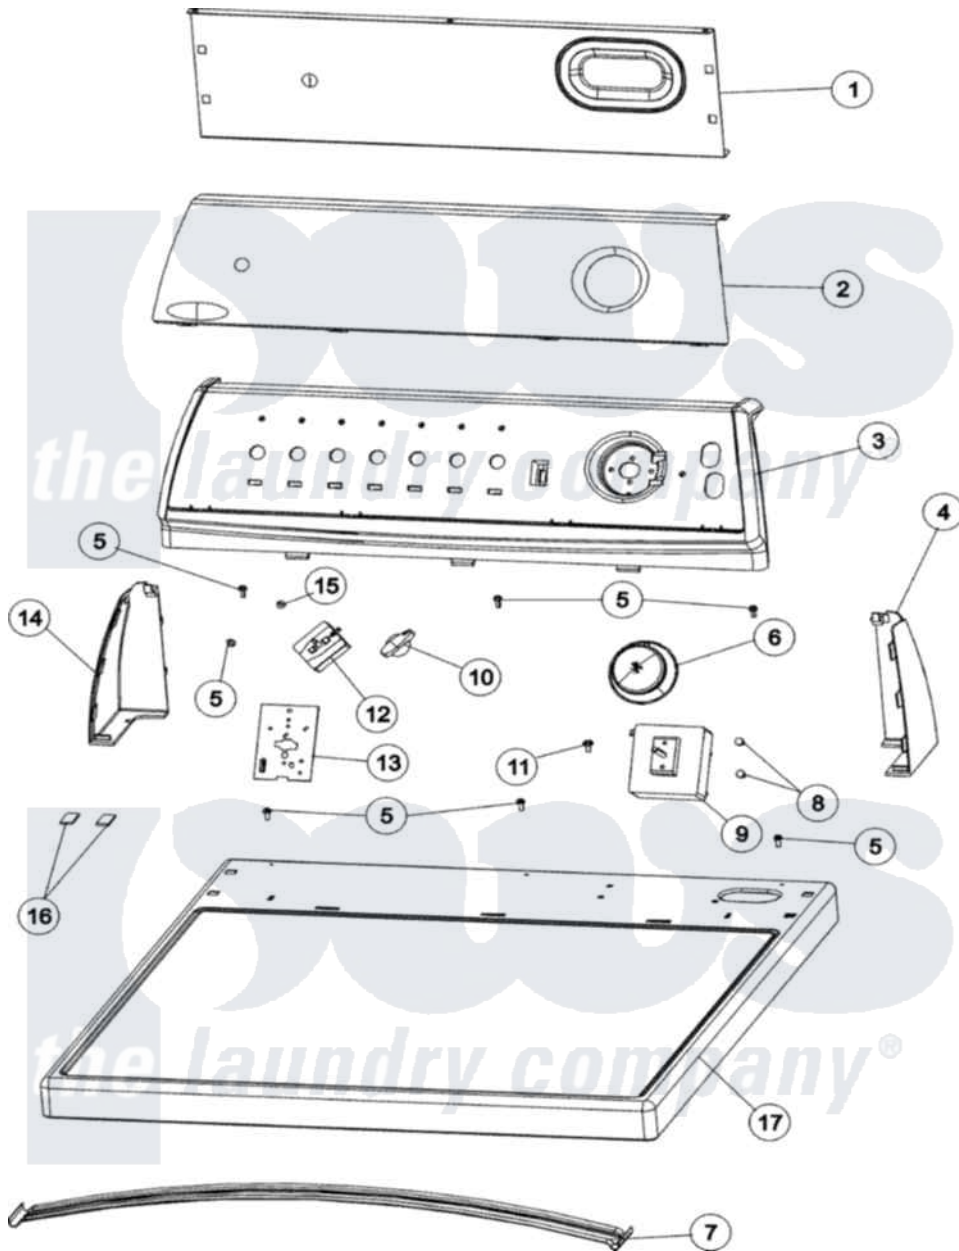

Magic Chef [Residential Magic Chef CYE3005AYW Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL & TOP  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">37001233</a>			Shield, Backguard
2	<a href="#">37001221</a>			Facia
3	<a href="#">21001552</a>			Frame , Control Panel
4	<a href="#">21001547</a>			Endcap, Panel
5	501086	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
6	<a href="#">31001388</a>			Knob/Skirt, Timer
7	56486		Not Available	BRACE, TOP
8	37001031	<a href="#">3370225</a>		Screw
9	<a href="#">37001240</a>			Timer - Dryer
10	<a href="#">21001544</a>			Knob, Selector
11	<a href="#">503688</a>			Screw, 10B-16 X .34 I
12	<a href="#">31001190</a>			Switch, Two Position Rotary
13	<a href="#">21001517</a>			Shield, Control
14	<a href="#">21001546</a>			Endcap, Panel
15	<a href="#">31260</a>			Screw, No.8 X 3/8 Ind H
16	500121	<a href="#">510189</a>		Pad Felt

