


Magic Chef CYE3005AZW 01 - BASE, HEATER & MOTOR

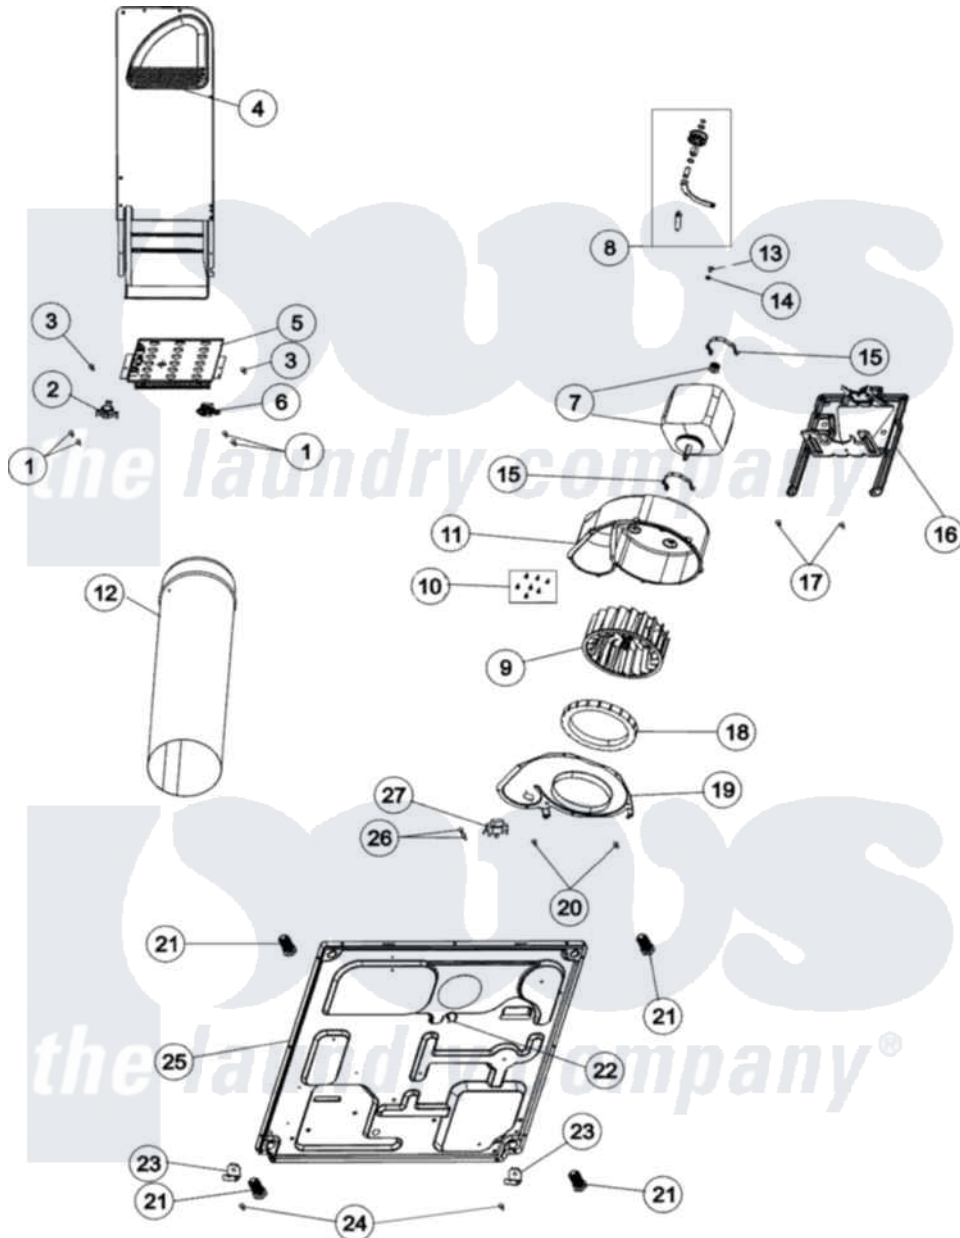

Magic Chef [Residential Magic Chef CYE3005AZW Dryer Parts](#) Parts Diagram 01 - BASE, HEATER & MOTOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	23222	3177991		Screw
2	Y62641	W10116735		Thermistor-Fix
3	503688			Screw, 10B-16 X .34 I
4	503605			Assembly, Heater Duct
5	61195	61927		Heater Assembly
6	40113801			Fuse, Thermal
7	2200376			Motor
8	37001287			Assembly, Idler Lever/Shaft/Pulley
9	56000	510139P		Assembly Blower Fan Package
10	31260			Screw, No.8 X 3/8 Ind H
11	56020			Housing, Blower
12	505518			Duct, Exhaust
13	500824			Screw, 1/4-20 Unc Hex
14	27001225			Nut, Jam Mid Lock 1/4-20
15	V58017	660658		Clamp, Motor Mounting

15	130047	000000	343481 685441
16	503613		Mount, Motor
17	27001200		Screw
18	37001119		Seal, Blower Housing
19	500078	511969P	Kit Blower Housing And Cover
20	503688		Screw, 10B-16 X .34 I
21	Y500101		Leg, Leveling
22	504034		Clip, Wire
23	37001145		Clip, Front Panel
24	27001200		Screw
25	37001156		Dryer Base
26	501086	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
27	37001136		Thermostat, Cycling 146F

