


Magic Chef CYE3005AZW 03 - CONTROL PANEL & TOP

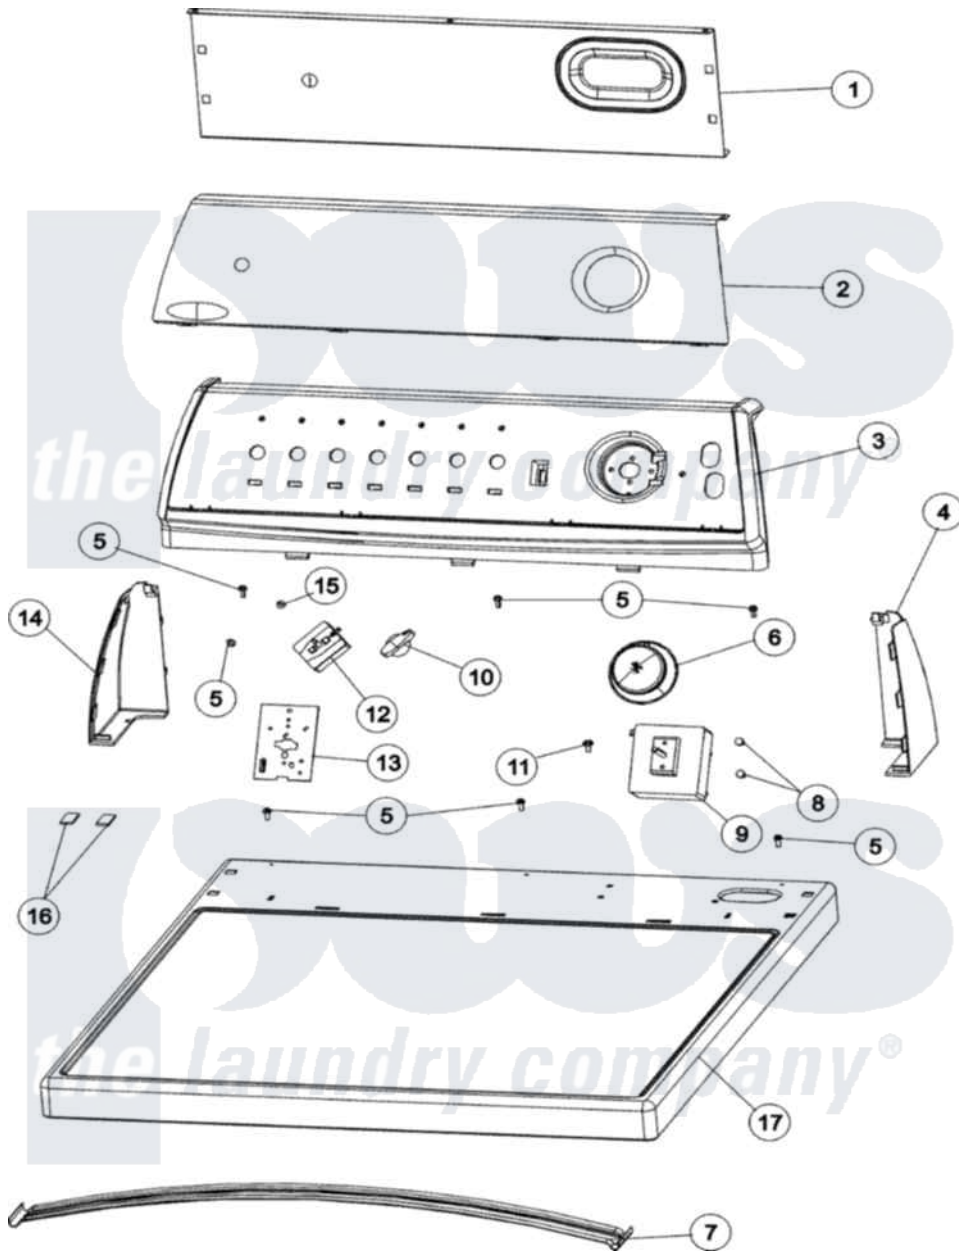

Magic Chef [Residential Magic Chef CYE3005AZW Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL & TOP
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	37001233			Shield, Backguard
2	37001221			Facia
3	21001552			Frame , Control Panel
4	21001547			Endcap, Panel
5	501086	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
6	31001388			Knob/Skirt, Timer
7	56486		Not Available	BRACE, TOP
8	37001031	3370225		Screw
9	37001240			Timer - Dryer
10	21001544			Knob, Selector
11	503688			Screw, 10B-16 X .34 I
12	31001190			Switch, Two Position Rotary
13	21001517			Shield, Control
14	21001546			Endcap, Panel
15	31260			Screw, No.8 X 3/8 Ind H
16	500121	510189		Pad Felt

