


# Magic Chef CYE4000AYW 02 - CONTROL PANEL

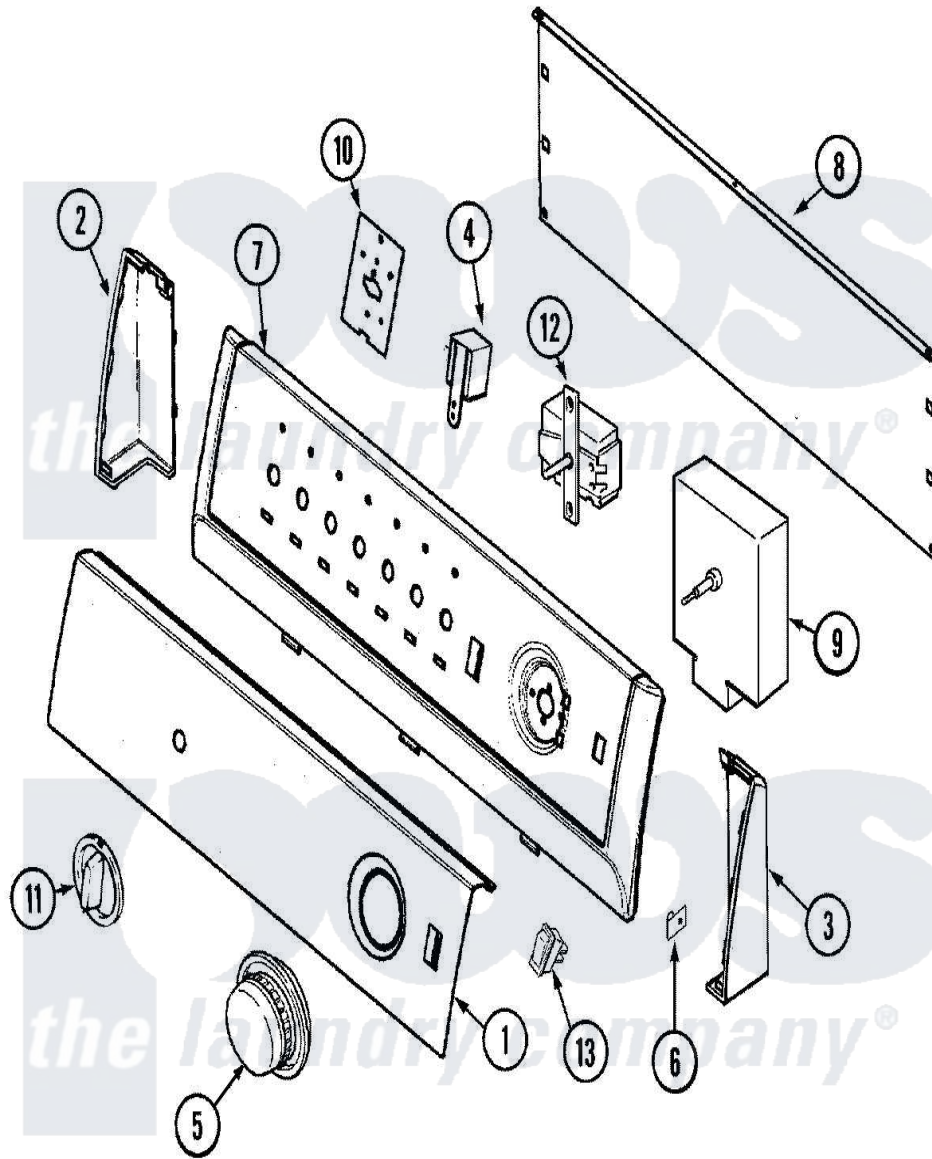

Magic Chef [Residential Magic Chef CYE4000AYW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">31001384</a>			Panel, Control
2	<a href="#">21001546</a>			Endcap, Panel
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
3	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">21001547</a>			Endcap, Panel
4	<a href="#">53-1639</a>			Buzzer Assembly
5	<a href="#">31001388</a>			Knob/Skirt, Timer
6	<a href="#">25-7851</a>			Speedclip, End Cap To Top
7	<a href="#">21001553</a>			Frame
8	<a href="#">21001527</a>			Shield, Rear
"	<a href="#">25-3457</a>			Screw, Sems
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1815	<a href="#">31001513</a>		Timer
"	63-6743	<a href="#">31001484</a>		Resistor Assembly

10	<a href="#">21001517</a>		Shield, Control
11	<a href="#">21001544</a>		Knob, Selector
12	31001348	<a href="#">31001449</a>	Switch, Selector
13	<a href="#">21001902</a>		Switch, Rocker
NI	16000327		Not Available
			GUIDE, QUICK REF. - MAYTAG
"	31001414		Not Available
			MANUAL, USE & CARE
"	31001460		Not Available
			MANUAL, USE & CARE (SPAN)
"	21001419		Not Available
			MANUAL, LAUNDERING TIPS

